EG

A/C IDLE—UP SPEED INSPECTION AND ADJUSTMENT

E0438-02

1. INITIAL CONDITIONS


(a) Engine at normal operating temperature
(b) Air cleaner installed
(c) All accessories switched OFF
(d) All vacuum lines properly connected
(e) Valve clearance set correctly
(f) Injection timing set correctly
(g) w/ PS:
Steering wheel at straight—ahead position
(h) Idle speed set correctly


2. CONNECT TACHOMETER

3. INSPECT AND ADJUST A/C IDLE—UP SPEED

(a) Start the engine.
(b) Turn the A/C switch ON, and set these position:
- Blower switch to HI
- Air intake control lever to RECIRCULATED AIR
- Air flow control lever to FACE
- Temperature control lever to COOL

(c) Check the idle—up speed.
A/C idle—up speed:
900 — 1,000 rpm

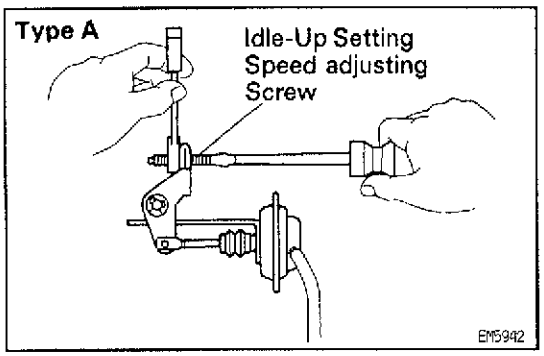

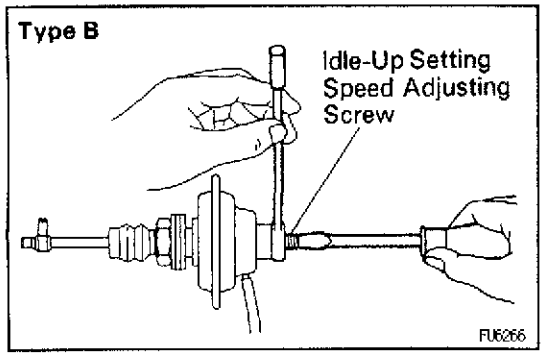

(d) Adjust the idle—up setting speed by turning the idle—up setting speed adjusting screw.
(e) Turn the A/C switch OFF, then ON again, and recheck the idle—up speed.