
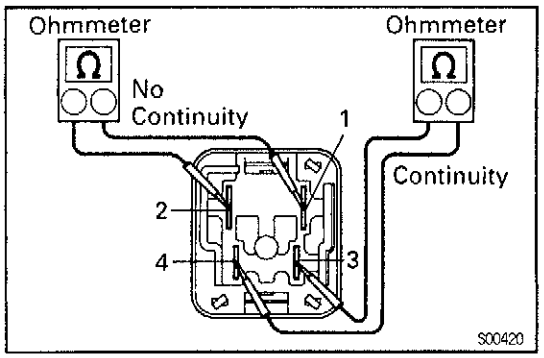


ST

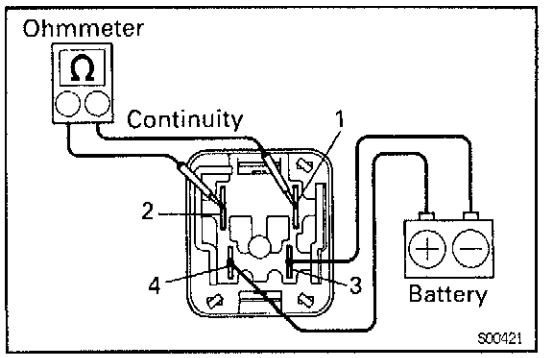

2. INSPECT STARTER RELAY

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is no continuity between terminals 1 and 2.
If there is continuity, replace the relay.

(b) Check that there is continuity between terminals 3 and 4.
If there is no continuity, replace the relay.

B. Inspect relay operation

(a) Apply battery voltage across terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.

3. REINSTALL STARTER RELAY


STARTER RELAY (LN, LY)

STARTER RELAY INSPECTION

ST007-01

1. REMOVE STARTER RELAY

LOCATION: See relay locations in Electrical Wiring Diagram.

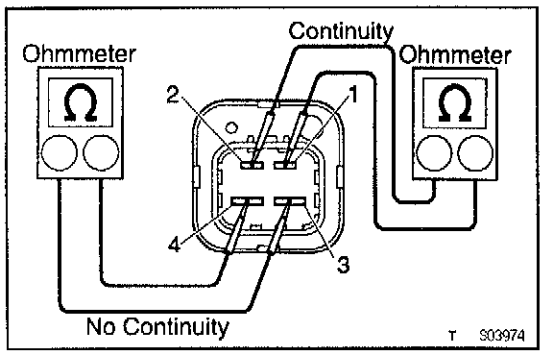


2. INSPECT STARTER RELAY

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is no continuity between terminals 1 and 2.
If there is continuity, replace the relay.

(b) Check that there is continuity between terminals 3 and 4.
If there is no continuity, replace the relay.

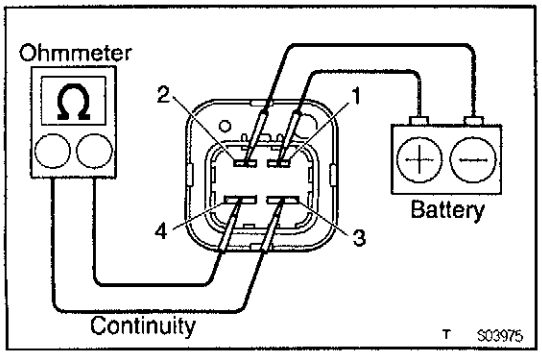

B. Inspect relay operation

(a) Apply battery voltage across terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.

3. REINSTALL STARTER RELAY