
EG

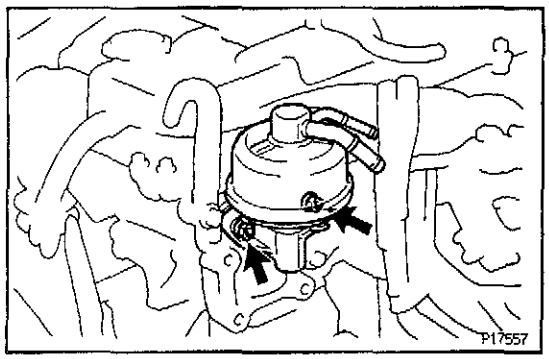


FUEL PUMP INSTALLATION

EG787-01

1. **INSTALL FUEL PUMP**

(a) Install a new insulator to the cylinder head.

(b) Install the fuel pump with the 2 nuts.
Torque: 28 N·m (290 kgf·cm, 21 ft·lbf)

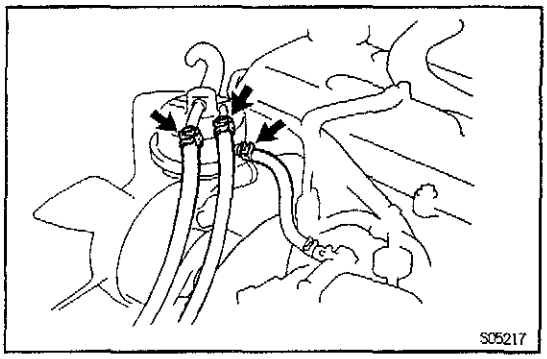

2. **CONNECT FUEL HOSES TO FUEL PUMP**
3. **START ENGINE AND CHECK FOR LEAKS**

SERVICE SPECIFICATIONS

SERVICE DATA

EGOLEX-05

Carburetor	Float level (Raised position)	9.8 mm (0.386 in.)
	Float level (Lowered position)	0.9 – 1.1 mm (0.035–0.043 in.)
	Secondary throttle valve full open angle (Primary)	90° from horizontal
	Secondary throttle valve full open angle (Secondary)	90° from horizontal
	Secondary touch angle	50° from horizontal
	Fast idle angle (Pre–setting)	16° from horizontal
	Unloder angle	25° from horizontal
	Choke breaker angle	22 – 33° from horizontal
	Throttle positioner angle	9.8° from horizontal
	Idle speed angle (Pre–setting)	5.5° from horizontal
	Idle mixture adjusting screw (Pre–setting)	Screw out approx. 2 1/4 turns
	Choke heater resistance	1.7 – 1.9 Ω
	OVCV resistance	32 – 38 Ω

TORQUE SPECIFICATIONS

EGOLUY-05

Part tightened	N·m	kgf·cm	ft·lbf
Carburetor x Intake manifold	13	130	9
Fuel pump x Cylinder head	28	290	21