

FUEL PRESSURE REGULATOR

COMPONENTS FOR REMOVAL AND INSTALLATION

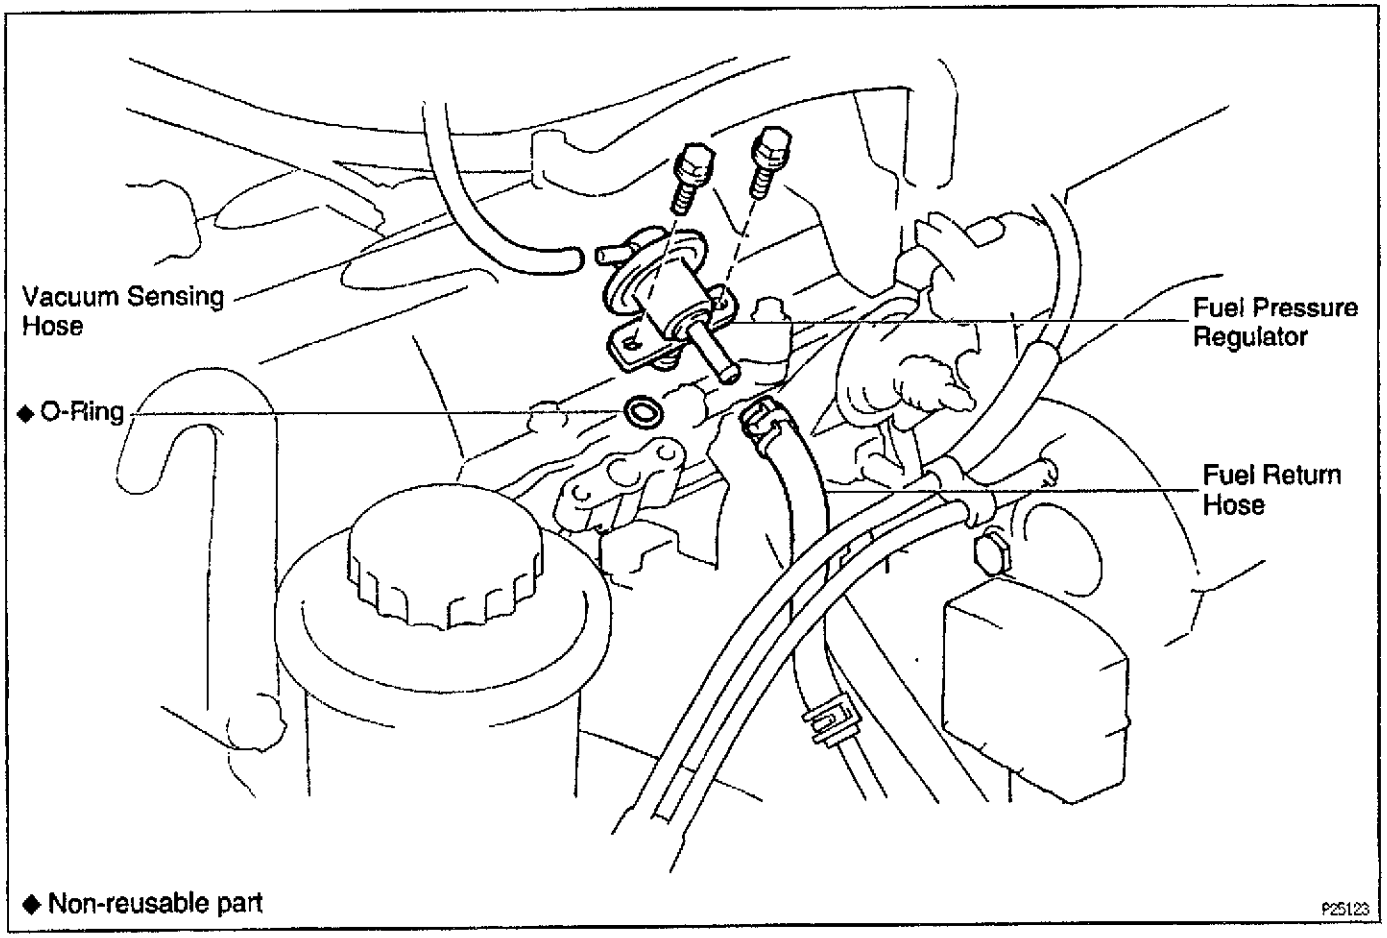

FUEL PRESSURE REGULATOR REMOVAL

1. **DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR**
2. **DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR**
   HINT: Put a suitable container or shop towel under the pressure regulator.

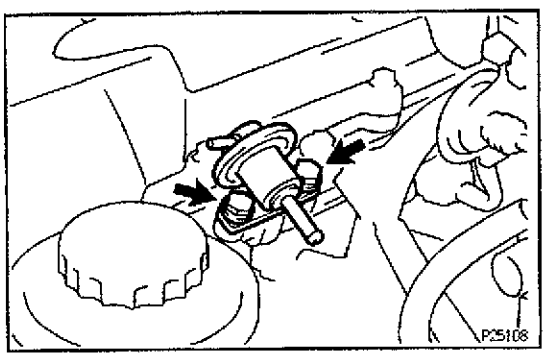

3. **REMOVE FUEL PRESSURE REGULATOR**
   (a) Remove the 2 bolts and fuel pressure regulator.
   Torque: 8.8 N·m (90 kgf·cm, 78 in.·lbf)
   (b) Remove the O—ring.
   INSTALLATION HINT: Use a new O—ring.