


AIR FLOW METER

COMPONENTS FOR REMOVAL AND INSTALLATION

E66YJ-14

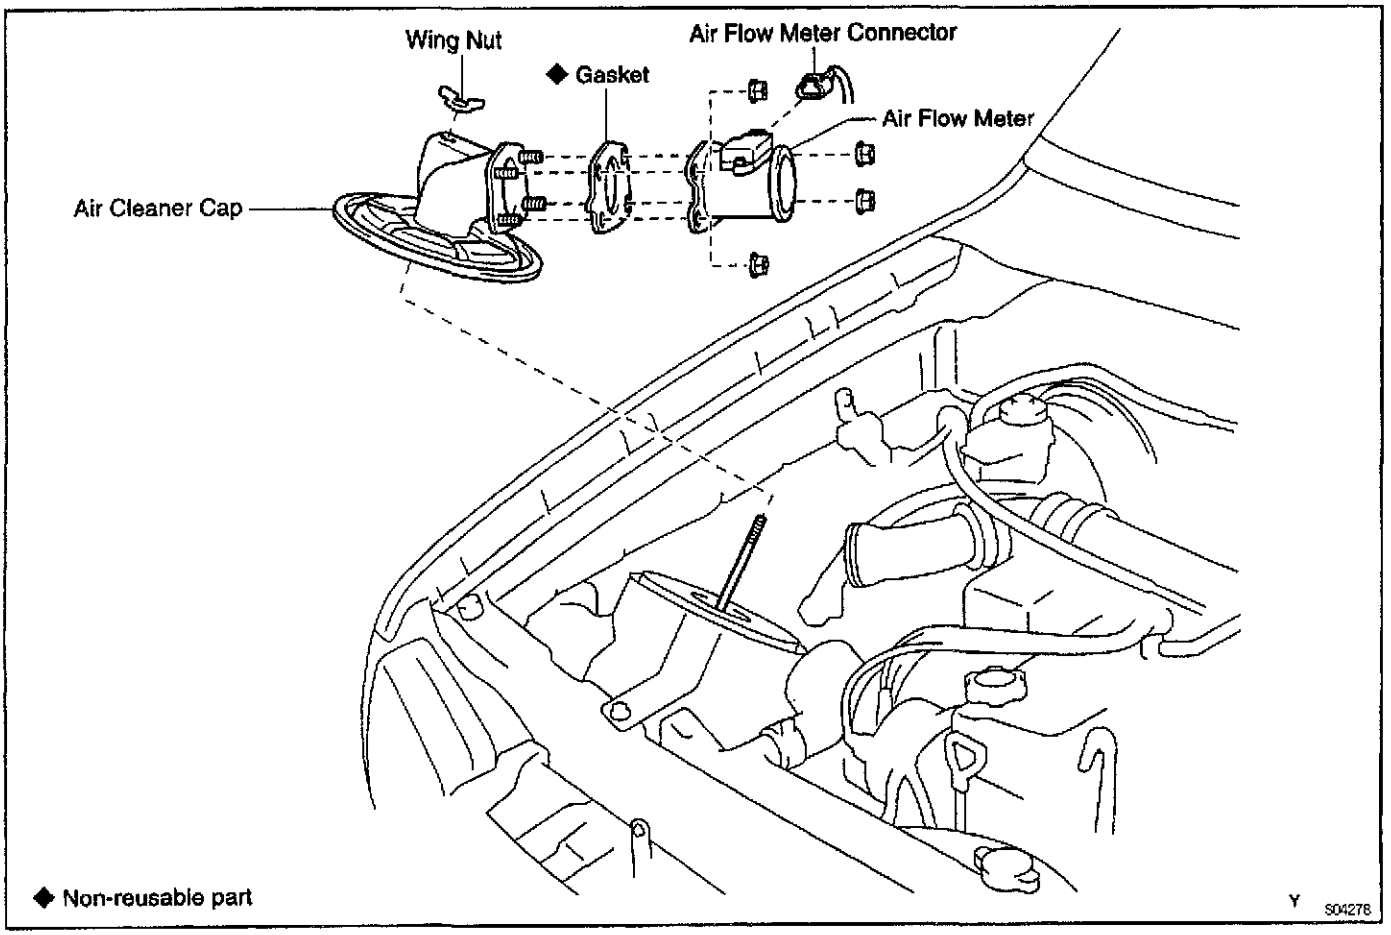

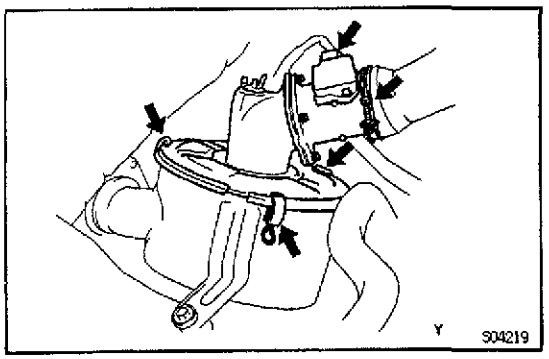

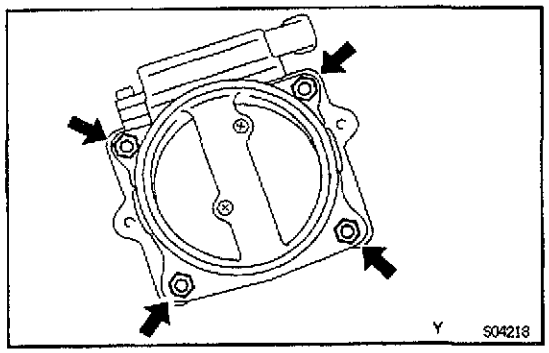

EG59B-06

AIR FLOW METER REMOVAL

1. **REMOVE AIR CLEANER CAP WITH AIR FLOW METER**

(a) Disconnect the air flow meter connector and wire clamp.

(b) Disconnect the air hose from the air cleaner cap.

(c) Loosen the 3 clips, and remove the air cleaner cap together with the air flow meter.

2. **REMOVE AIR FLOW METER FROM AIR CLEANER CAP**

Remove the 4 nuts, air flow meter and gasket.

Torque: 8.5 N·m (85 kgf·cm, 74 in.·lbf)

INSTALLATION HINT: Use a new gasket to the air flow meter.