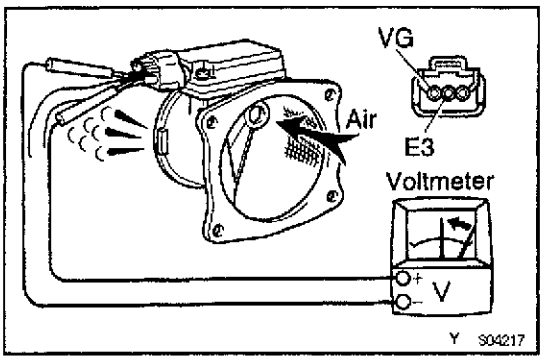


AIR FLOW METER INSPECTION

EG589-05

INSPECT AIR FLOW METER OPERATION


(a) Connect the negative (−) terminal cable to the battery.
(b) Turn the ignition switch ON.
(c) Connect the air flow meter connector.
(d) Using a voltmeter, connect the positive (+) tester probe to terminal VG, and negative (−) tester probe to terminal E3.
(e) Blow air into the air flow meter, and check that the voltage fluctuates.
If operation is not as specified, replace the air flow meter.
(f) Turn the ignition switch LOCK.
(g) Disconnect the negative (−) terminal cable from the battery.
(h) Disconnect the air flow meter connector.

EG

AIR FLOW METER INSTALLATION

EG795-02

Installation is in the reverse order of removal.

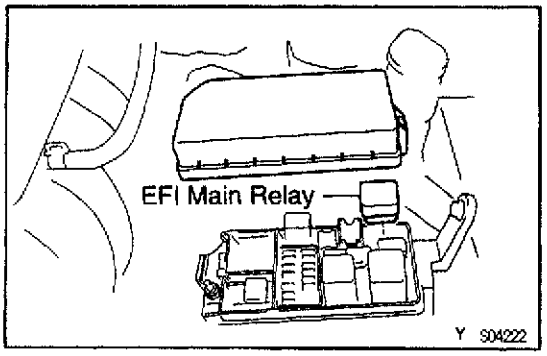


EFI MAIN RELAY

EFI MAIN RELAY (Marking:EFI)

EG654-04

INSPECTION

1. REMOVE EFI MAIN RELAY

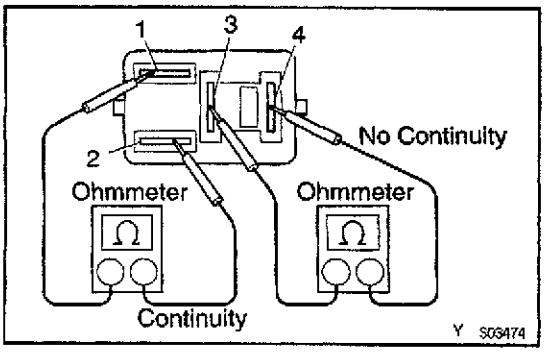

2. INSPECT EFI MAIN RELAY

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.
(b) Check that there is no continuity between terminals 3 and 4.
If there is continuity, replace the relay.