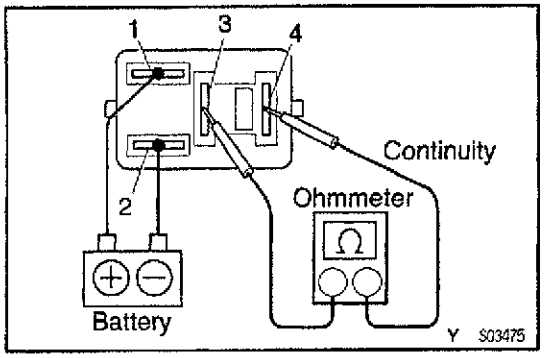


B. Inspect relay operation


(a) Apply battery positive voltage across terminals 1 and 2.


(b) Using an ohmmeter, check that there is continuity between terminals 3 and 4.
If operation is not as specified, replace the relay.

3. REINSTALL EFI MAIN RELAY

CIRCUIT OPENING RELAY

COMPONENTS FOR REMOVAL AND INSTALLATION

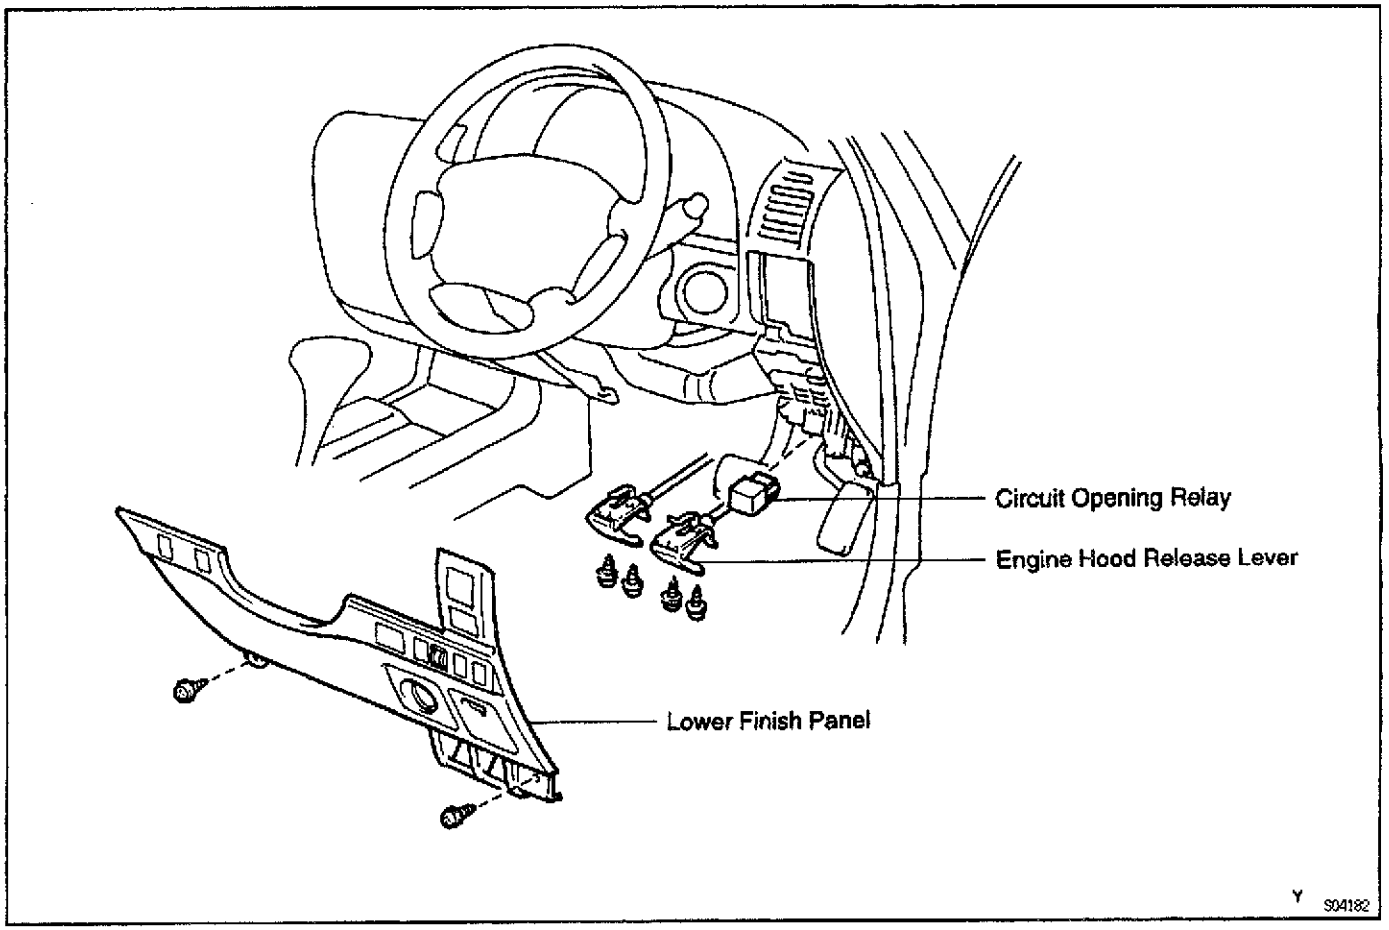

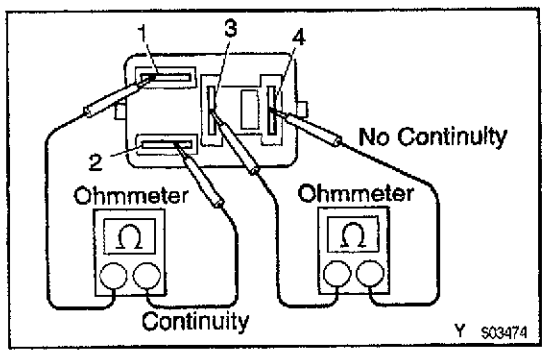

CIRCUIT OPENING RELAY INSPECTION

1. REMOVE LOWER FINISH PANEL

2. REMOVE CIRCUIT OPENING RELAY

3. INSPECT CIRCUIT OPENING RELAY

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.