
(b) Check that there is no continuity between terminals 3 and 4.
If there is continuity, replace the relay.

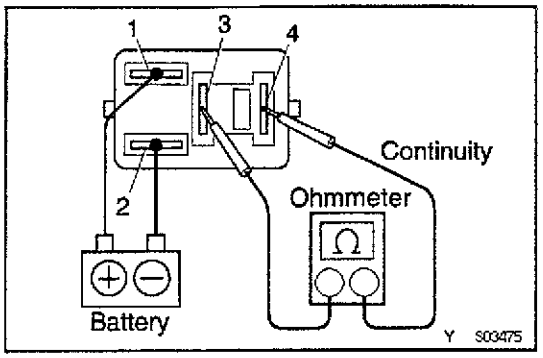


B. Inspect relay operation

(a) Apply battery positive voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 4.
If operation is not as specified, replace the relay.

4. REINSTALL CIRCUIT OPENING RELAY

5. REINSTALL LOWER FINISH PANEL

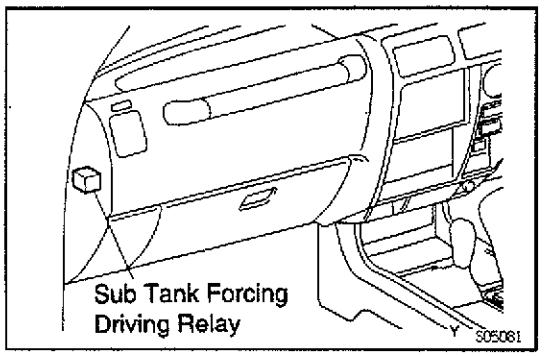


SUB TANK FORCING DRIVING RELAY

SUB TANK FORCING DRIVING RELAY E0664-05

INSPECTION


1. REMOVE SUB TANK FORCING DRIVING RELAY

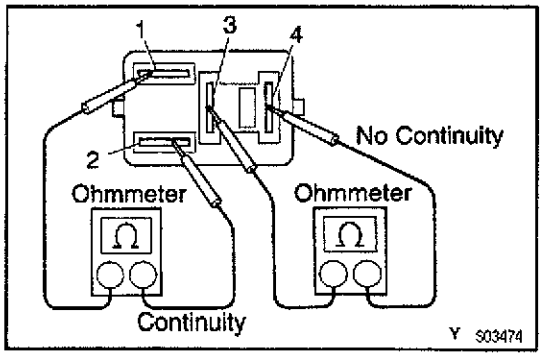

2. INSPECT SUB TANK FORCING DRIVING RELAY

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 4.
If there is continuity, replace the relay.

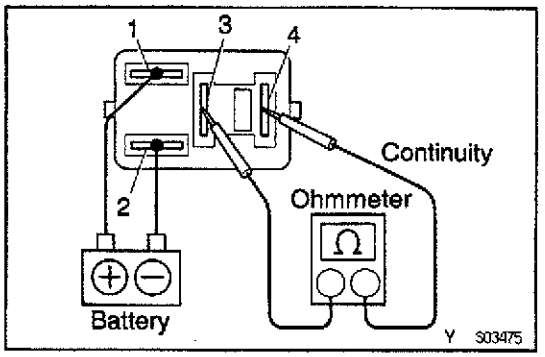

(c) Apply battery positive voltage across terminals 1 and 2.

(d) Using an ohmmeter, check that there is continuity between terminals 3 and 4.
If operation is not as specified, replace the relay.

3. REINSTALL SUB TANK FORCING DRIVING RELAY