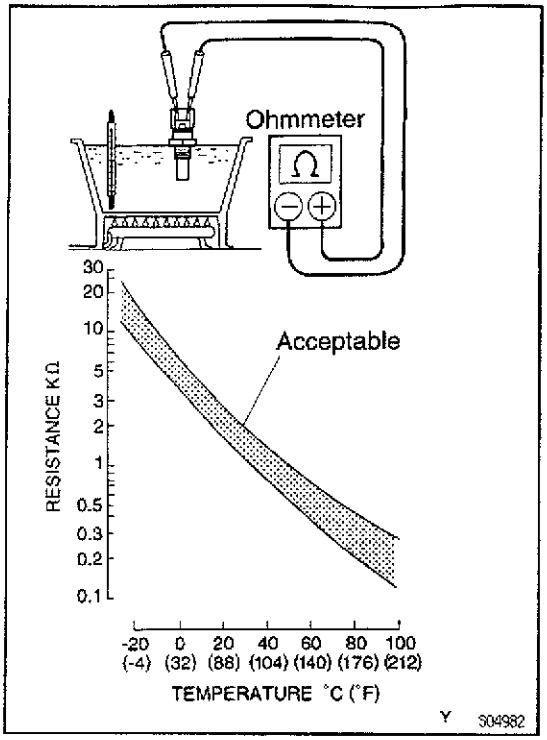


3. INSPECT WATER TEMPERATURE SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Refer to the chart graph

If the resistance is not as specified, replace the water temperature sensor.

4. REINSTALL WATER TEMPERATURE SENSOR

(a) Using a 19 mm deep socket wrench, install the water temperature sensor and gasket.


Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

(b) Connect the water temperature sensor connector.

(c) Install the engine wire protector to the 3 brackets.

5. REFILL ENGINE COOLANT

EG

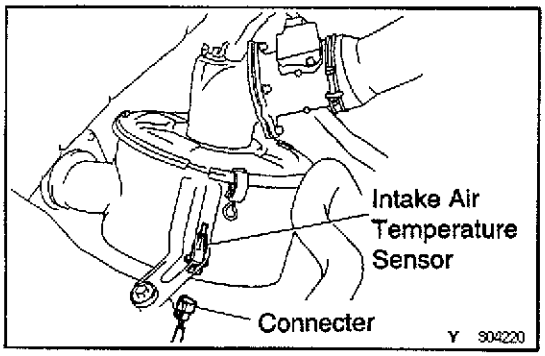


INTAKE AIR TEMPERATURE SENSOR

INTAKE AIR TEMP. SENSOR INSPECTION

EG1AX-00

1. REMOVE INTAKE AIR TEMP. SENCOR

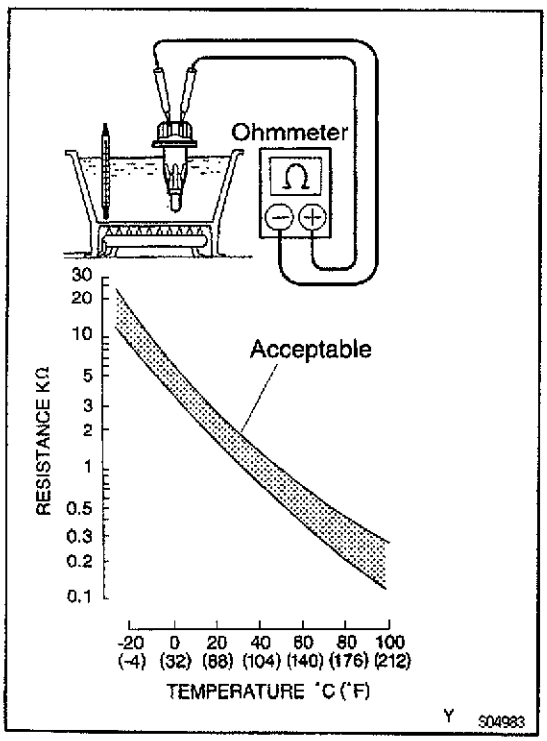

2. INSPECT INTAKE AIR TEMP. SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance:

Refer to the chart graph

If the resistance is not as specified, replace the intake air temp. sensor.

3. REINSTALL INTAKE AIR TEMP. SENSOR