
THERMOSTAT

COMPONENTS FOR REMOVAL AND INSTALLATION

EG1BD-1J

EG

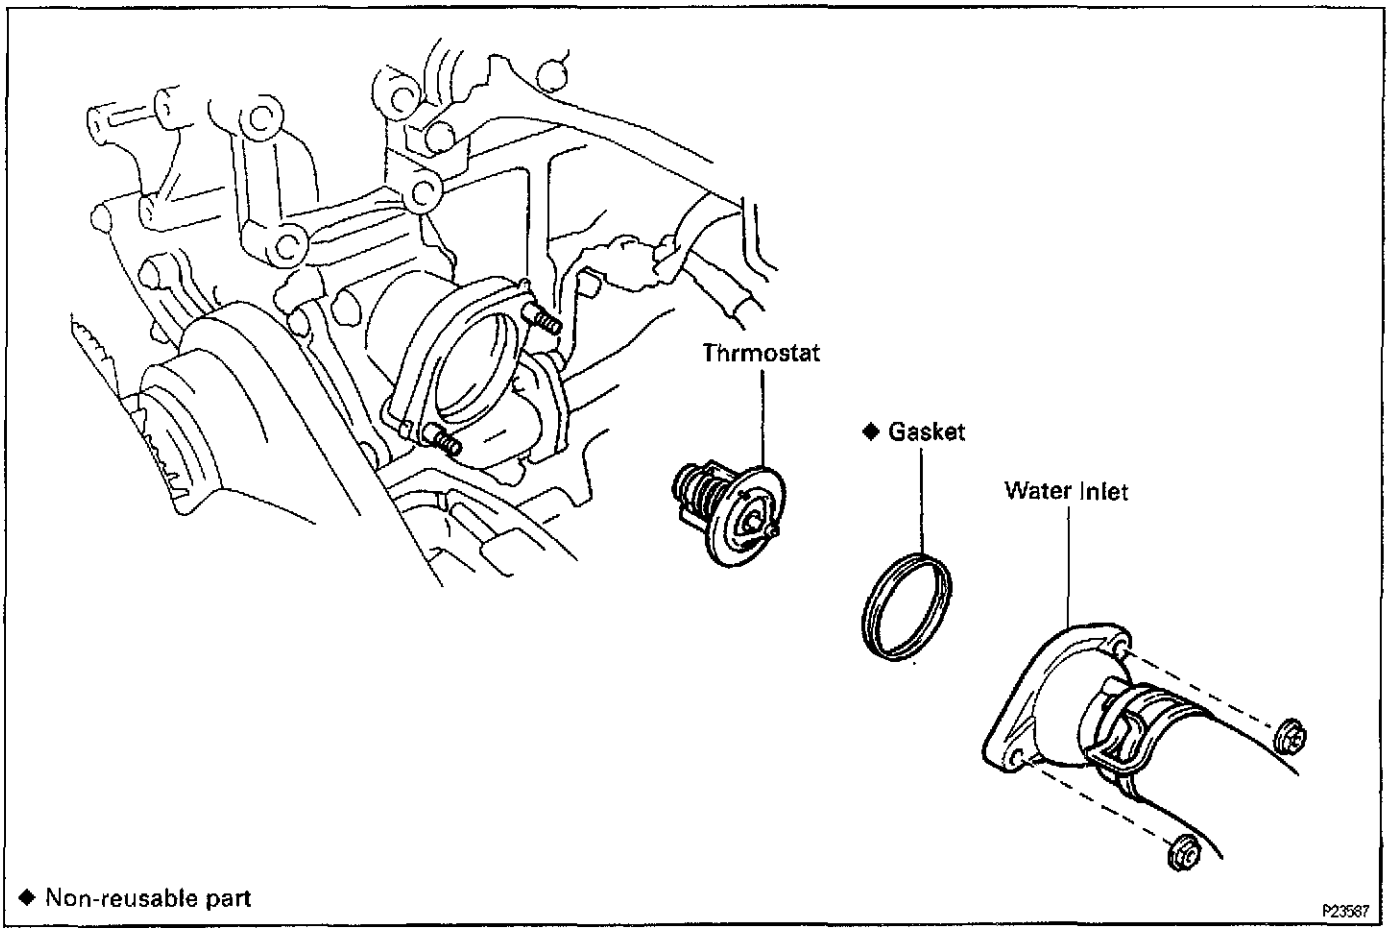

THERMOSTAT REMOVAL

EG7D5-01

HINT: Removal of the thermostat would have an adverse effect, causing a lowering of cooling efficiency. Do not remove the thermostat, even if the engine tends to overheat.

1. **DRAIN ENGINE COOLANT**
2. **DISCONNECT WATER INLET WITH LOWER RADIATOR HOSE, AND REMOVE THERMOSTAT**

(a) Remove the 2 nuts holding the water inlet to the inlet housing, and disconnect the water inlet from the inlet housing.

(b) Remove the thermostat.

(c) Remove the gasket from the thermostat.