
OIL COOLER


EG20M-09

COMPONENTS FOR REMOVAL AND INSTALLATION

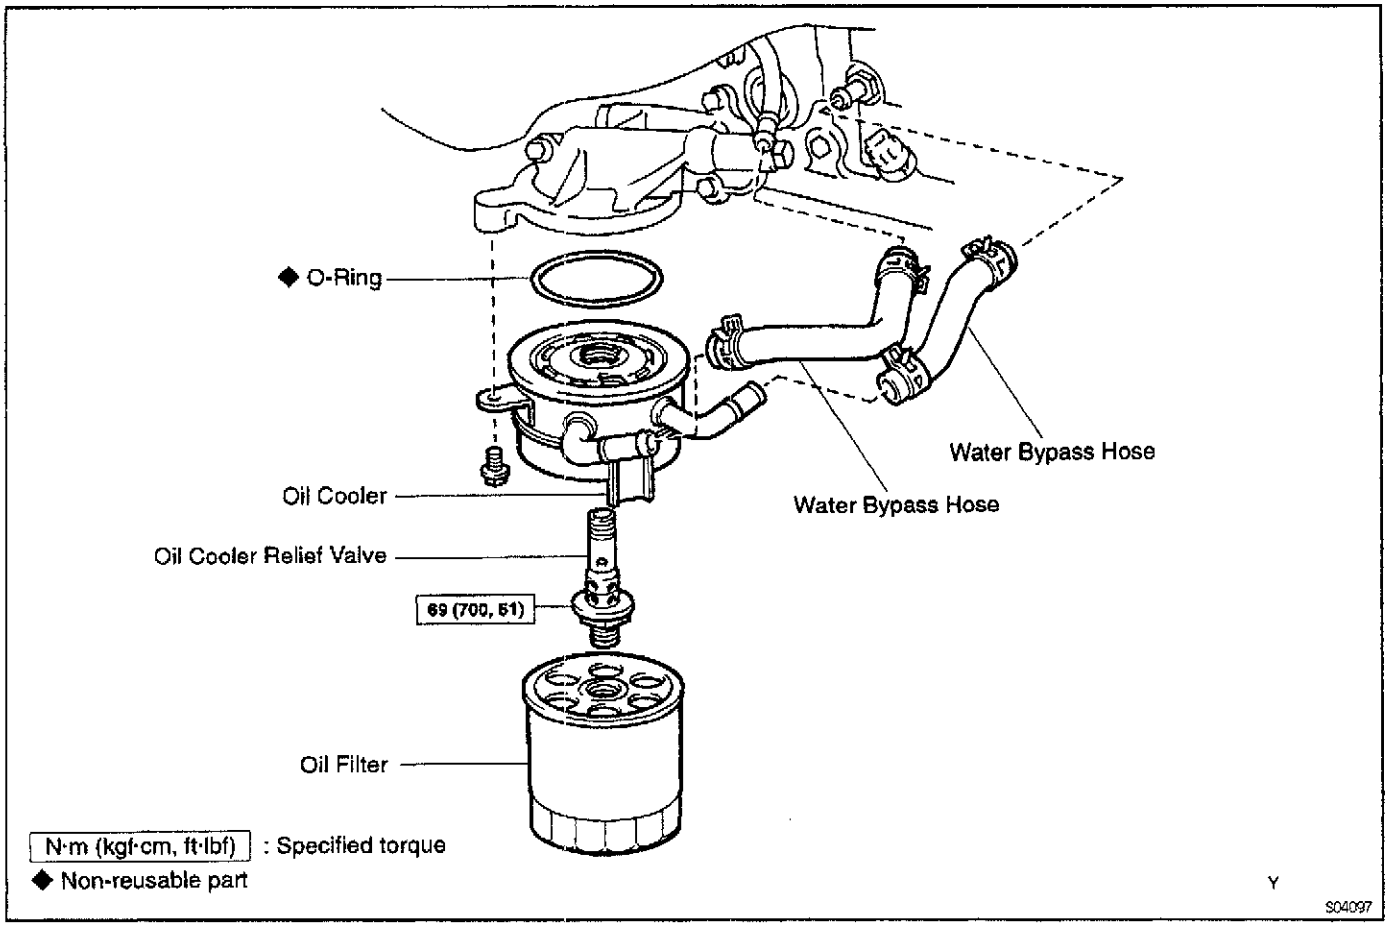


EG795-01

OIL COOLER REMOVAL

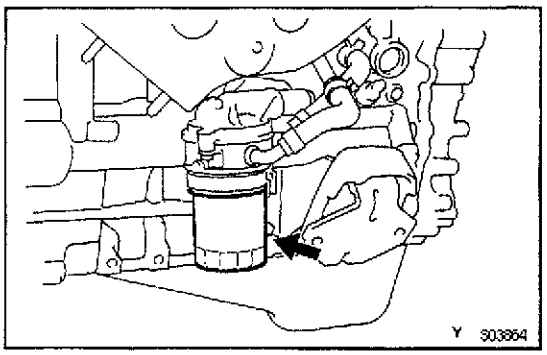

1. **DRAIN ENGINE COOLANT**
2. **REMOVE OIL FILTER**
   SST 09228–07501

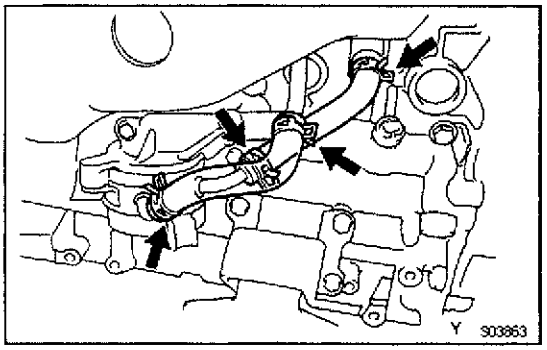

3. **DISCONNECT OIL COOLER HOSES**
   Disconnect the oil cooler hoses.