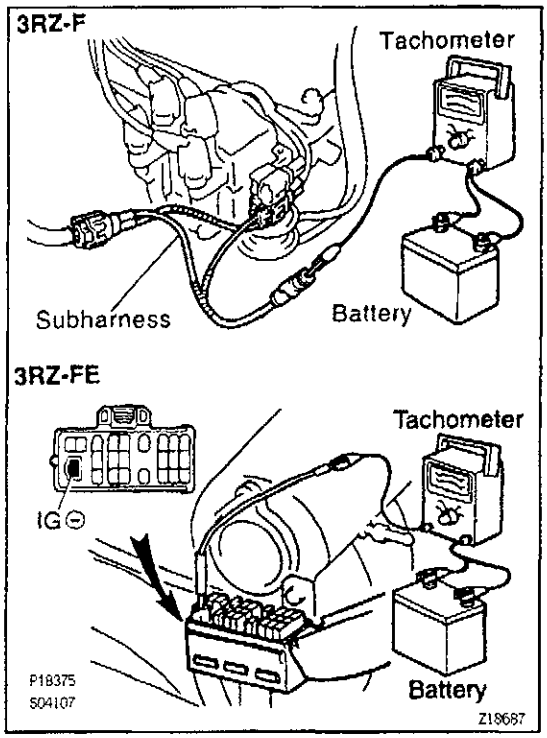


PRECAUTION

IG003-01

1. **Do not leave the ignition switch on for more than 10 minutes if the engine does not start.**
2. **3RZ–F:**
   With a tachometer connected to the system, disconnect the distributor connector (for negative (–) terminal of ignition coil). Then connect the subharness to the distributor. Connect the test probe of a tester to the subharness form the distributor.
   3RZ–FE:
   With a tachometer connected to the system, connect the tester probe of the tachometer to terminal IG⊖ of the check connector.
3. **As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.**
4. **NEVER allow the tachometer terminals to touch ground as it could result in damage to the igniter and/or ignition coil.**
5. **Do not disconnect the battery while the engine is running.**
6. **Check that the igniter is properly grounded to the body.**

PREPARATION

RECOMMENDED TOOLS

IG00S-01

	09082–00040	TOYOTA Electrical Tester.	
	09200–00010	Engine Adjust Kit .	

EQUIPMENT

IG00T-15

Spark plug cleaner	

SSM (SPECIAL SERVICE MATERIALS)

IG00U-01

08826–00080	Seal Packing Black or equivalent (FIPG)	Ignition coil
08833–00070	Adhesive 1324, THREE BOND 1324 or equivalent	Signal generator (3RZ–F)