FUEL FILTER


FU00D-01

REPLACEMENT

1. REMOVE FUEL FILTER ASSEMBLY FROM FUEL FILTER SUPPORT

2. REPLACE FUEL FILTER

(a) Loosen the drain plug, and drain the fuel from the fuel filter.

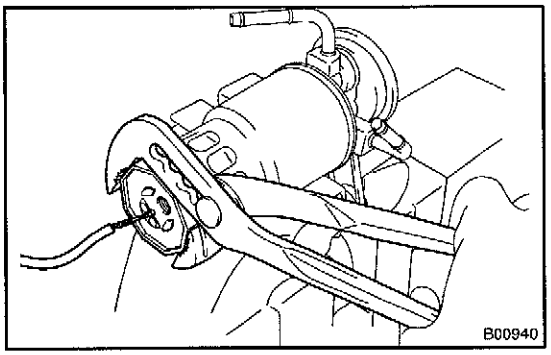


(b) Mount the fuel filter cap in a soft jaw vise.

(c) Using pliers, remove the fuel filter warning switch and O–ring.


NOTICE:

Be careful not to damage the warning switch.

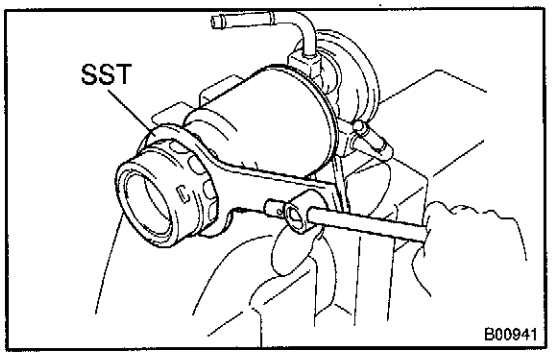

(d) Using SST, remove the fuel filter.

SST 09228 – 64030 for Europe
09228 – 64040 for Except Europe

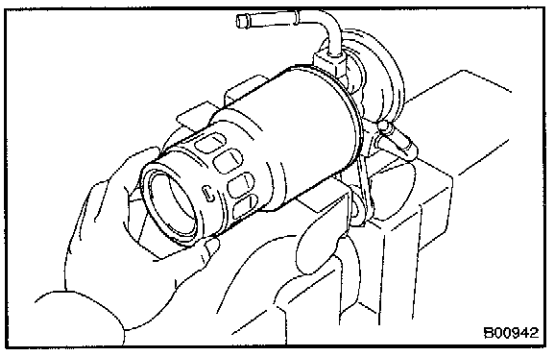

(e) Install a new fuel filter.

(1) Check and clean the fuel filter installation surface.

(2) Apply fuel to the gasket of a new fuel filter.

(3) Lightly screw the fuel filter into place, and tighten it until the gasket comes into contact with the seat.


(4) Tighten it additional 3/4 turn by hand.

(f) Install the fuel filter warning switch to the fuel filter.

(1) Install a new O–ring to the warning switch.

(2) Apply fuel to the O–ring of the warning switch.

(3) Install the warning switch to the fuel filter by hand.

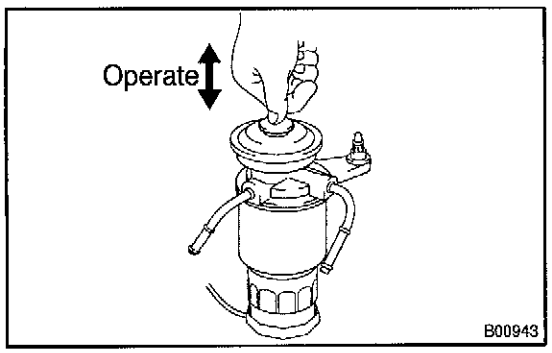

3. REINSTALL FUEL FILTER ASSEMBLY TO FUEL FILTER SUPPORT

4. REFILL FUEL FILTER WITH FUEL

Operate the hand pump until you feel more resistance.

5. START ENGINE AND CHECK FOR FUEL LEAKS