



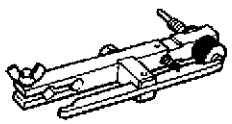



ENGINE MECHANICAL

PP0DG-01

SST (Special Service Tools)

	09222–54011	Connecting Rod Bushing Remover & Replacer	
	(09222–03016)	Remover & Replacer	2L–T, 3L, 5L
	(09222–03021)	Guide	2L–T, 3L, 5L
	(09222–03026)	Base	2L–T, 3L, 5L
	09222–64012	Connecting Rod Bushing Remover & Replacer	
	(09222–02022)	Remover & Replacer	2L
	(09222–02031)	Guide	2L
	(09222–02041)	Base	2L
	09275–54011	Plunger Stroke Measuring Tool	
	09275–54020	Maximum Speed Adjusting Screw Lock Nut Wrench	2L–T, w/ HAC
	09992–00025	Cylinder Compression Check Gauge Set	
	(09992–00121)	No. 4 Attachment	

PP

 (09992–00211) Gauge Assy	

PP0DH-01

RECOMMENDED TOOLS

	09082–00040	TOYOTA Electrical Tester.	VSV for intake sutter (5L)
	09200–00010	Engine Adjust Kit .	

PP0DI-01

EQUIPMENT

Caliper gauge	
Cylinder gauge	
Dial indicator	
Engine tune–up tester	
Micrometer	
Pin hole grinder	
Piston ring expander	
Plastigage	
Round file	
Torque wrench	
Vacuum gauge	