
STARTER RELAY

ST02F-01

INSPECTION

1. REMOVE STARTER RELAY

LOCATION: See relay locations in Electrical Wiring Diagram.

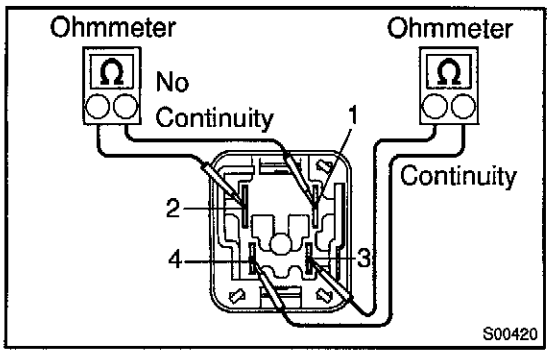

2. INSPECT STARTER RELAY


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

(2) Check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

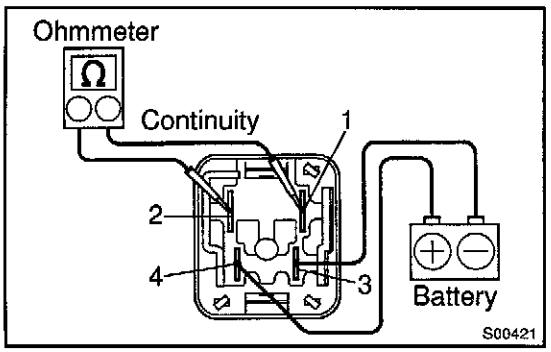

(b) Inspect the relay operation.

(1) Apply battery voltage across terminals 3 and 4.

(2) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

3. REINSTALL STARTER RELAY