
ENGINE (2RZ–FE, 3RZ–FE)

HOW TO PROCEED WITH TROUBLESHOOTING

DI1I4-01

When using hand–held tester, troubleshooting in accordance with the procedure on the following page.

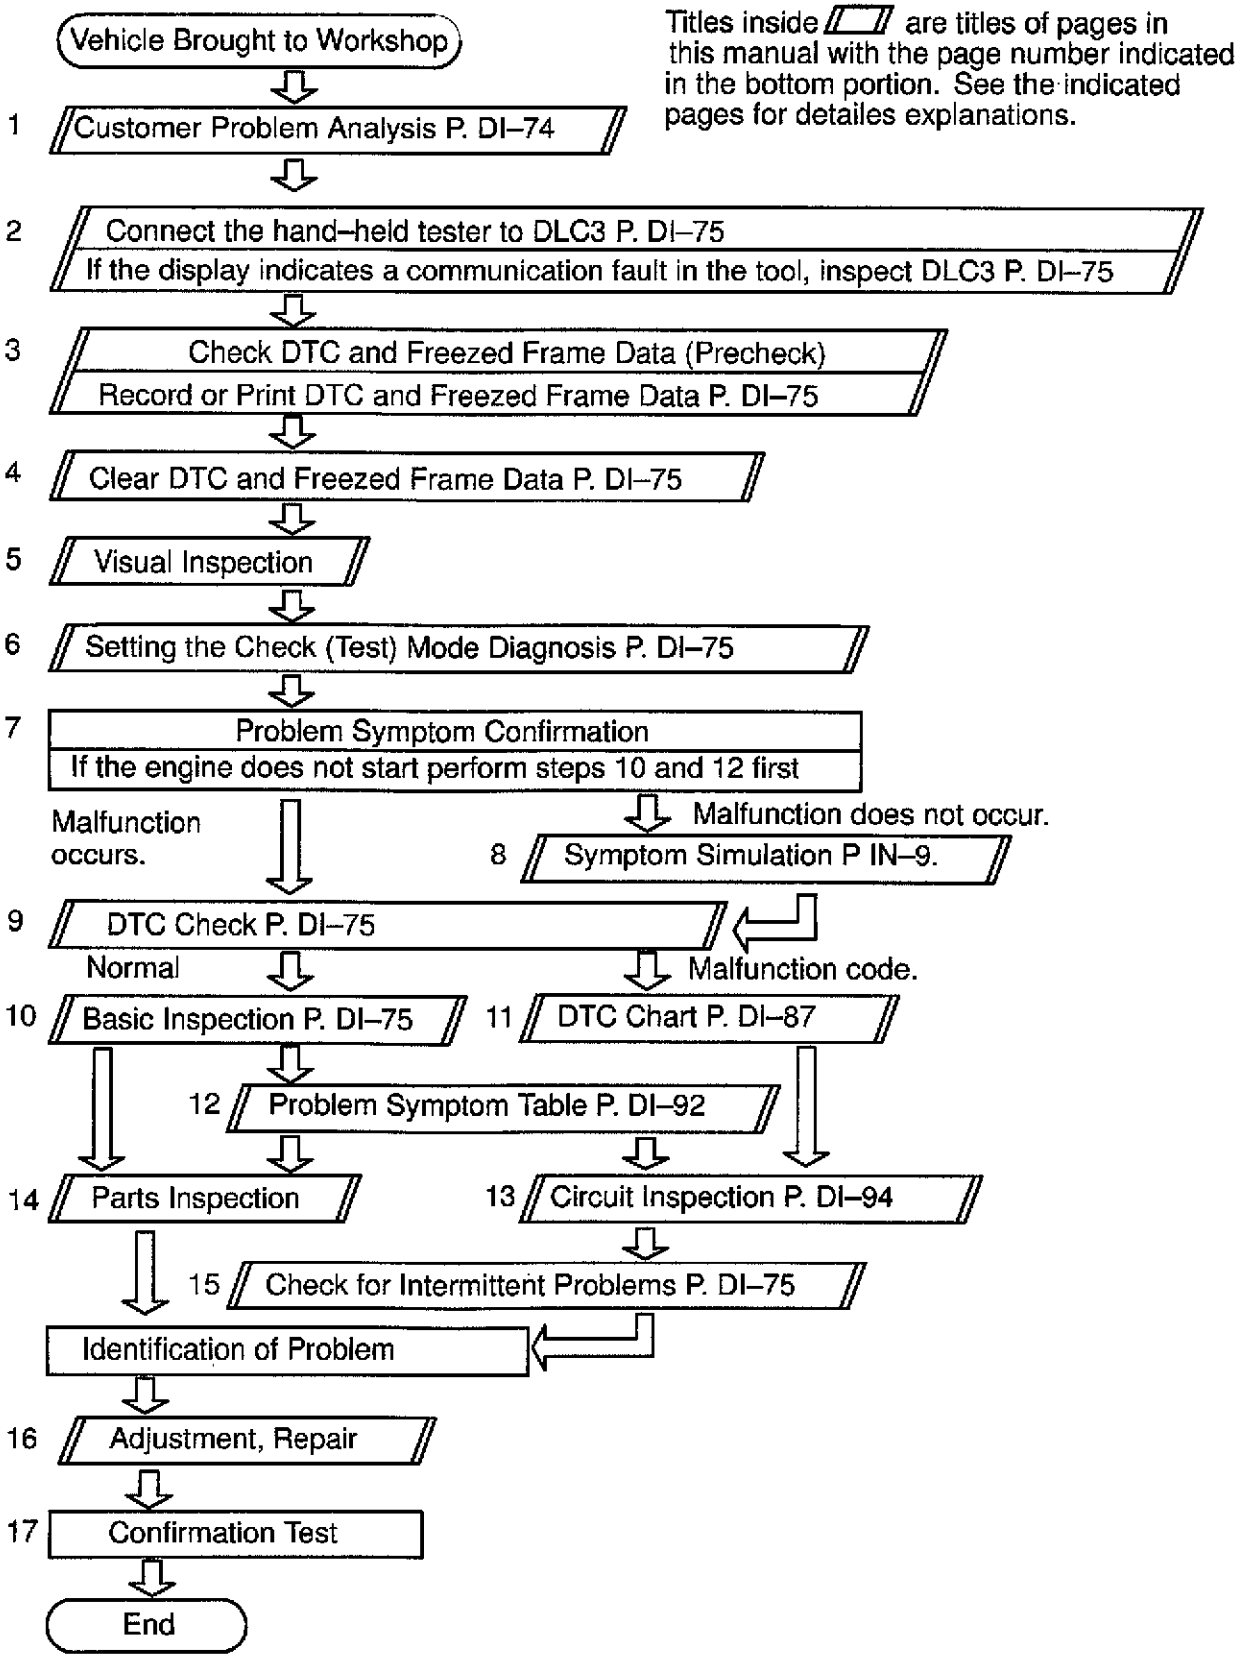

When not using hand–held tester, troubleshooting in accordance with the procedure on the following pages.

