
CYLINDER HEAD(3RZ–FE)

COMPONENTS


EM09A–01

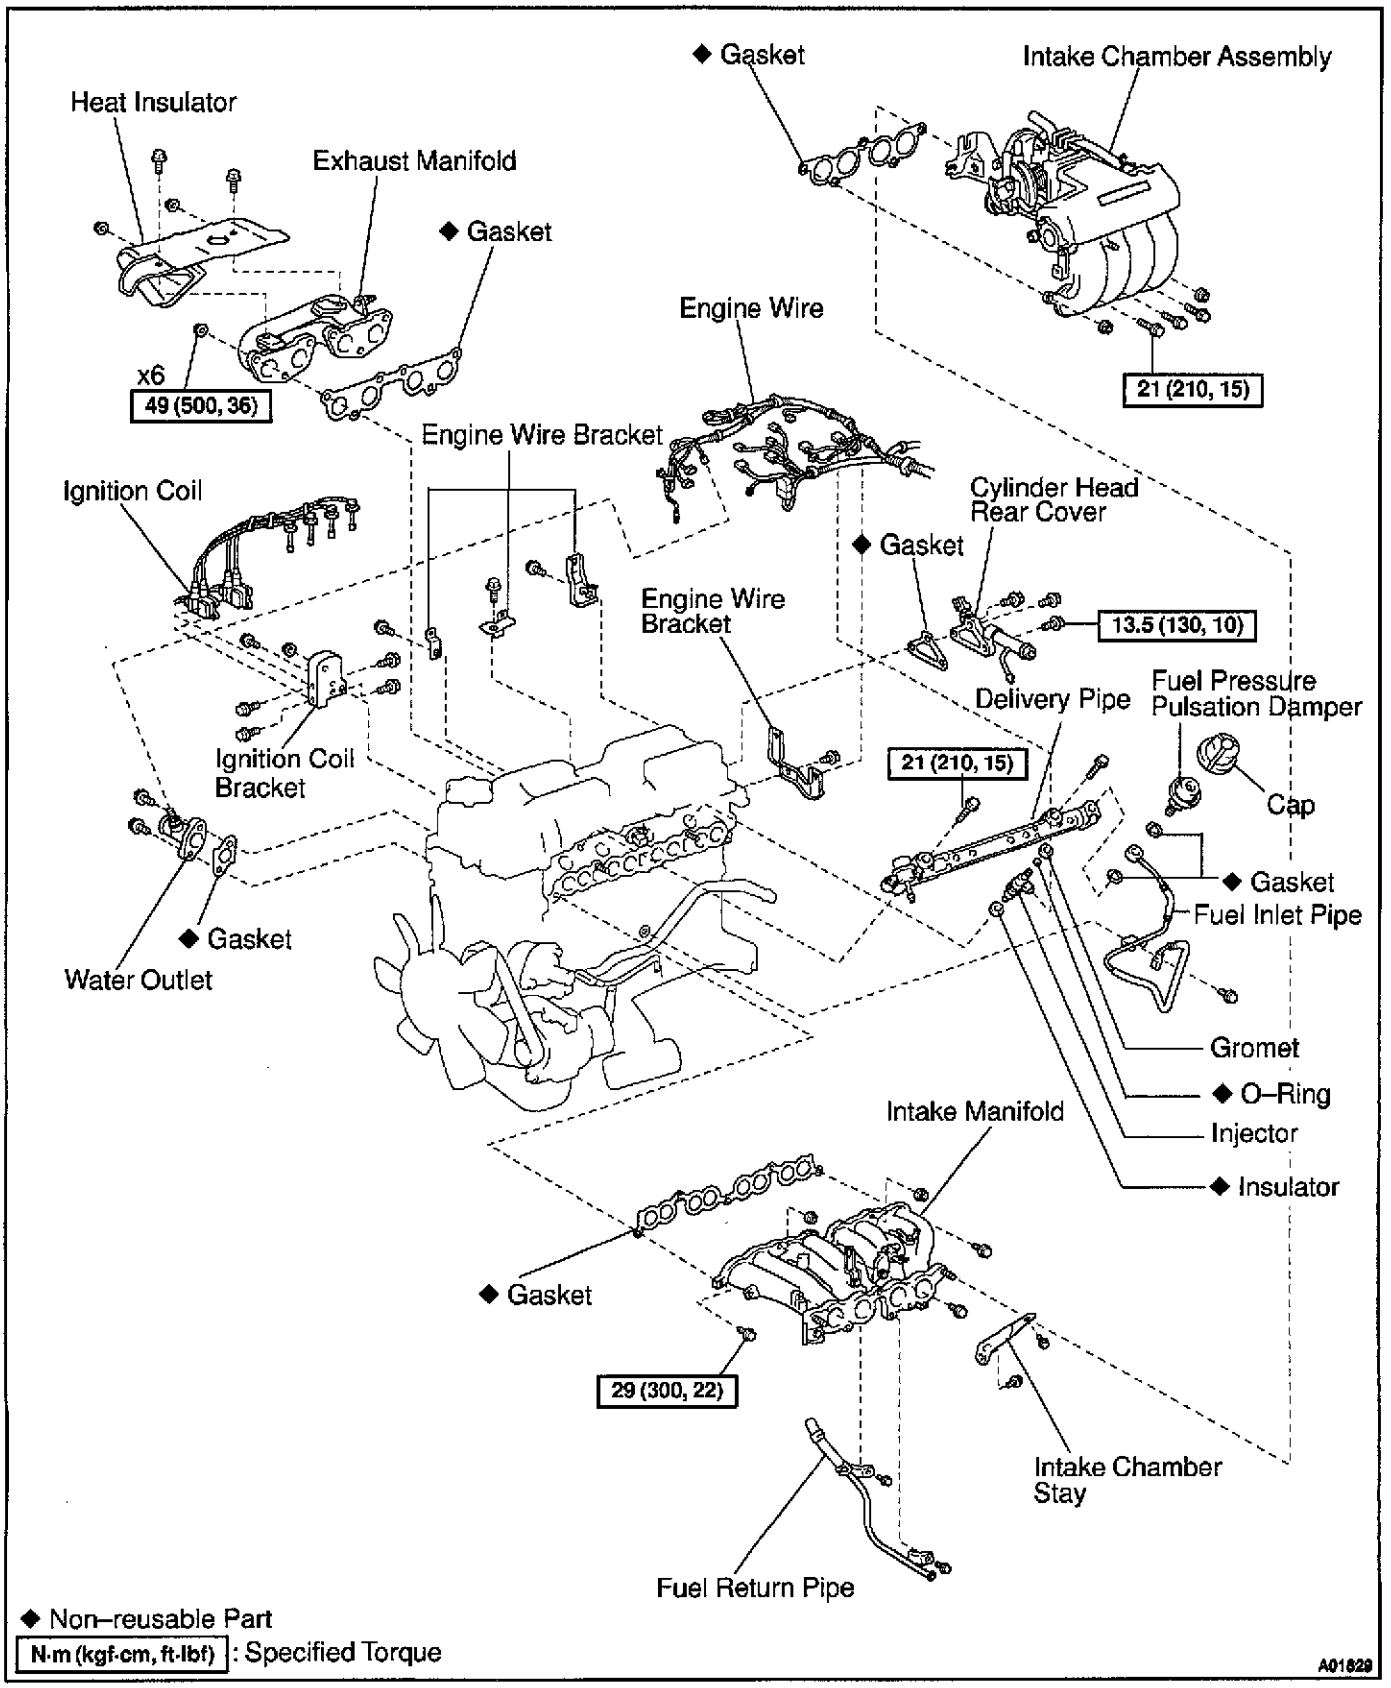

◆ Non–reusable Part

N·m (kgf·cm, ft·lbf) : Specified Torque

A01629

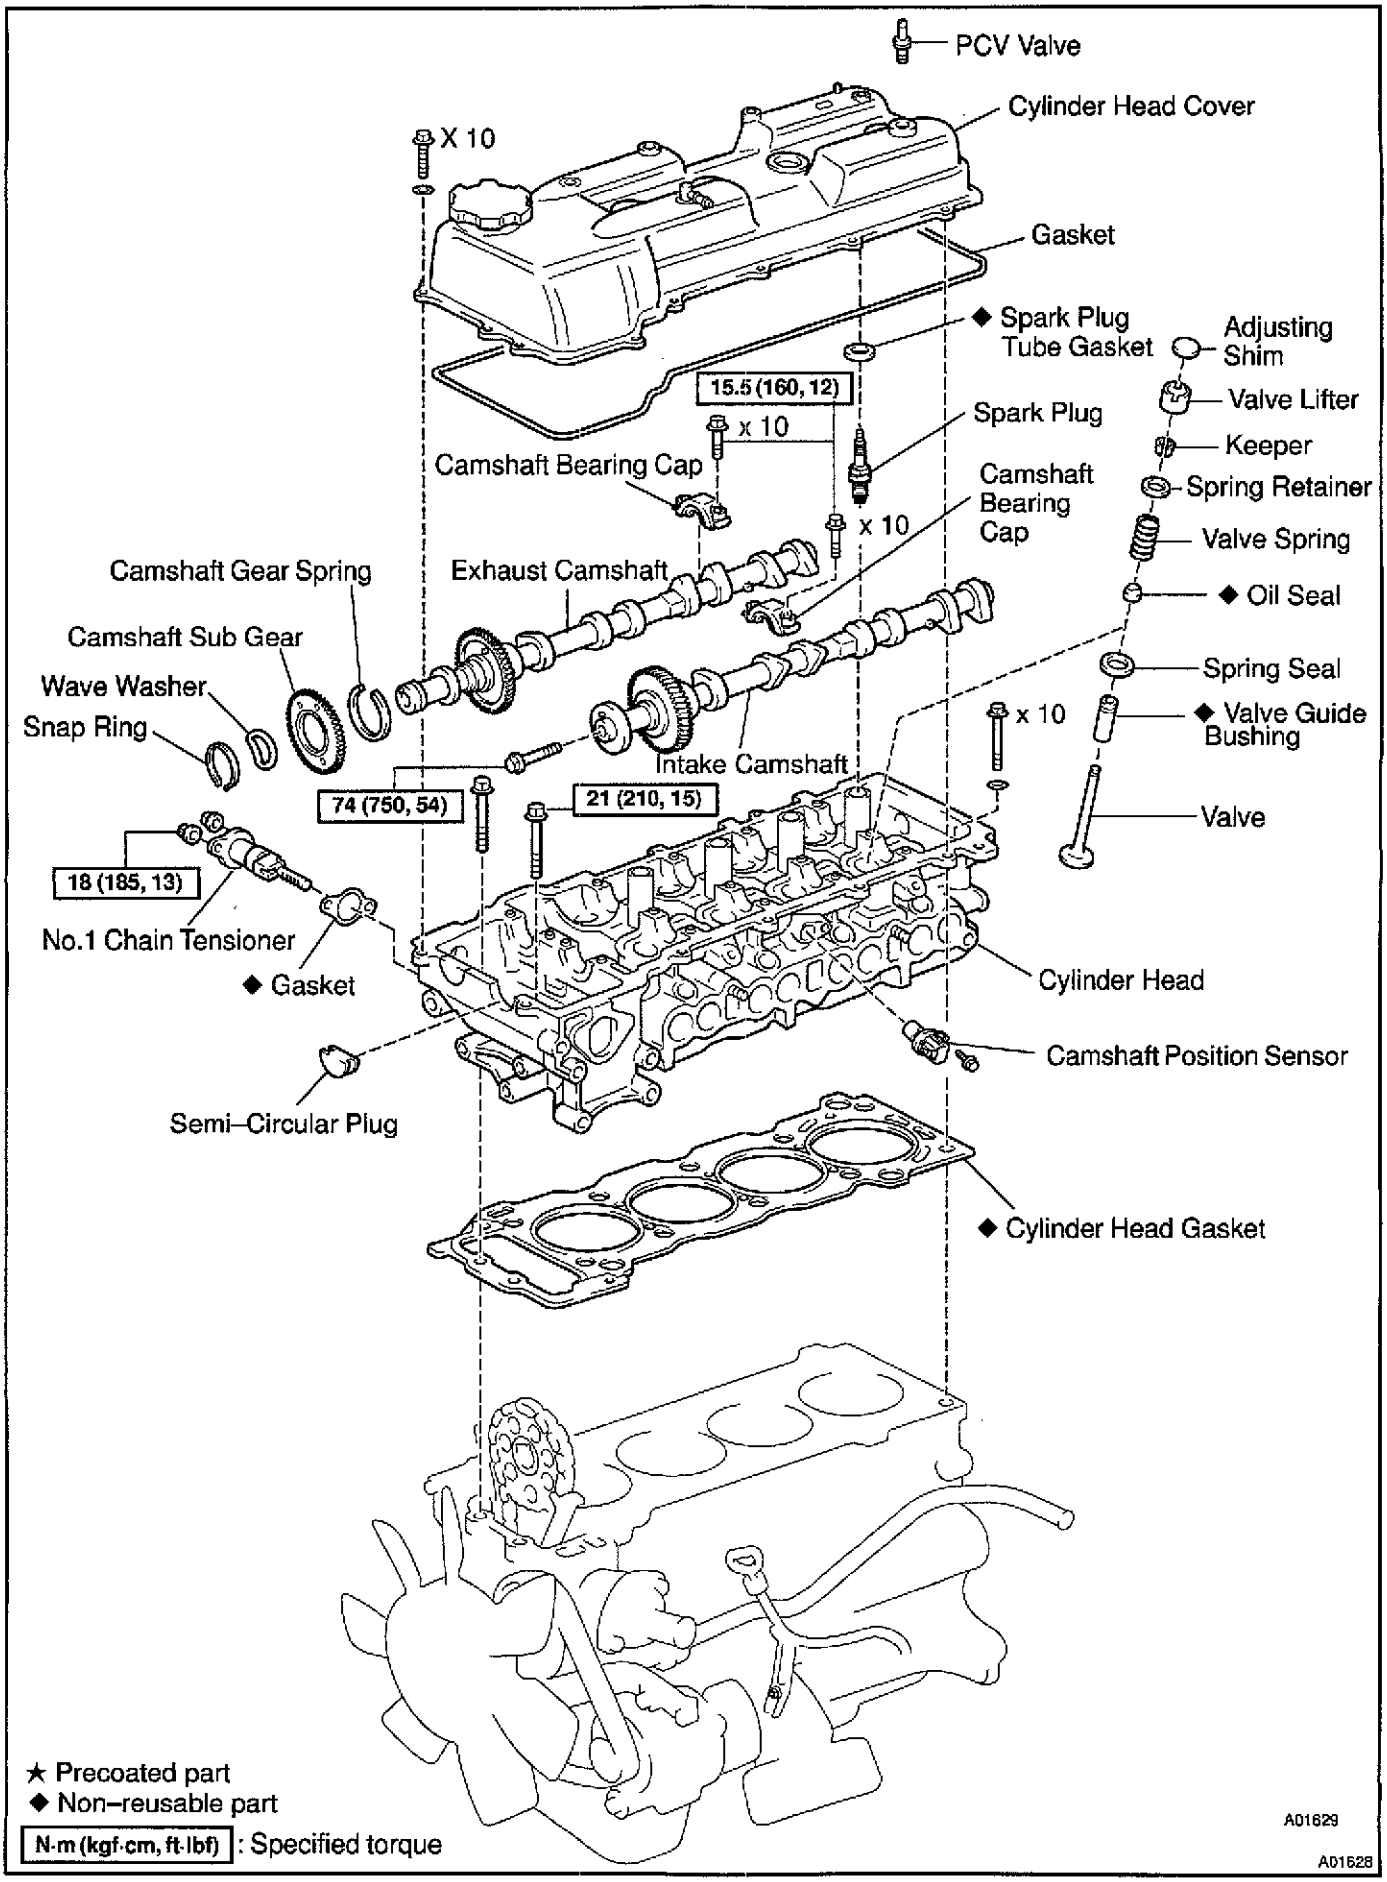
PCV Valve
Cylinder Head Cover
X 10
Gasket
◆ Spark Plug Tube Gasket
Adjusting Shim
Valve Lifter
Keeper
Spring Retainer
Valve Spring
◆ Oil Seal
Spring Seal
◆ Valve Guide Bushing
Valve
15.5 (160, 12)
x 10
Spark Plug
Camshaft Bearing Cap
Camshaft Bearing Cap
x 10
Camshaft Gear Spring
Exhaust Camshaft
Camshaft Sub Gear
Wave Washer
Snap Ring
x 10
Intake Camshaft
74 (750, 54)
21 (210, 15)
18 (185, 13)
No.1 Chain Tensioner
◆ Gasket
Cylinder Head
Camshaft Position Sensor
Semi–Circular Plug
◆ Cylinder Head Gasket
★ Precoated part
◆ Non–reusable part
N·m (kgf·cm, ft·lbf) : Specified torque
A01629
A01628