

FUEL PRESSURE REGULATOR (2RZ–FE)

COMPONENTS

F100W–01

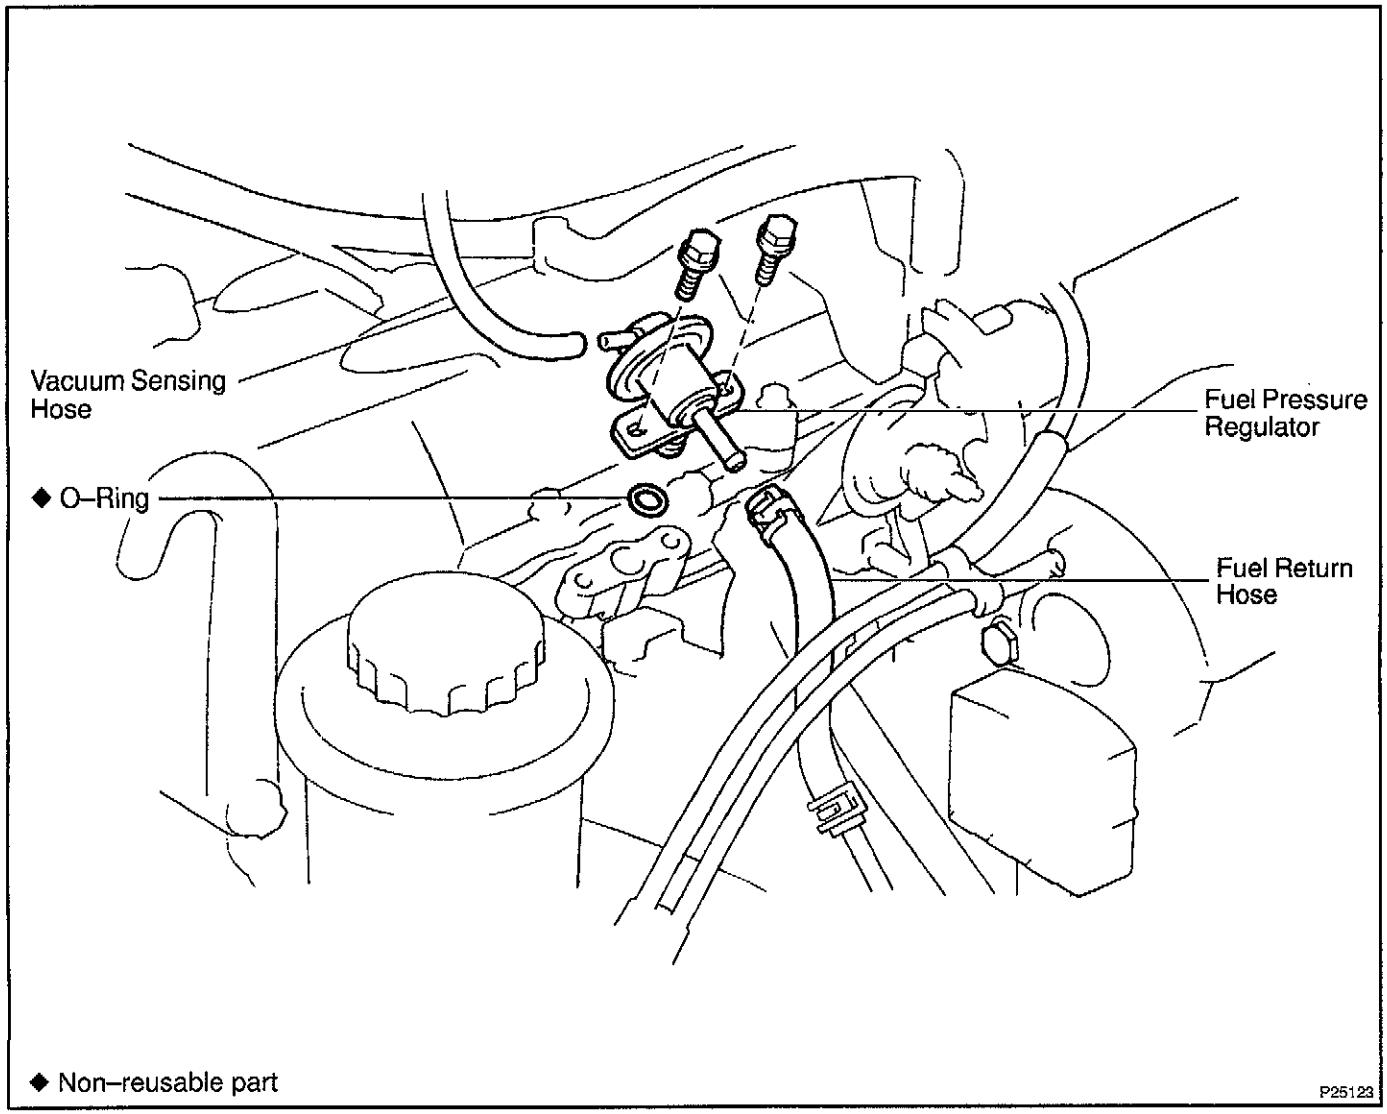

FI00X–01

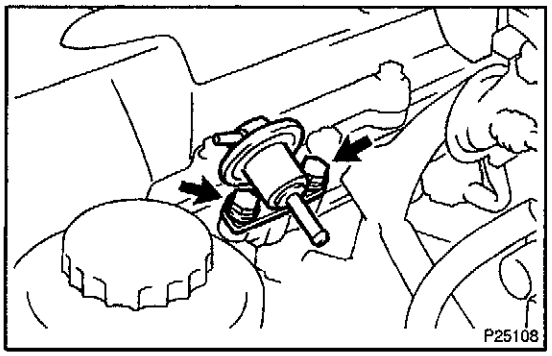

REMOVAL

1. DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR

2. DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR

HINT:

Put a suitable container or shop towel under the pressure regulator.

3. REMOVE FUEL PRESSURE REGULATOR

(a) Remove the 2 bolts and fuel pressure regulator.
Torque: 8.0 N·m (80 kgf·cm, 69 in.·lbf)

(b) Remove the O–ring.

HINT:

At the time of assembly, please refer to the following items.
Install the pressure regulator with the new O–ring.

F100Y–01

INSTALLATION

Installation is in the reverse order of removal.

(See page FI–25)