

FUEL PRESSURE PULSATION DAMPER (2RZ–FE, 3RZ–FE)

FI014-01

COMPONENTS

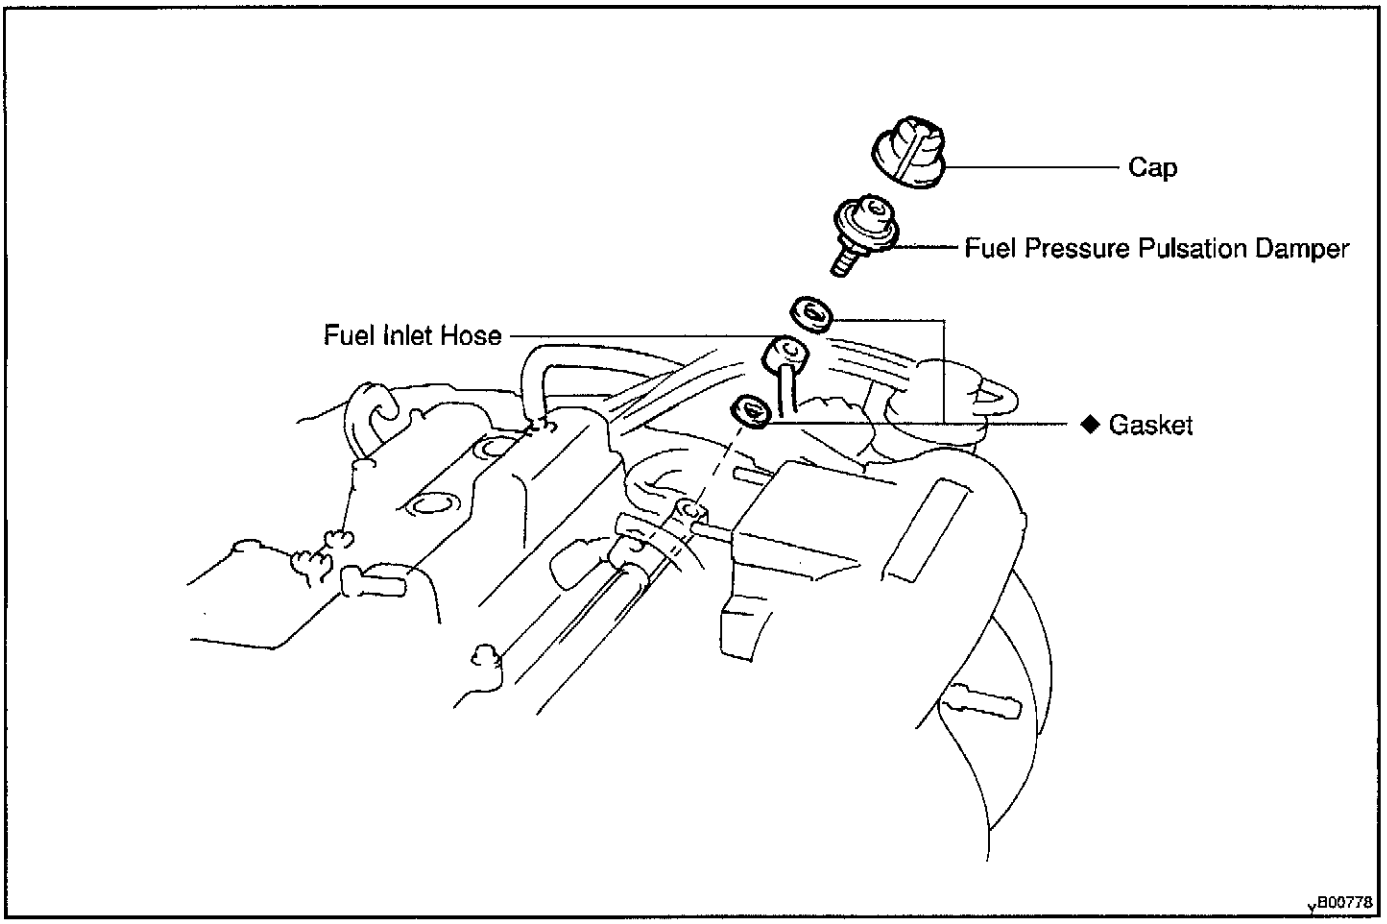

FI015–01

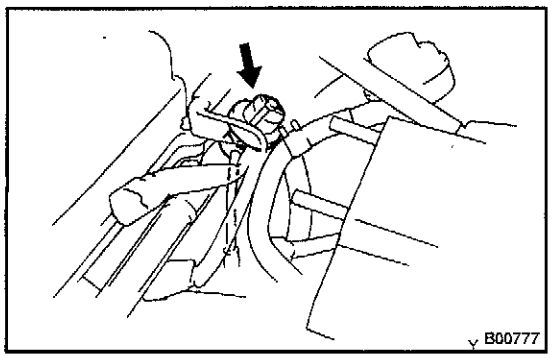

REMOVAL

REMOVE FUEL PRESSURE PULSATION DAMPER

(a) Using SST, remove the pulsation damper and upper gasket.
SST 09612 – 24014 (09617 – 24011)

(b) Disconnect the fuel inlet pipe from the fuel delivery pipe and lower gasket.

HINT:
At the time of assembly, please refer to the following items.
Install the pressure pulsation damper with the new 2 gaskets.

FI016–01

INSTALLATION

Installation is in the reverse order of removal.

(See page FI–25)