
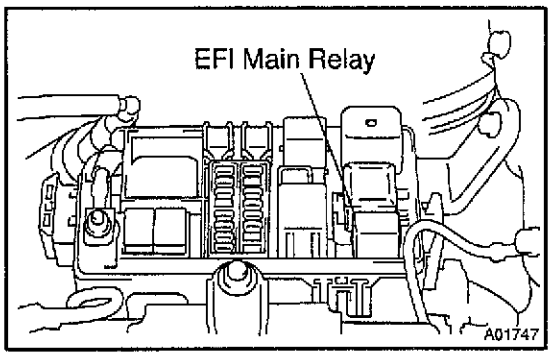


EFI MAIN RELAY

FI01Q-01

INSPECTION

1. **REMOVE EFI MAIN RELAY (Marking: EFI)**

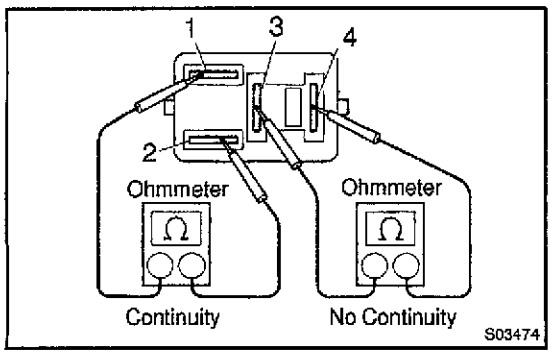


2. **INSPECT EFI MAIN RELAY**

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

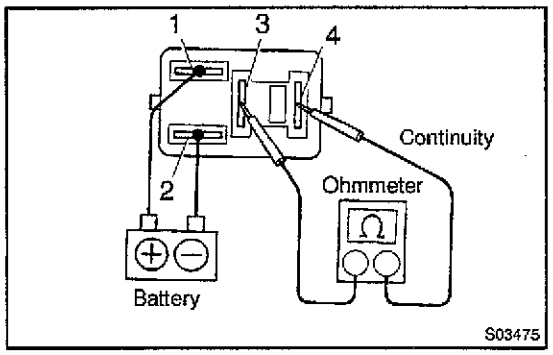

(c) Apply battery positive voltage across terminals 1 and 2.

(d) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

3. **REINSTALL EFI MAIN RELAY**