
CIRCUIT OPENING RELAY

COMPONENTS

FI01R-01

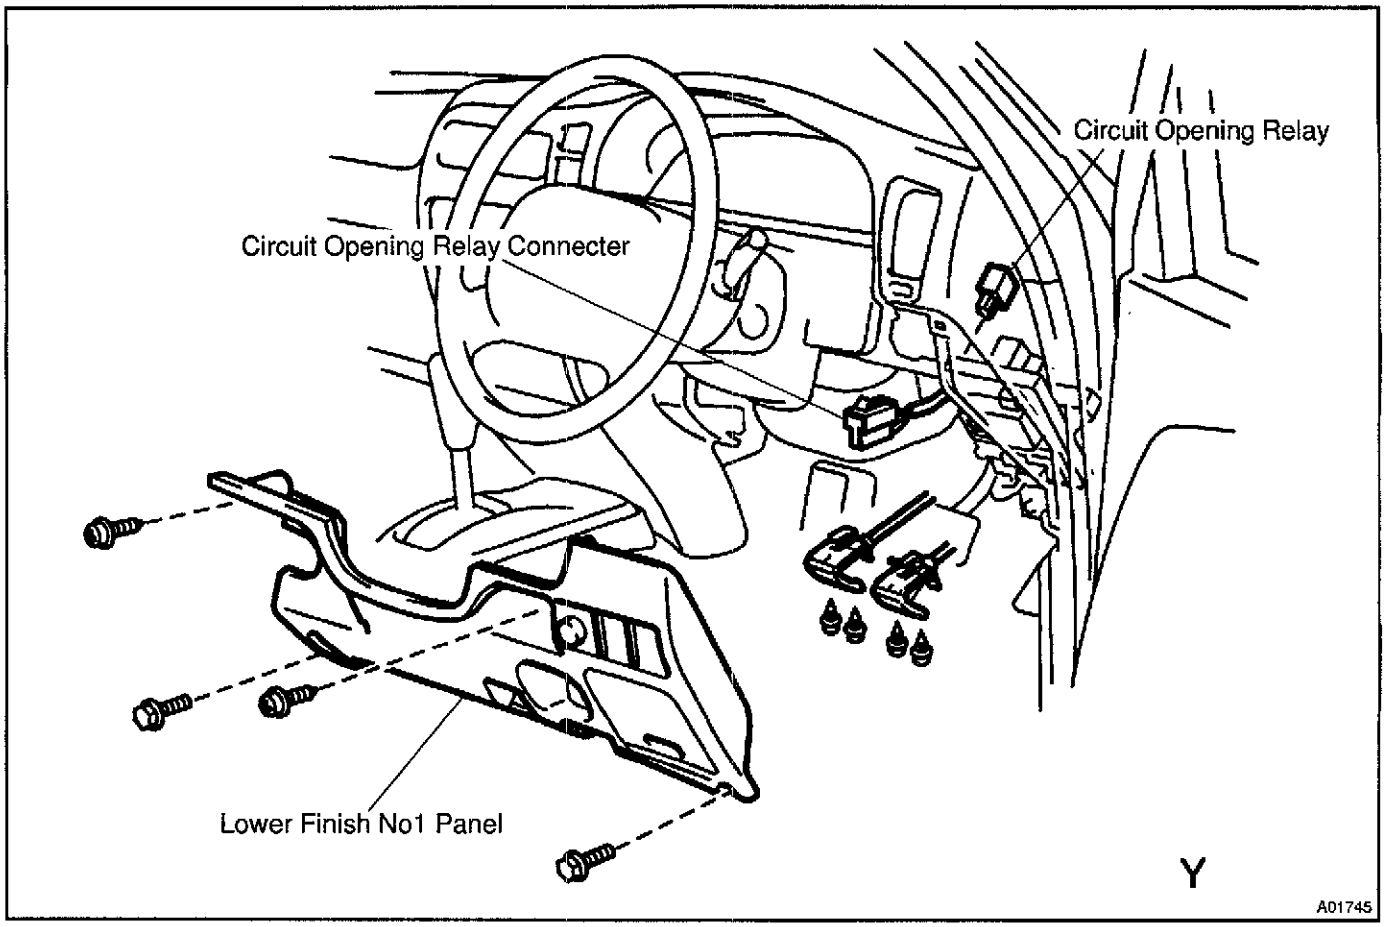

FI01S-01

INSPECTION

1. REMOVE CIRCUIT OPENING RELAY


2. INSPECT CIRCUIT OPENING RELAY CONTINUITY

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 4.

If there continuity, replace the relay.

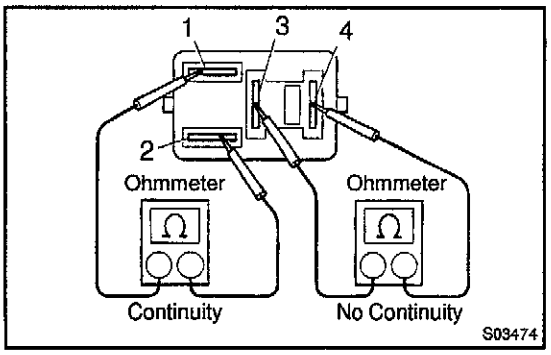

3. INSPECT CIRCUIT OPENING RELAY OPERATION

(a) Apply battery positive voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

4. REINSTALL CIRCUIT OPENING RELAY

