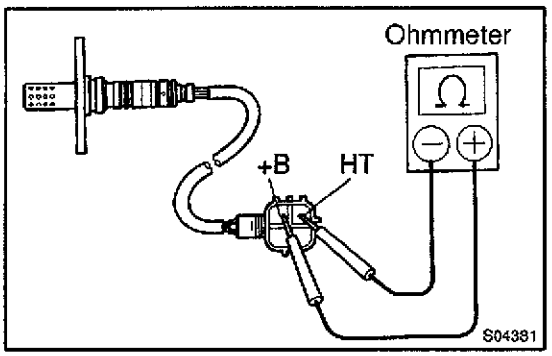



# OXYGEN SENSOR (2RZ–FE)

FI01W-01

## INSPECTION

### INSPECT HEATER RESISTANCE OF HEATED OXYGEN SENSORS

Using an ohmmeter, measure the resistance between terminals +B and HT. Using an ohmmeter, measure the resistance between terminals +B and HT.

**Resistance:**

**At 20°C (68°F): 11.7 – 14.3 kΩ**

If resistance is not as specified, replace the heated oxygen sensor.