

ENGINE CONTROL UNIT (ECU)

COMPONENTS

FI01Z-01

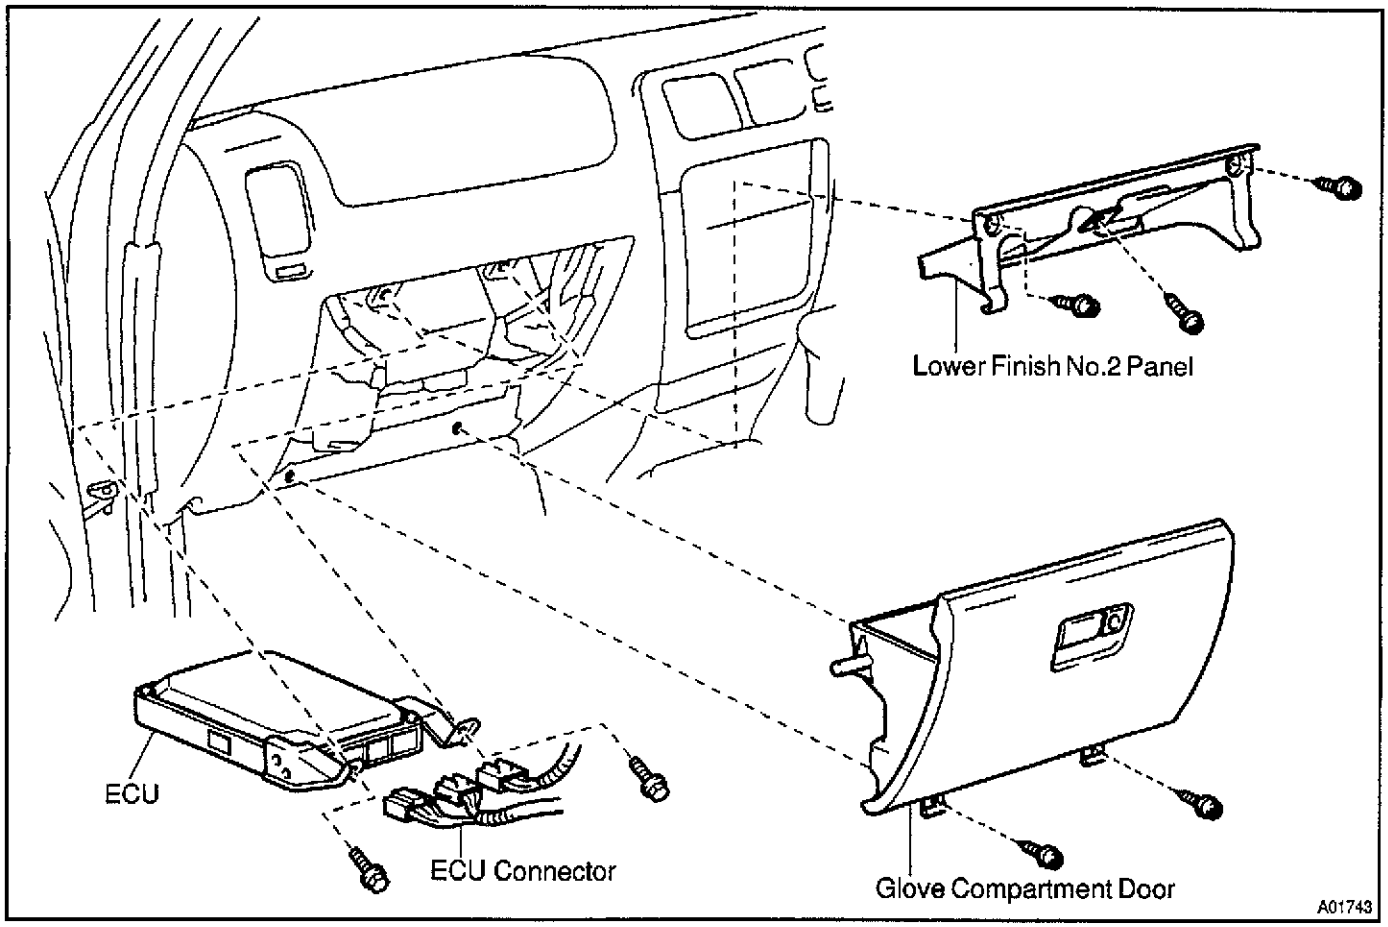

FI020-01

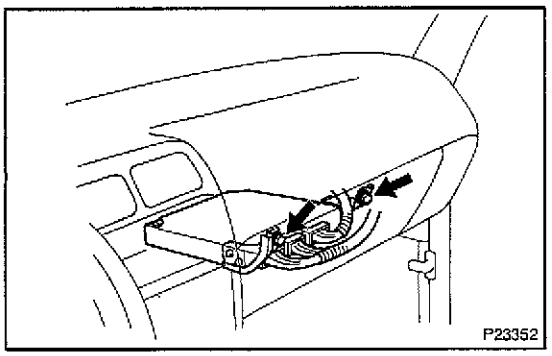

REMOVAL

1. REMOVE GLOVE COMPARTMENT DOOR

2. REMOVE LOWER FINISH NO.2 PANEL

3. REMOVE ECU

(a) 1RZ–E:
Disconnect the 2 ECU connecter.

(b) 2RZ–FE: 3RZ–FE:
Disconnect the 3 ECU connector.

(c) Remove the 2 bolts and ECU

FI021-01

INSPECTION

(See page DI–17 and DI–90)

FI022-01

INSTALLATION

Installation is in the reverse order of removal.

(see page FI–61)