

# IGNITION COIL(2RZ–FE, 3RZ–FE)

## COMPONENTS

IG04C–01

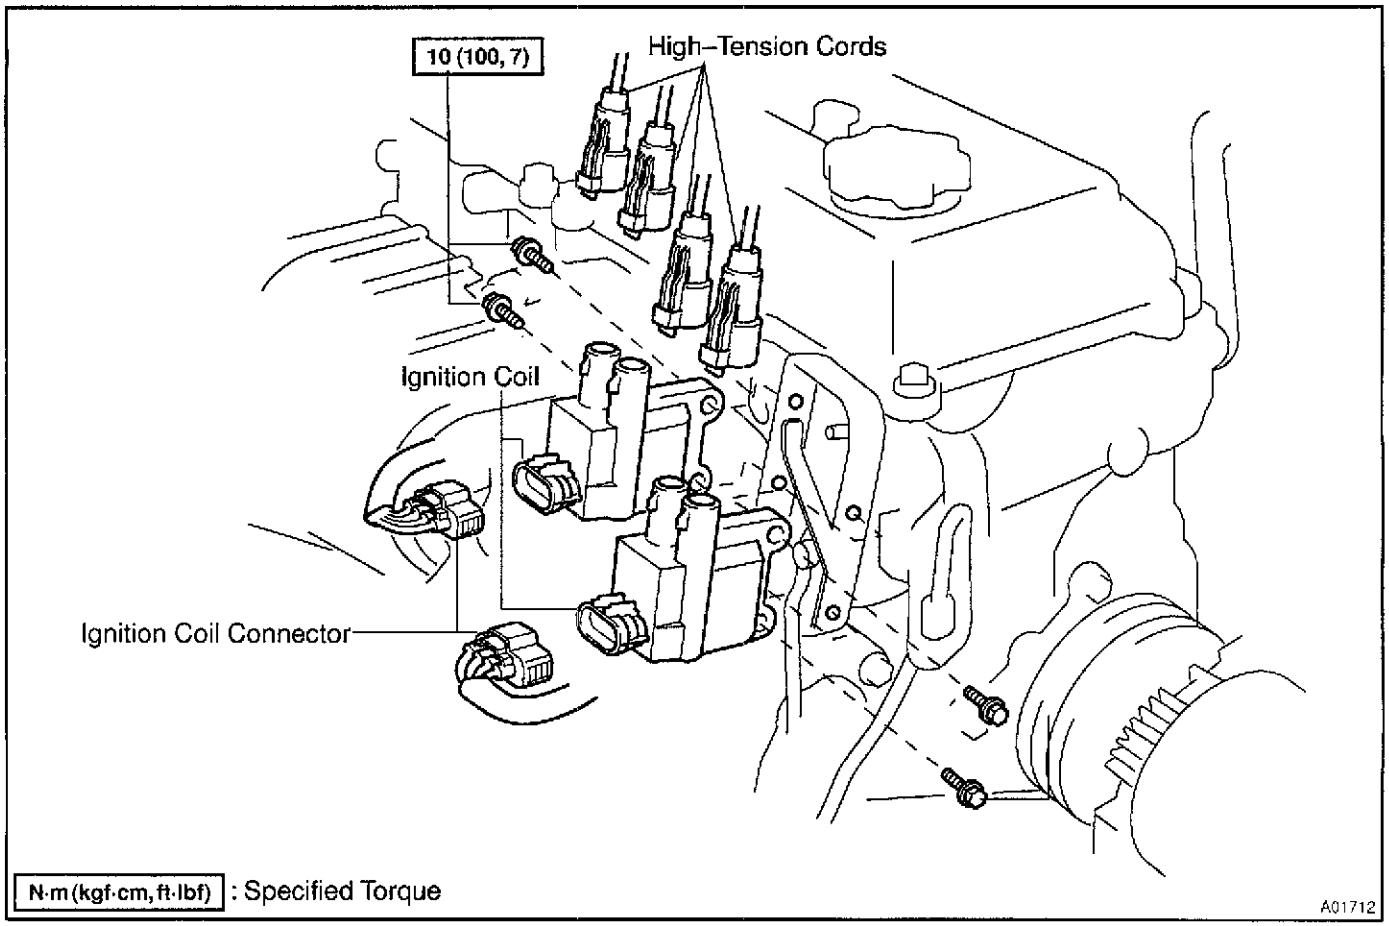

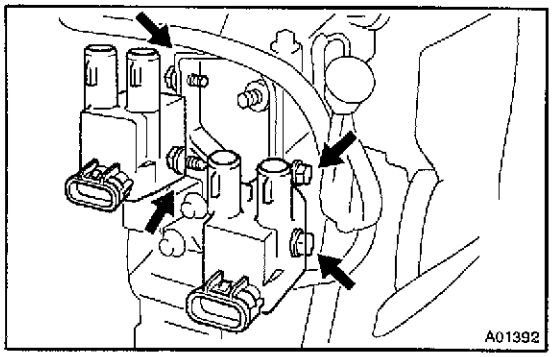


# REMOVAL

1. **DISCONNECT HIGH–TENSION CORDS FROM IGNITION COILS**
   **(See page IG–1)**
2. **REMOVE IGNITION COILS**

(a) Disconnect the 2 connectors from the ignition coils.

(b) Remove the 4 bolts and 2 ignition coils from the bracket.
**Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)**

HINT:

Arrange the ignition coils in correct order.

IG

IG04E–01

# INSTALLATION

**Installation is in the reverse order of removal.**
**(See page IG–6)**