
CAMSHAFT POSITION SENSOR(2RZ–FE, 3RZ–FE)


COMPONENTS

IG04F–01

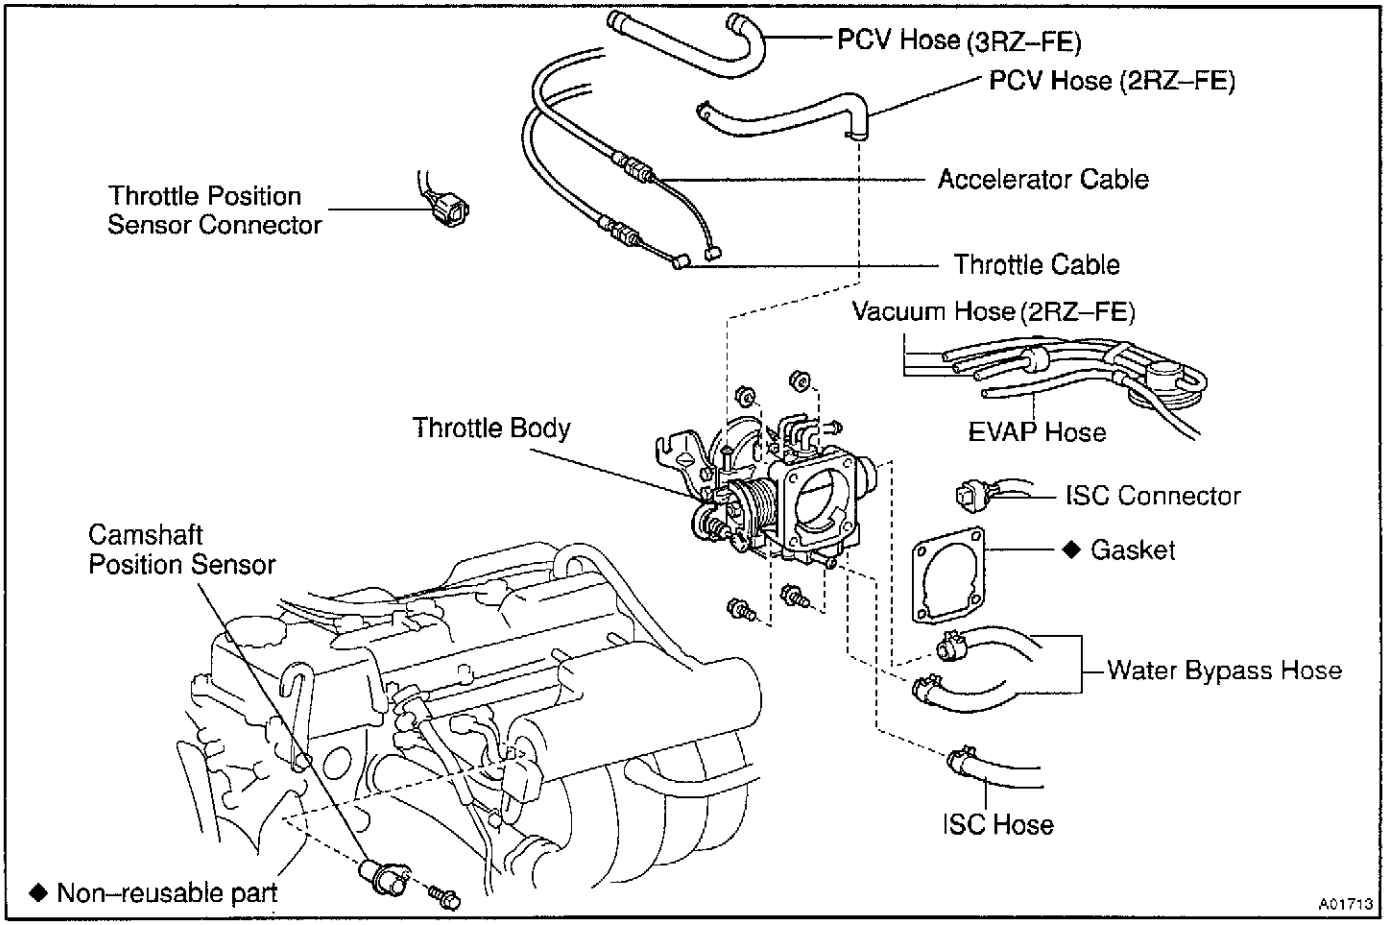

IG

IG04G–02

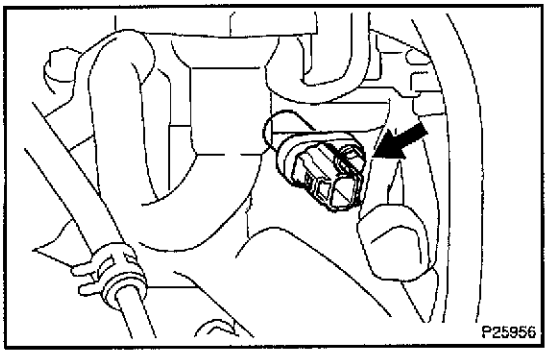

REMOVAL

1. **REMOVE THROTTLE BODY**
   (See page FI–42)
2. **REMOVE CAMSHAFT POSITION SENSOR**

(a) Disconnect the camshaft position sensor connector.

(b) Remove the bolts and camshaft position sensor.
Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

IG04H–01

INSTALLATION

Installation is in the reverse order of removal.

(See page IG–11)