
# BLOWER UNIT

## COMPONENTS

ACDJV–01

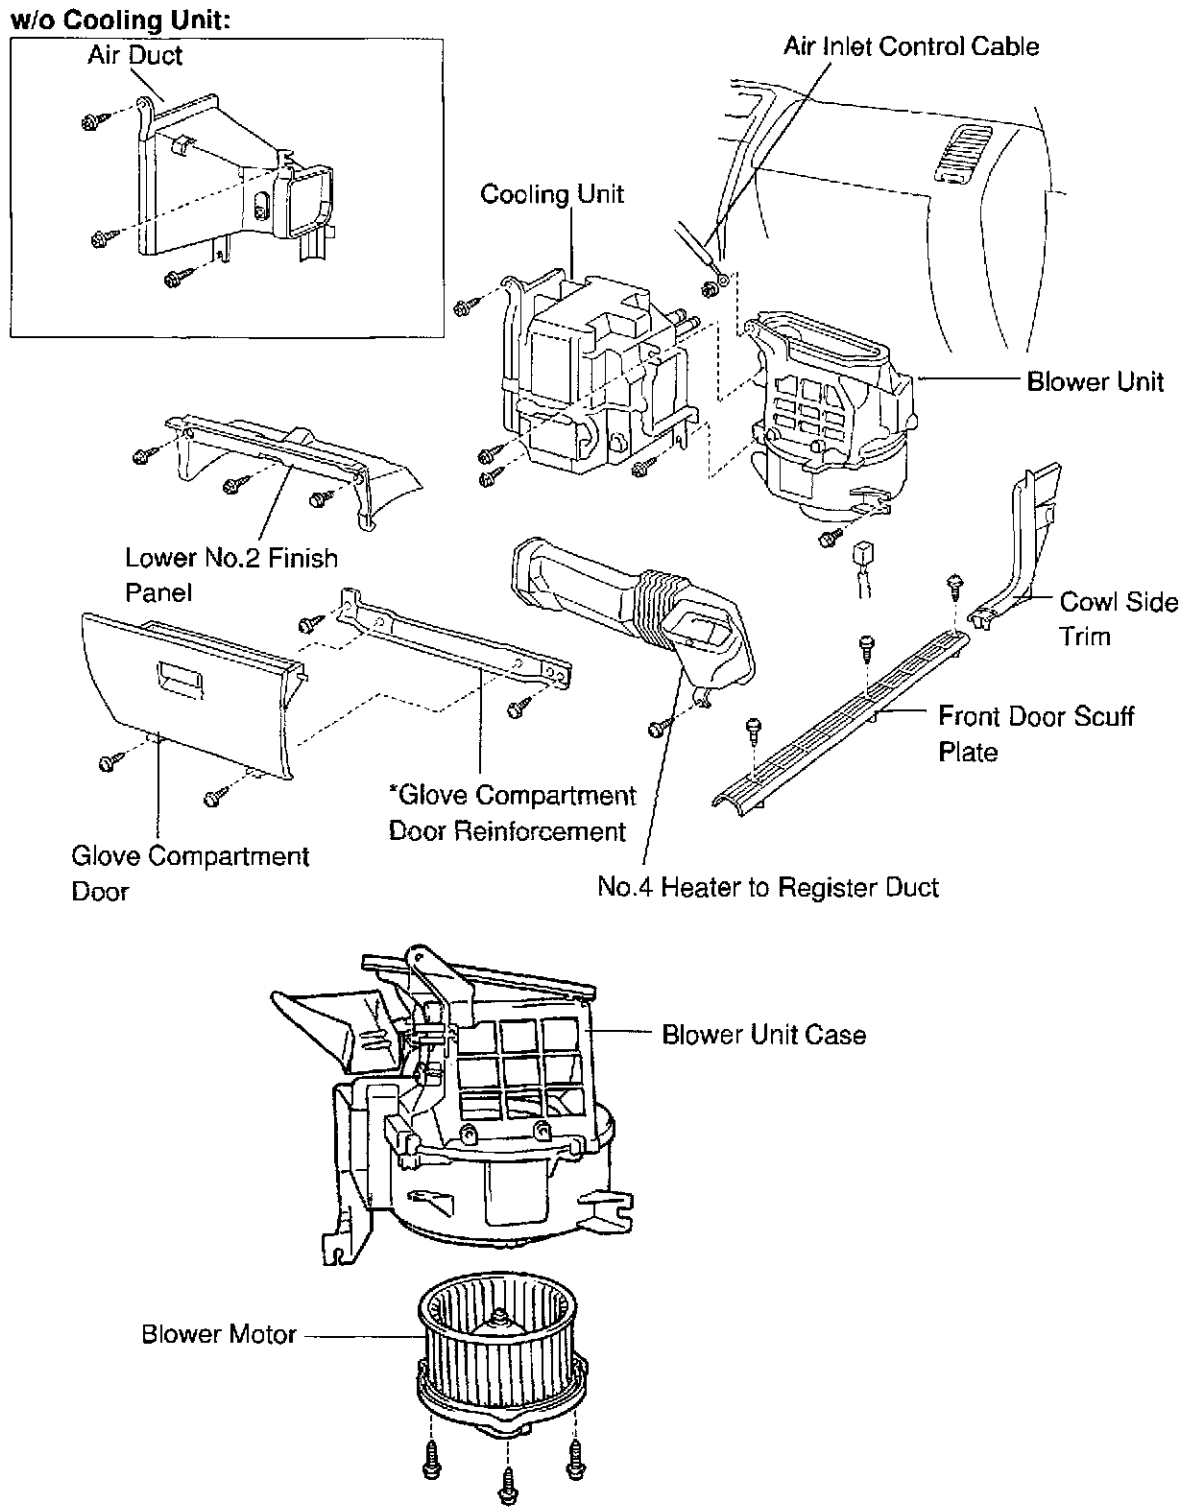


* : Substitution part (Only in time of installation)


I01076

AC0JW-01

# REMOVAL

1. **REMOVE THESE PARTS:**

(a) Front door scuff plate passenger side
(b) Cowl side trim passenger side
(c) Glove compartment door
(d) No. 4 heater to register duct
(e) No. 2 lower finish panel
(f) w/o Cooling Unit:
Air duct
(g) w/ Cooling Unit:
Cooling unit
(See page AC–27)

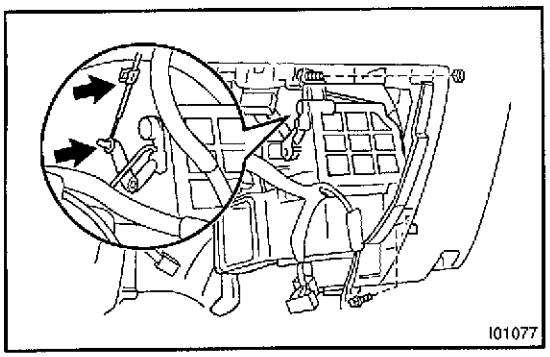


2. **REMOVE BLOWER UNIT**

(a) Disconnect the connector from the blower motor.
(b) Disconnect the air inlet damper control cable.

HINT:
At the time of installation, please refer to the following item.
For installing control cable, refer to "INSTALLATION" of "HEATER CONTROL ASSEMBLY" on page AC–108.

(c) Remove the bolt, nut and blower unit.

AC0JX–01

# DISASSEMBLY

## REMOVE BLOWER MOTOR

Remove the 3 screws and blower motor.

AC0JY-01

# REASSEMBLY

**Reassembly is in the reverse order of disassembly (See page AC–39).**

AC0JZ-01

# INSTALLATION

**Installation is in the reverse order of removal (See page AC–38).**