
EVAPORATOR

AC0KC-01

REMOVAL

1. **REMOVE COOLING UNIT**
   (See page AC–27)

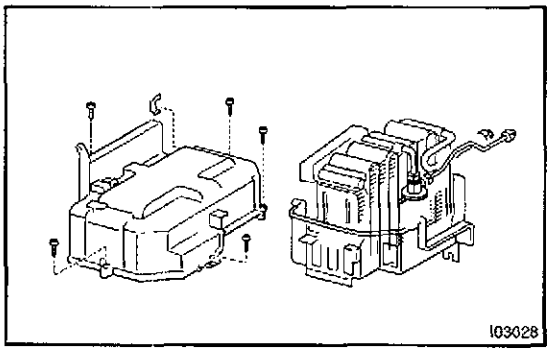

2. **REMOVE EVAPORATOR**

(a) Using a knife, cut off each packing.

(b) Remove the 5 screws, holding spring and separate the cooler unit cases.

HINT:

At the time of installation, please refer to the following item

If evaporator is replaced, add compressor oil to evaporator.

Add 40 cc (1.4 fl.oz.)

Compressor oil: ND–OIL 8 or equivalent

AC0KD–01

INSPECTION

1. CHECK EVAPORATOR FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

NOTICE:

Never use water to clean the evaporator.

2. CHECK FITTING FOR CRACKS FOR SCRATCHES

If necessary, repair or replace.

AC0KE-01

INSTALLATION

Installation is in the reverse order of removal (See page AC–67).