
# HEATER RADIATOR

AC0KF–01

## REMOVAL

1. **REMOVE HEATER UNIT**
   **(See page AC–33)**

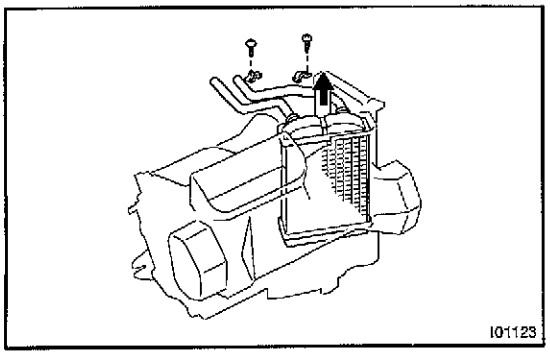


2. **REMOVE HEATER RADIATOR**

(a) Remove the screw and clamp.
(b) Pull out the heater radiator.
(c) Remove the 2 screws, 2 piping clamps and 2 heater radiator pipes from heater radiator.

HINT:
At the time of installation, please refer to the following item.
Do not reuse 2 O–rings.

AC0KG-01

# INSPECTION

## INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

AC0KH–01

# INSTALLATION

**Installation is in the reverse order of removal (See page AC–70).**