BLOWER MOTOR


AC0KL-01

REMOVAL

1. REMOVE THESE PARTS:

(a) Front door scuff plate on the passenger side


(b) Cowl side trim on the passenger side

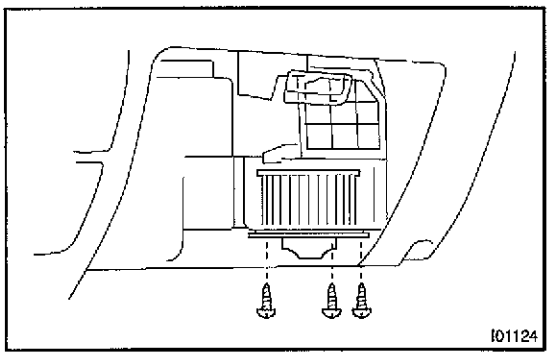

2. REMOVE BLOWER MOTOR

(a) Disconnect the connector.

(b) Remove the 3 screws and blower motor.

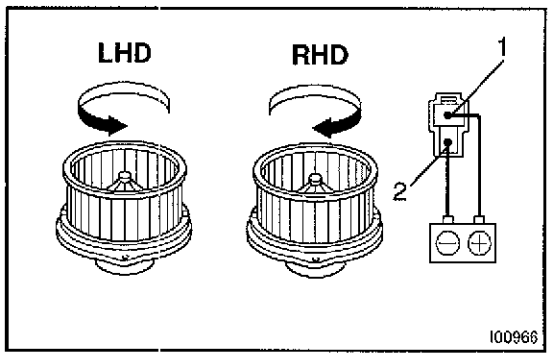

AC0KM-01

INSPECTION

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, then check that the motor operates smoothly.

If operation is not as specified, replace the blower motor.

AC0KN–01

INSTALLATION

Installation is in the reverse order of removal (See page AC–76).