# BLOWER RESISTOR


AC0KO-01

## REMOVAL

**1. REMOVE THESE PARTS:**

(a) Glove compartment door

(b) No. 4 heater to register duct

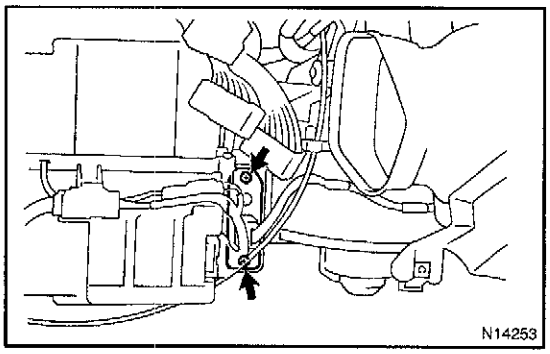



**2. REMOVE BLOWER RESISTOR**

(a) Disconnect the connector.

(b) Remove the 2 screws and blower resistor.

AC0KP–01

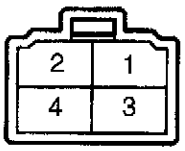


H-4-2 N09039

# INSPECTION

## INSPECT BLOWER RESISTOR RESISTANCE

| Tester connection | Condition | Specified condition |
|---|---|---|
| 1 – 3 | Constant | Approx. 0.49 Ω |
| 2 – 3 | Constant | Approx. 1.12 Ω |
| 2 – 4 | Constant | Approx. 1.69 Ω |

If resistance is not as specified, replace the blower resistor.

AC0KD–01

# INSTALLATION

**Installation is in the reverse order of removal (See page AC–79).**