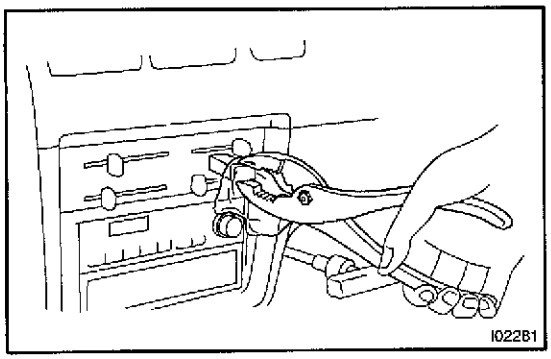


AIR CONDITIONER SWITCH

AC0L6-01

REMOVAL

REMOVE A/C SWITCH

(a) Cover the switch with a cloth.


(b) Using pliers, pull out the A/C switch.

AC0L6-01

INSPECTION


1. INSPECT A/C INDICATOR OPERATION

(a) Connect the positive (+) lead from the battery to terminal 6 and negative (–) lead to terminal 4 and check that the indicator lights up, when A/C switch ON.

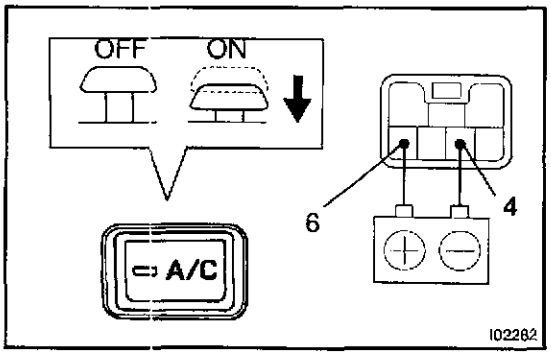

(b) Connect the positive (+) lead from the battery to terminal 3 and check that the indicator dims


If operations are not as specified, replace the A/C switch.

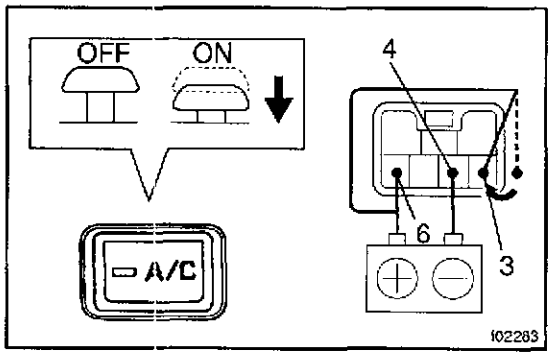

2. INSPECT A/C SWITCH CONTINUITY

Condition/ Circuit	Tester connection	Specified condition
OFF	–	No continuity
ON	5 – 6	Continuity
Illumination circuit	3 – 1	Continuity

If continuity is not as specified, replace the A/C switch

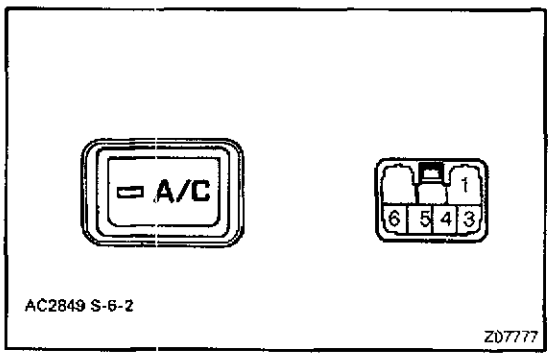

AC0L7 01

INSTALLATION

Installation is in the reverse order of removal (See page AC–98).