AUTOMATIC TRANSMISSION SYSTEM


PRECAUTION

AT02H-01

If the vehicle is equipped with a mobile communication system, refer to the precautions in the IN section.

AT02J–01

OPERATION

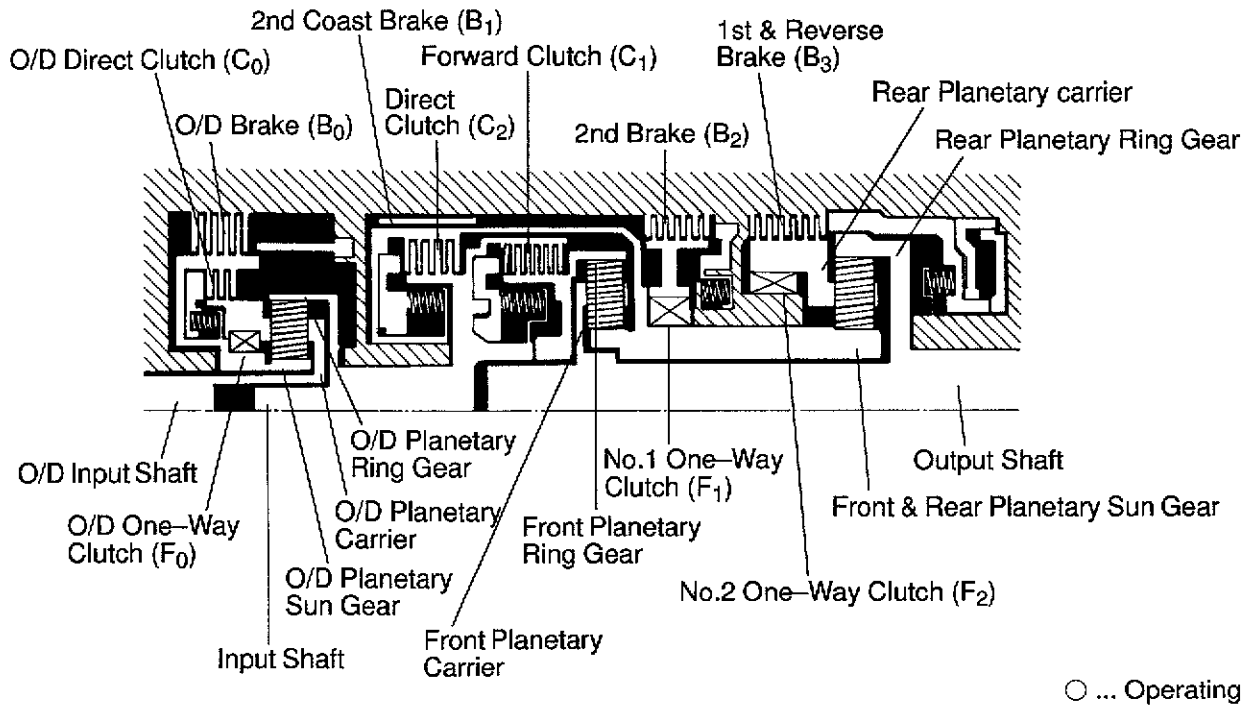

AT2157

○ ... Operating

Shift lever position	Gear position	C_0	C_1	C_2	B_0	B_1	B_2	B_3	F_0	F_1	F_2
P	Parking	○									
R	Reverse	○		○				○	○		
N	Neutral	○									
D	1st	○	○						○		○
	2nd	○	○				○		○	○	
	3rd	○	○	○			○		○		
	O/D		○	○	○		○				
2	1st	○	○						○		○
	2nd	○	○			○	○		○	○	
	*1 3rd	○	○	○			○		○		
L	1st	○	○					○	○		○
	*2 2nd	○	○			○	○		○	○	

*1: Down–shift only in the 2 position and 3rd gear — no up–shift.
*2: Down–shift only in the L position and 2nd gear — no up–shift.

V07130