
EXTENSION HOUSING OIL SEAL

AT02K–01

ON–VEHICLE REPAIR

1. **REMOVE PROPELLER SHAFT (See page PR–3)**

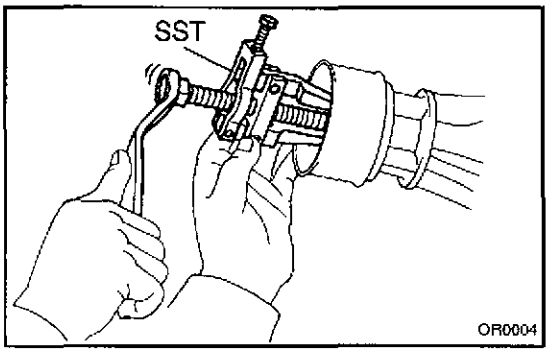


2. **REMOVE REAR OIL SEAL**

NOTICE:

Clean the extension housing before removing the oil seal.

Using SST, remove the oil seal.

SST 09308–10010

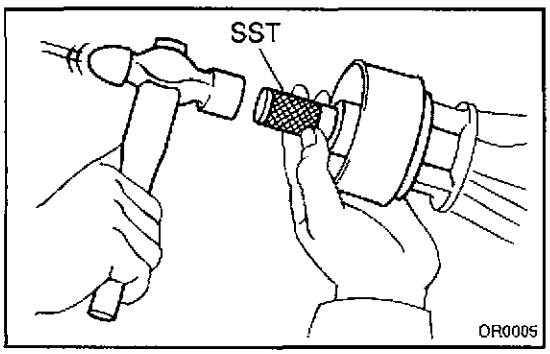

3. **INSTALL NEW OIL SEAL**

(a) Using SST and a hammer, carefully drive the oil seal in as far as it will go.

(b) Coat the lip of a new oil seal with MP grease.

SST 09325–40010

4. **INSTALL PROPELLER SHAFT (See page PR–8)**

5. **CHECK FLUID LEVEL (See page DI–4)**