
VEHICLE SPEED SENSOR

A70274-01

ON–VEHICLE REPAIR

1. DISCONNECT NO.2 VEHICLE SPEED SENSOR CONNECTOR

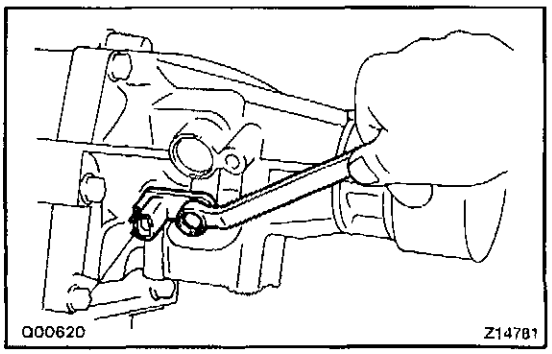

2. REMOVE NO.2 VEHICLE SPEED SENSOR

(a) Remove the bolt and No.2 vehicle speed sensor.

(b) Remove the O–ring from it.

3. INSTALL NO.2 VEHICLE SPEED SENSOR

(a) Coat a new O–ring with ATF and install it to the vehicle speed sensor.

(b) Install the speed sensor and torque the bolt.

Torque: 15.7 N·m (160 kgf·cm, 12 ft·lbf)

4. CONNECT NO.2 VEHICLE SPEED SENSOR CONNECTOR

AT