

BACK–UP LIGHT SYSTEM

LOCATION

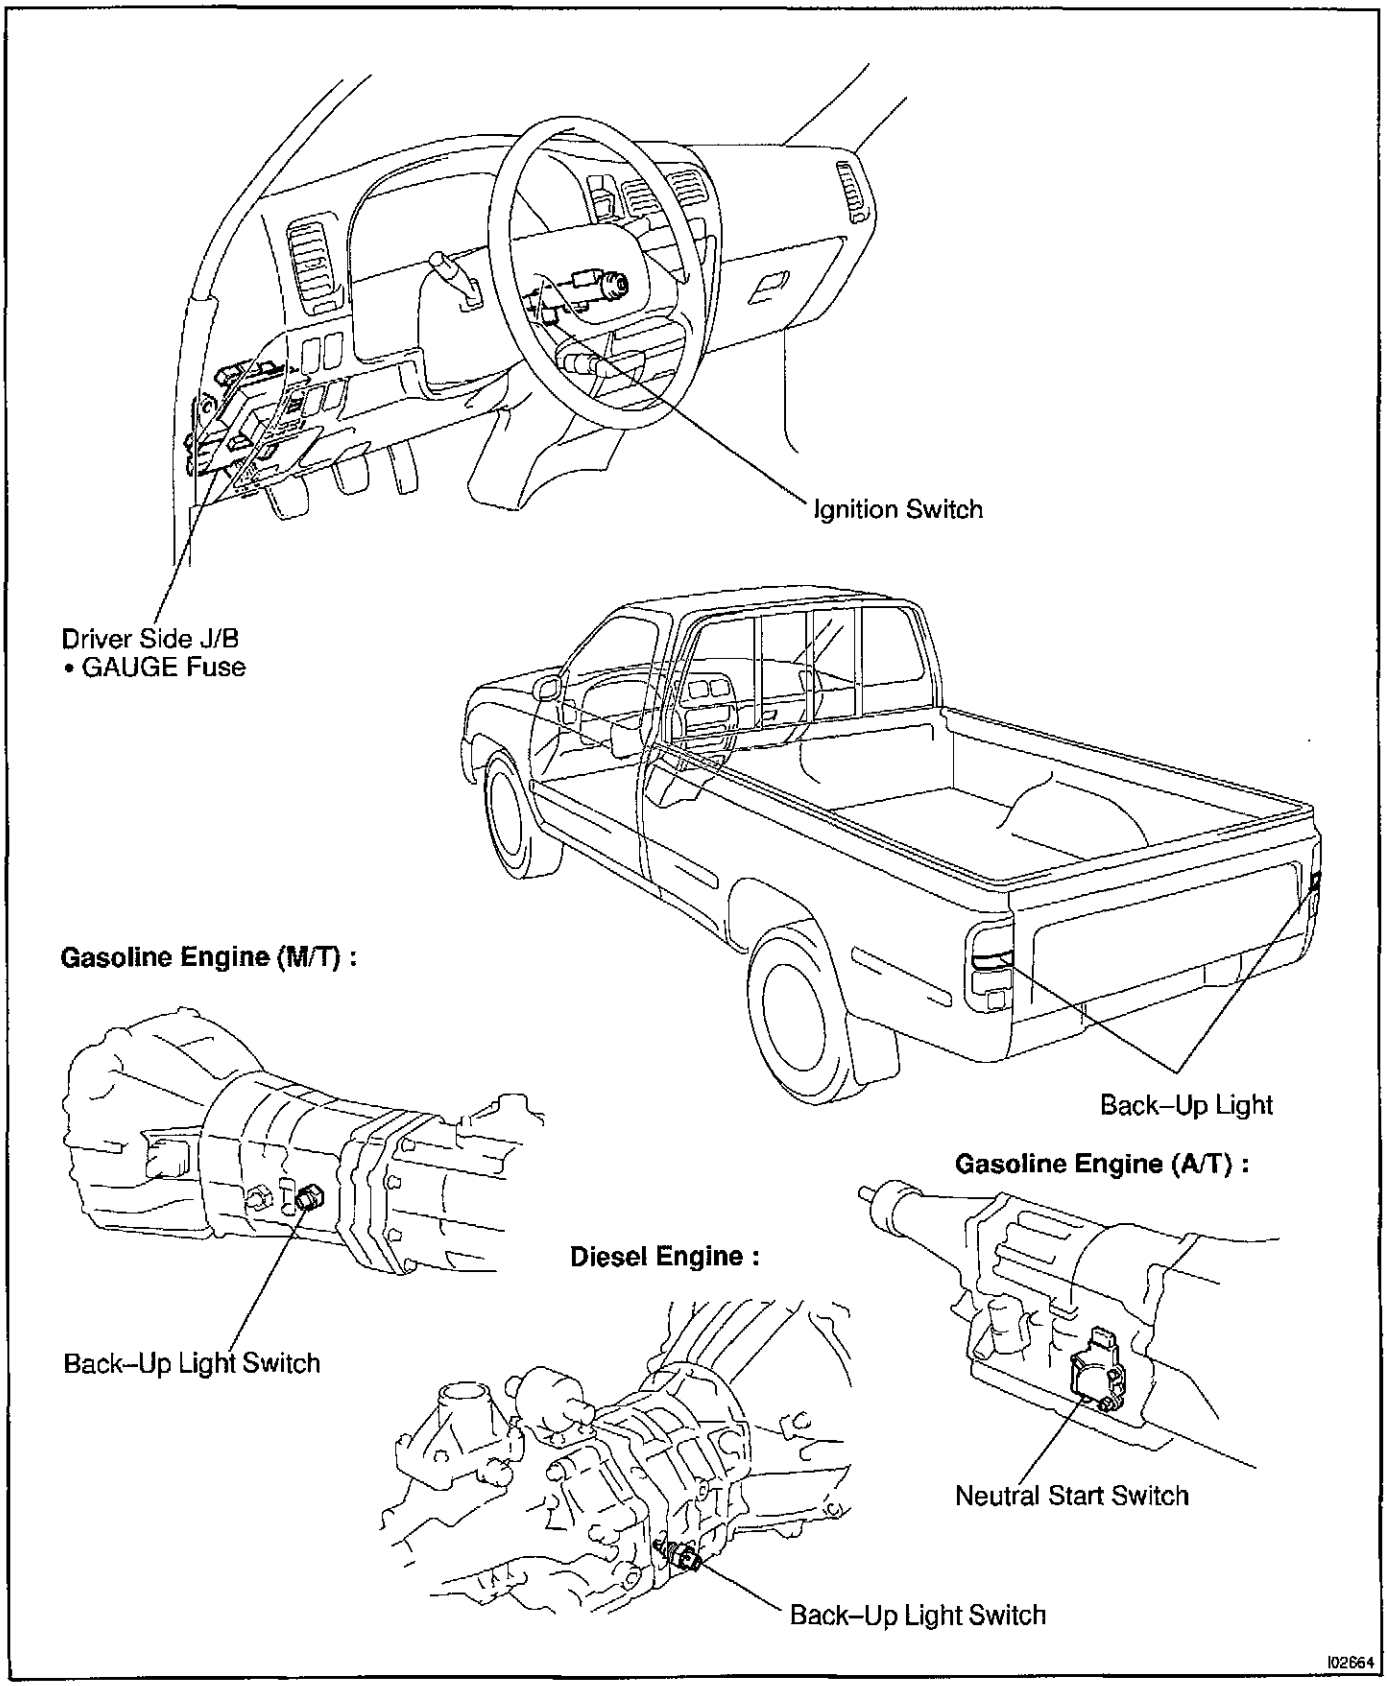

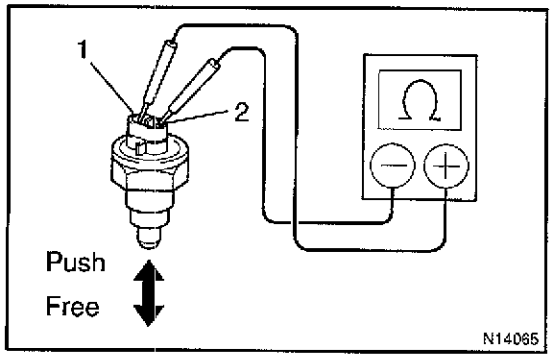

BE094-01

INSPECTION

INSPECT BACK–UP LIGHT SWITCH CONTINUITY

Condition	Tester connection	Specified condition
Free	1 – 2	No continuity
Push	1 – 2	Continuity

If continuity is not as specified, replace the switch.