

STOP LIGHT SYSTEM

LOCATION

BE095-01

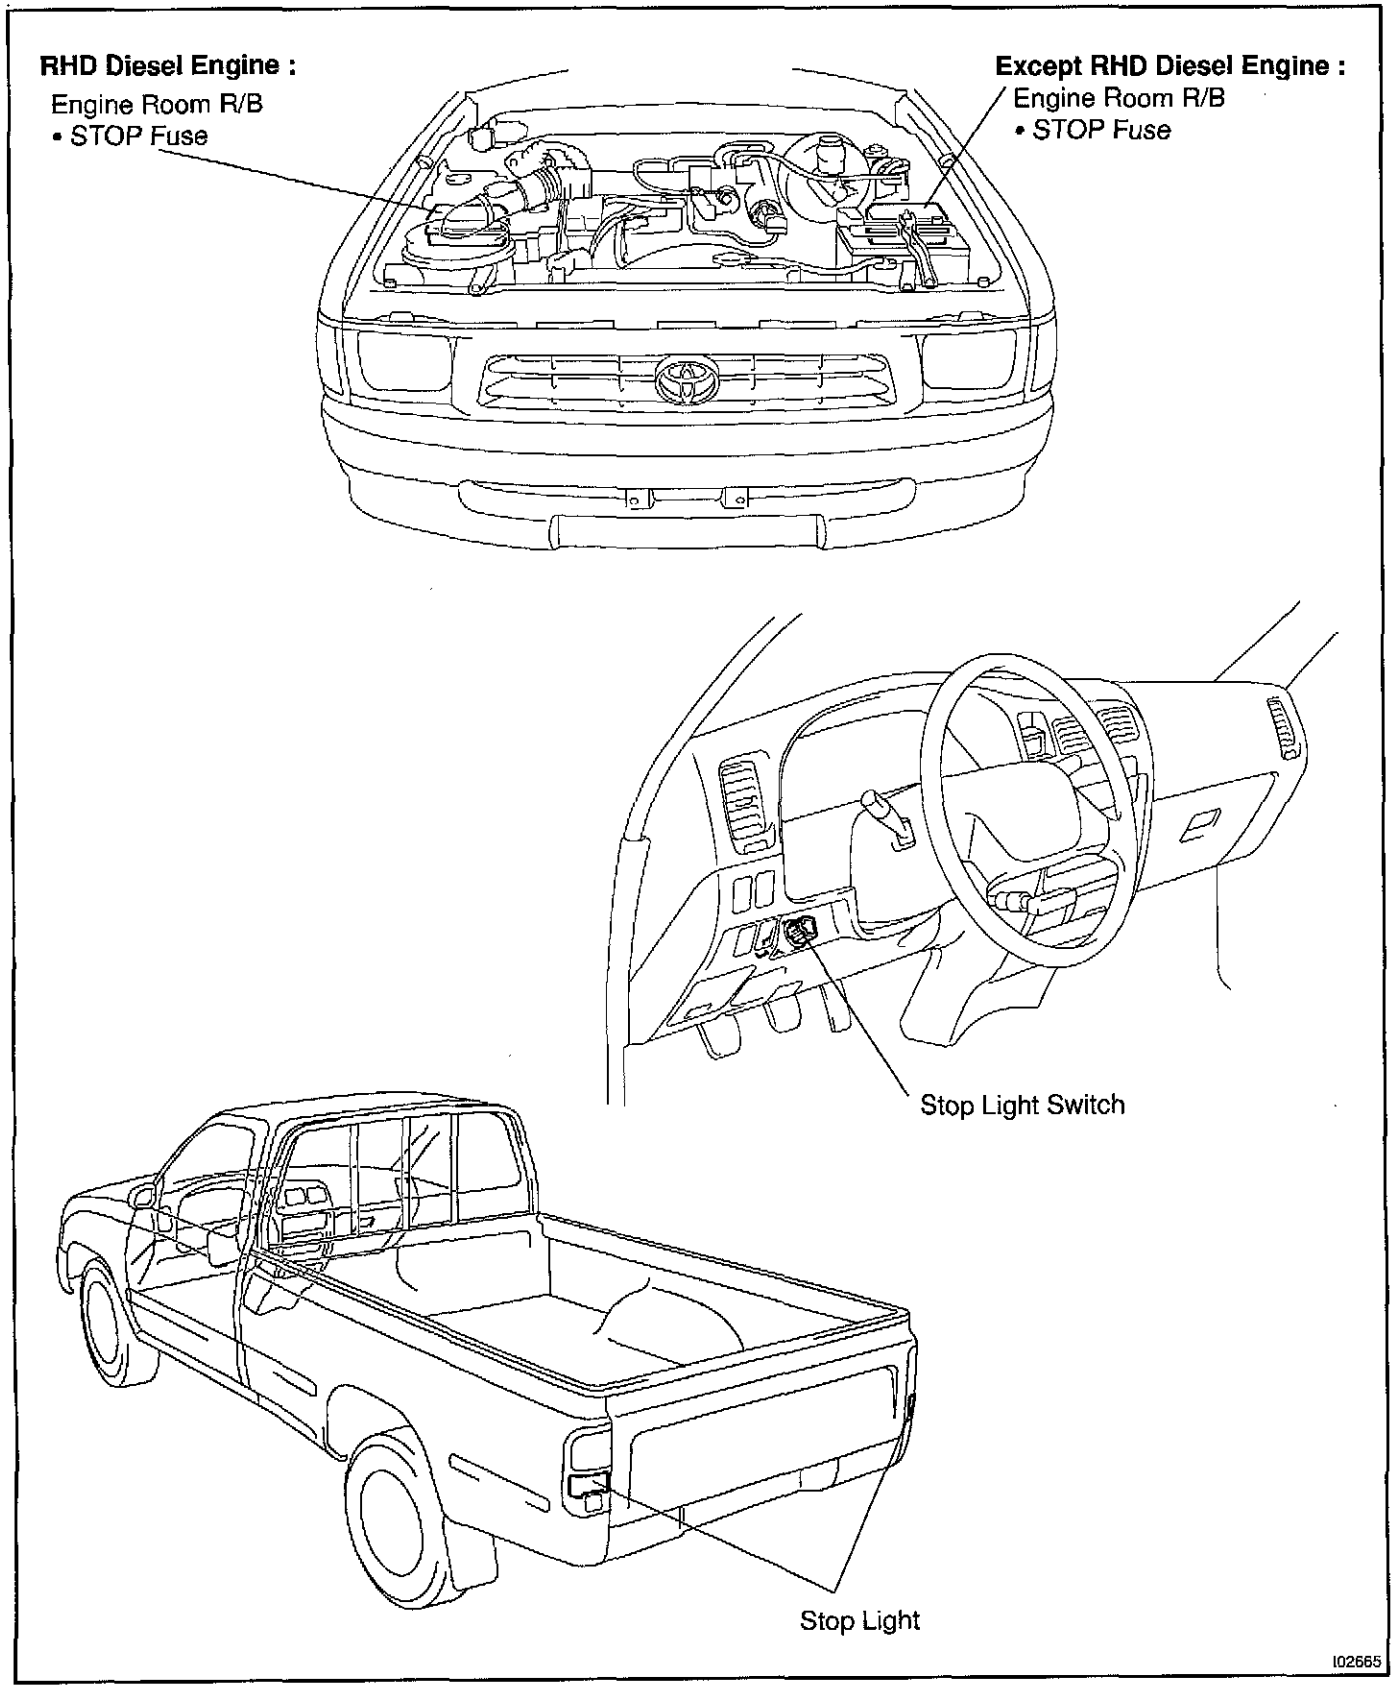

BE096-01

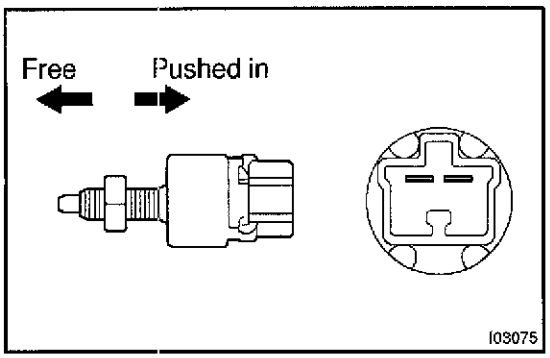

INSPECTION

INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free	1 – 2	Continuity
Switch pin pushed in	1 – 2	No continuity

If continuity is not as specified, replace the switch.