
POWER MIRROR CONTROL SYSTEM


LOCATION

BE09L–01

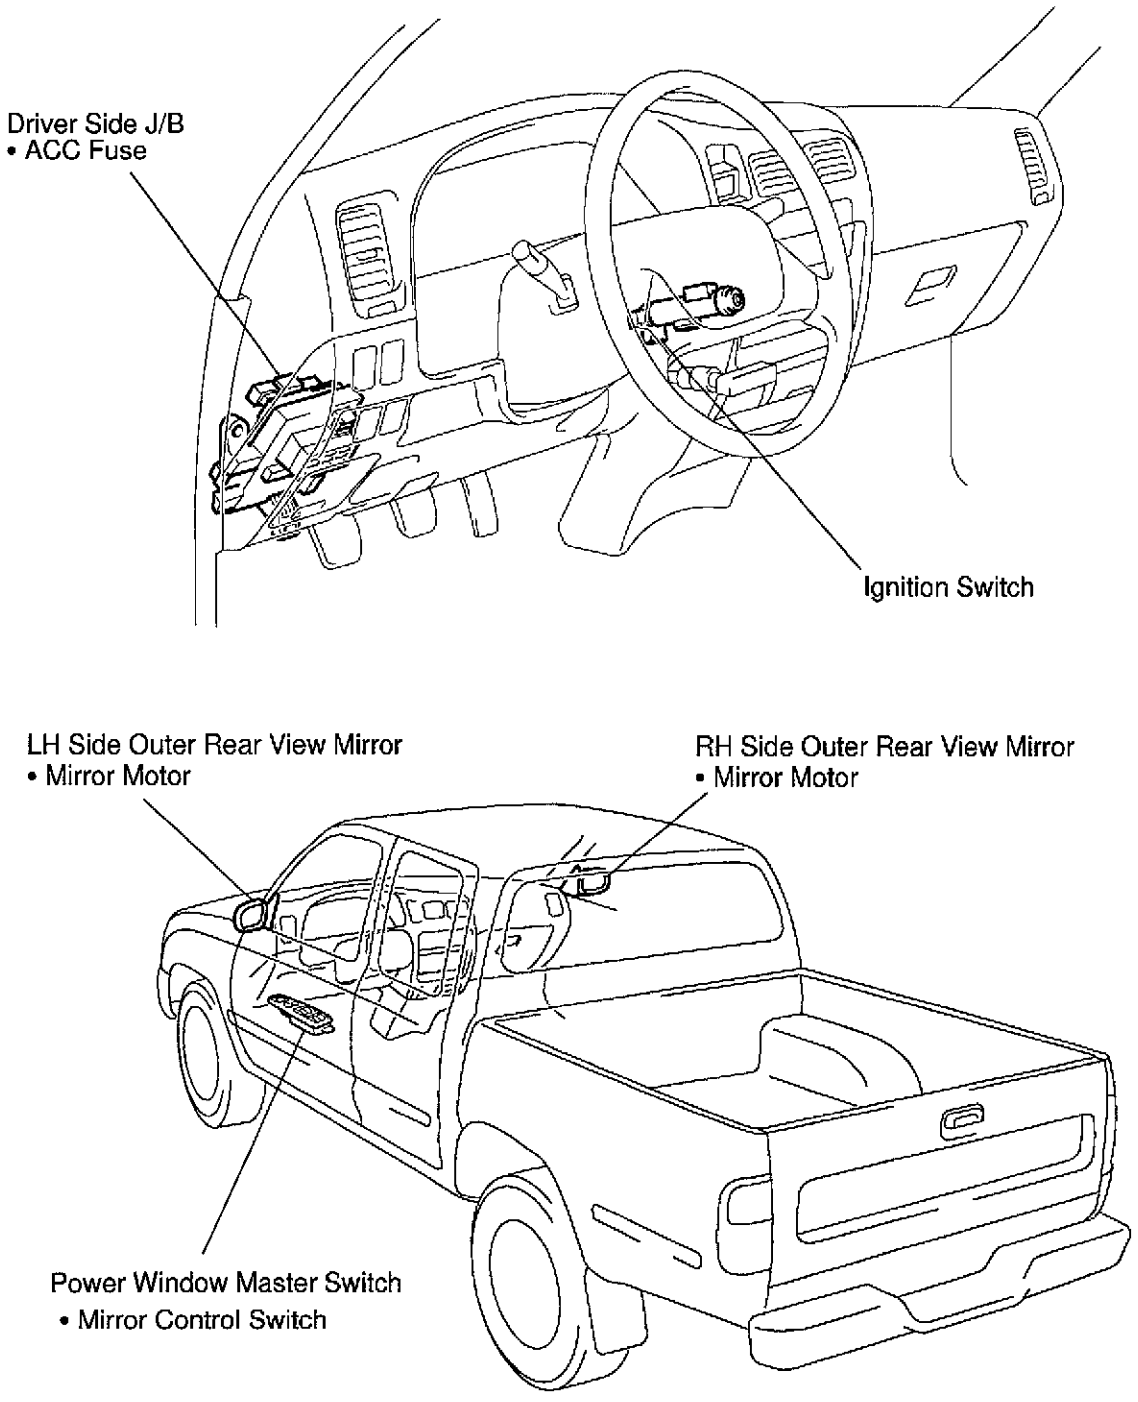

I02676

BE0SM-01

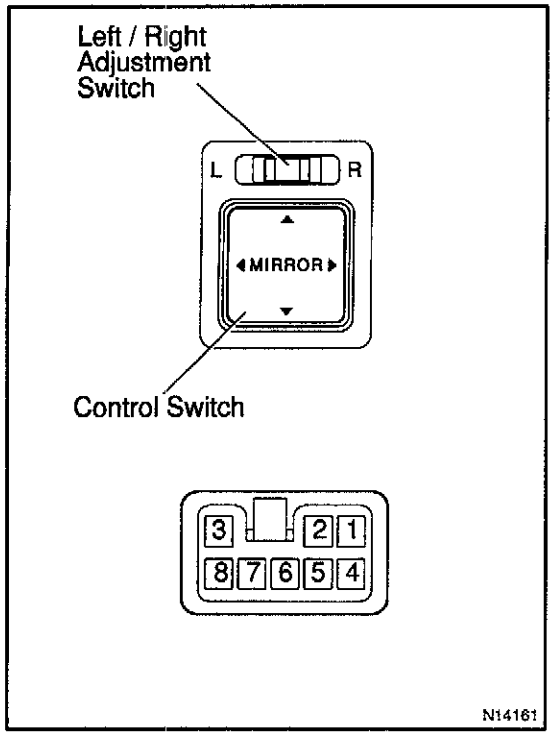

INSPECTION

1. INSPECT MIRROR SWITCH INSPECTION


Left side :

Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	2 – 3, 1 – 7	Continuity
DOWN	1 – 2, 3 – 7	Continuity
LEFT	2 – 3, 1 – 8	Continuity
RIGHT	1 – 2, 3 – 8	Continuity

Right side :


Switch position	Tester connection	Specified condition
OFF	–	No continuity
UP	2 – 3, 1 – 5	Continuity
DOWN	1 – 2, 3 – 5	Continuity
LEFT	2 – 3, 1 – 6	Continuity
RIGHT	1 – 2, 3 – 6	Continuity

If continuity is not as specified, replace the switch.

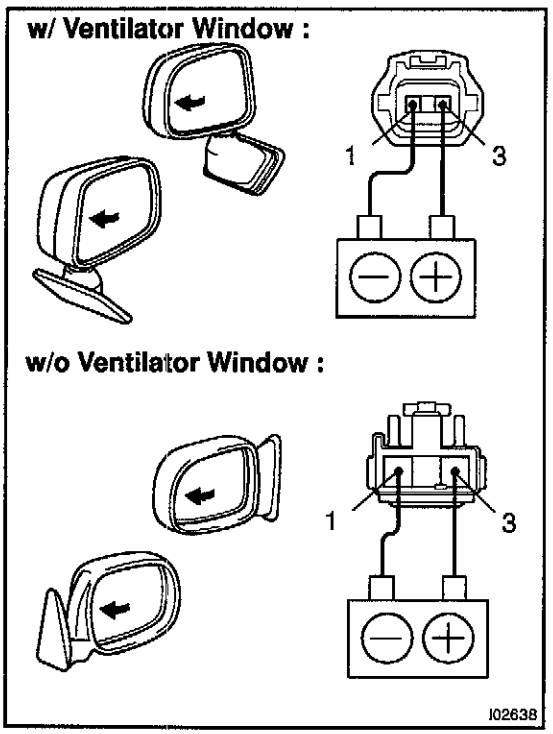


2. INSPECT MIRROR MOTOR OPERATION


(a) Connect the positive (+) lead from the battery to terminal 3 and negative (–) lead to terminal 1. Check that the mirror turns to left side.

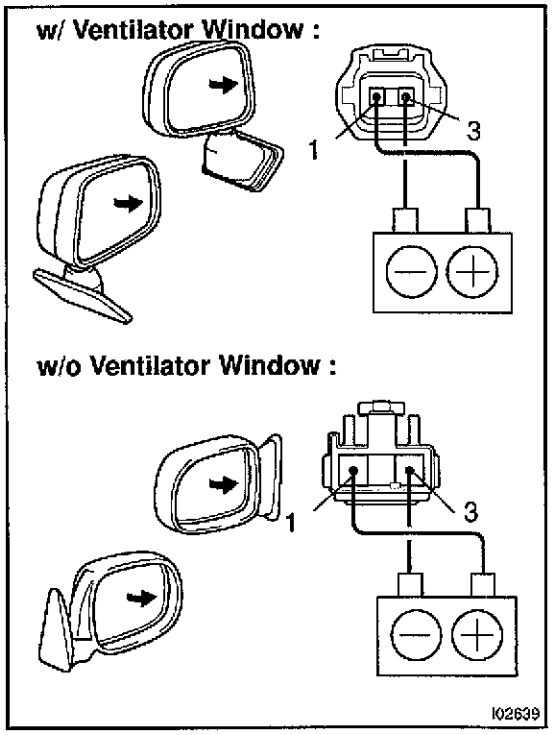

(b) Remove the polarity and check that the mirror turns to right side.

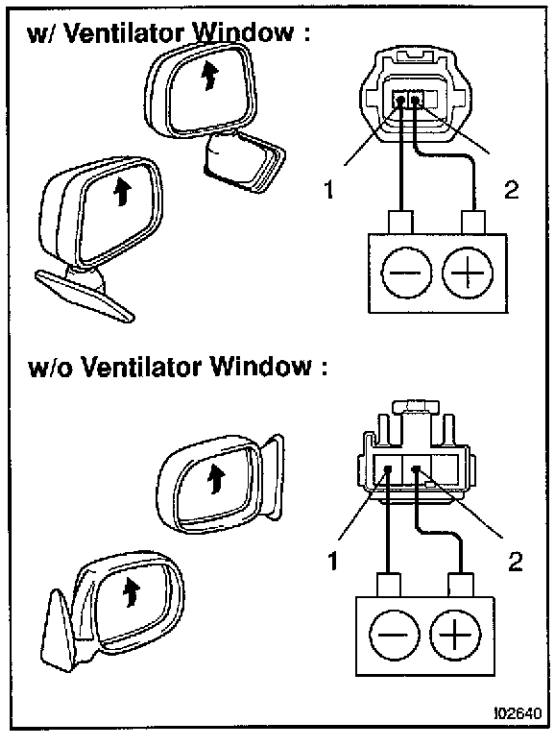

(c) Connect the positive (+) lead from the battery to terminal 2 and the negative (–) lead to terminal 3.
Check that the mirror turns upward.

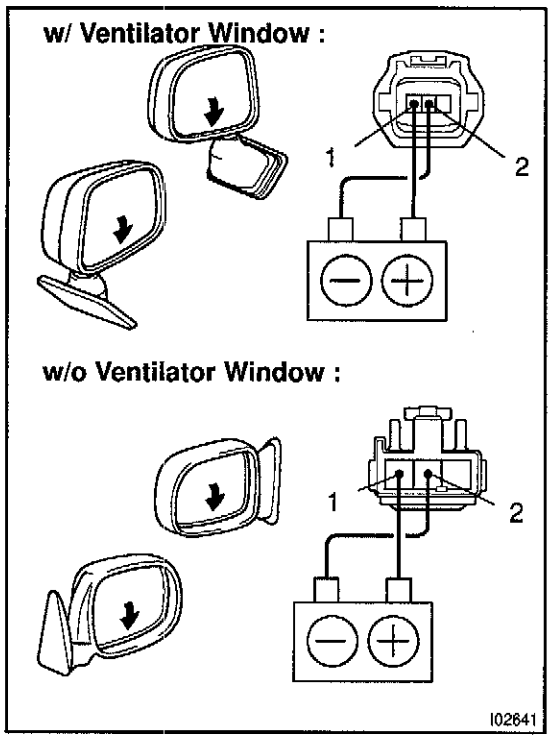

(d) Reverse the polarity, that the mirror turns downward.
If operation is not as specified, replace the mirror assembly.