
WHEEL ARCH MOULDING

COMPONENTS

BO0IF–01

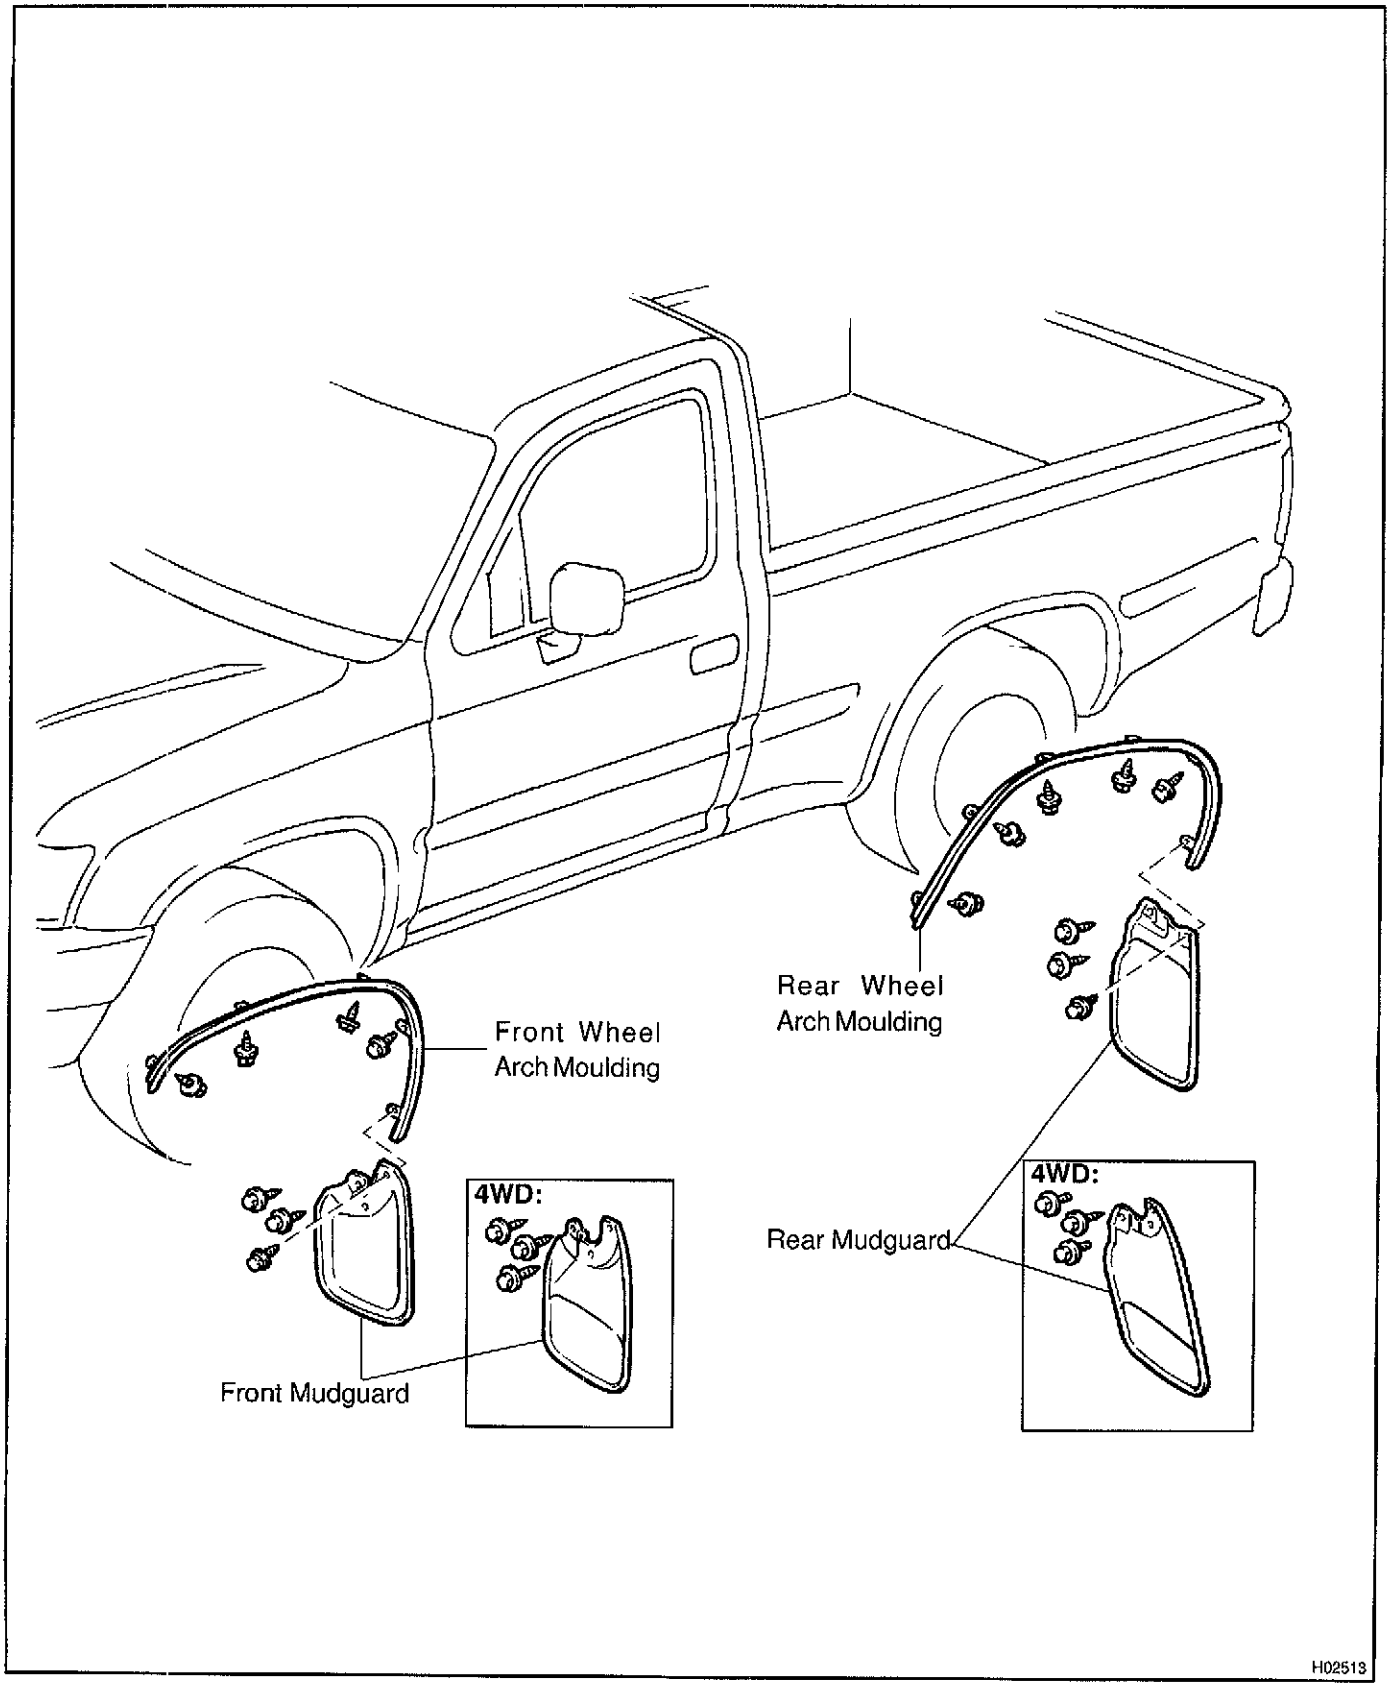

BO0IG–01

REMOVAL

1. REMOVE FRONT WHEEL ARCH MOULDING

(a) w/ Front Mudguard:
Remove the 3 screws and front mudguard.

(b) w/ Front Mudguard:
Remove the 4 screws.

(c) w/o Front Mudguard:
Remove the 5 screws.

(d) Using a screwdriver, pry up the wheel arch moulding and remove it.

HINT:

Tape the screwdriver tip before use.

2. REMOVE REAR WHEEL ARCH MOULDING

(a) w/ Rear Mudguard:
Remove the 2 bolts, screw and rear mudguard.

(b) w/ Rear Mudguard:
Remove the 5 screws.

(c) w/o Rear Mudguard:
Remove the 6 screws.

(d) Using a screwdriver, pry up the wheel arch moulding and remove it.

HINT:

Tape the screwdriver tip before use.

INSTALLATION

Installation is in the reverse order of removal (See page BO–34).