
WHEEL OPENING MOULDING

COMPONENTS

BO0II–01

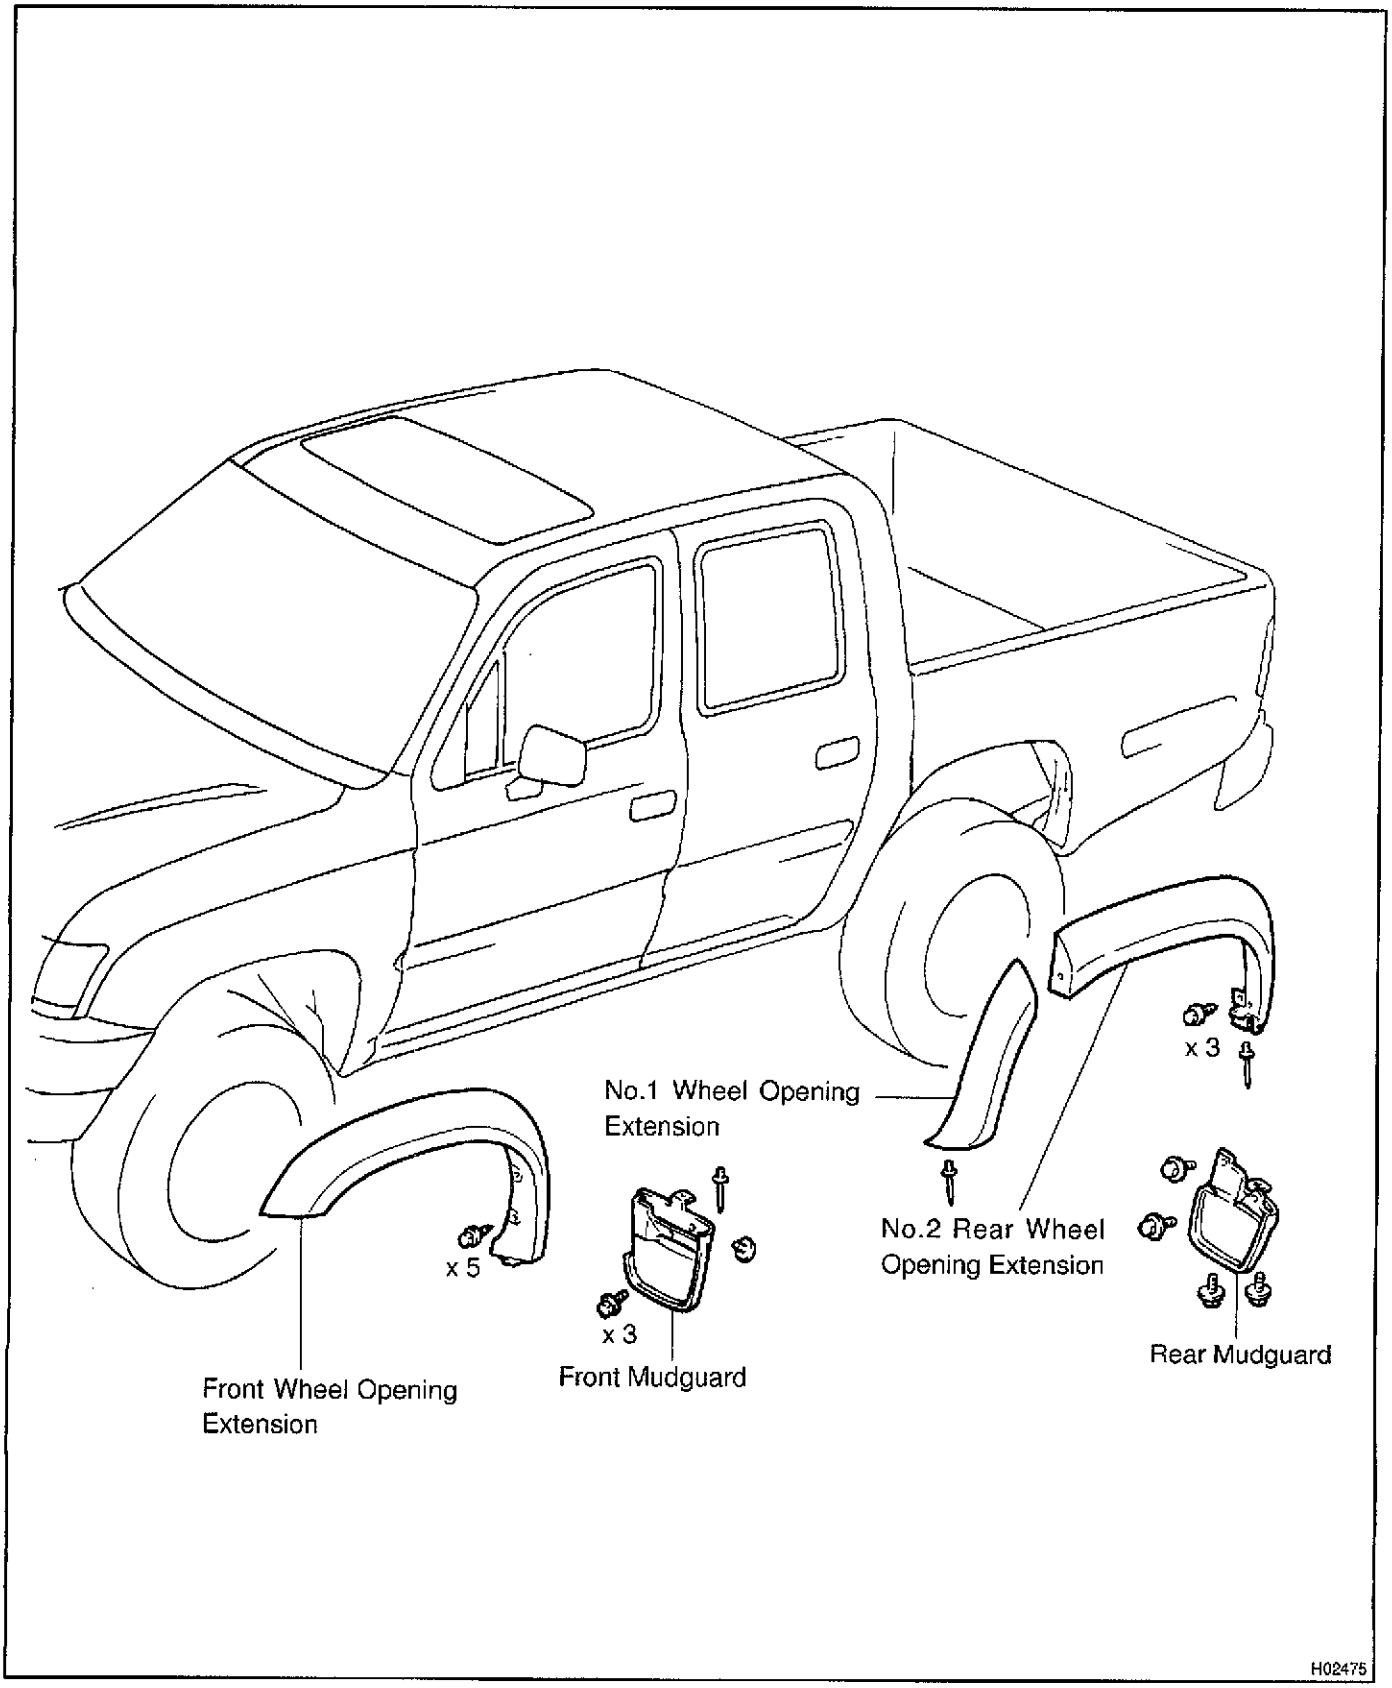

BO0IJ-01

REMOVAL

1. **w/ Side Step:**
   REMOVE SIDE STEP
   (See page BO–93)
2. **REMOVE FRONT WHEEL OPENING EXTENSION**

(a) Using a drill of less than ø 5 mm (0.20 in.), drill out the rivet heads as shown in the illustration.

CAUTION:

The cut rivet and rivet cutter will be hot, avoid touching them.


NOTICE:


- **Do not jiggle the rivet cutter while cutting.**
- **You may enlarge the rivet hole or damage the rivet cutter.**

HINT:

Do not drill the body.

(b) w/ Front Mudguard:
Remove the 3 screws, clip and front mudguard.

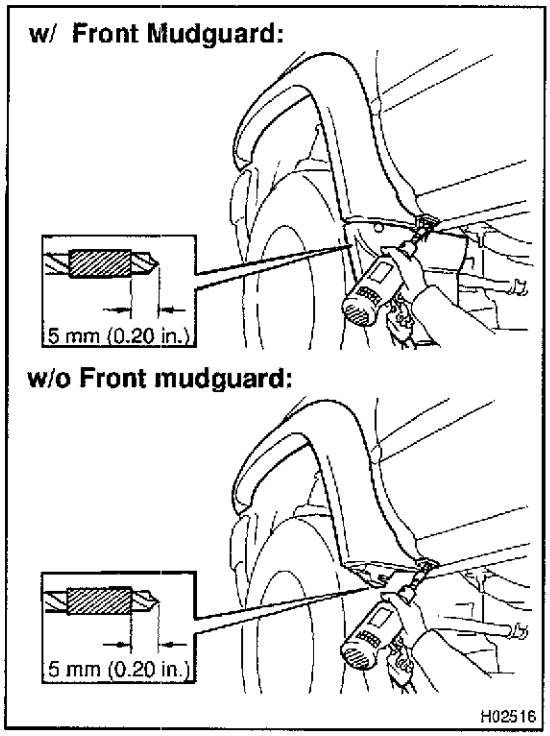

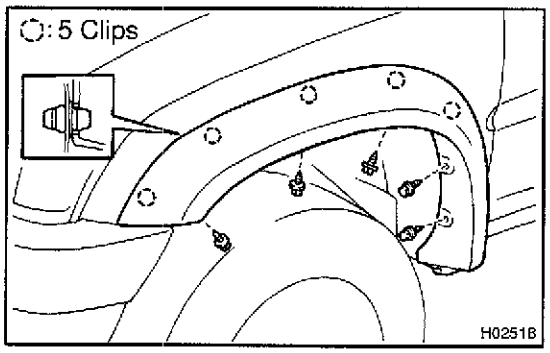


(c) Remove the 5 screws.

(d) Insert a screwdriver between the front wheel opening extension and body panel to remove the front wheel opening extension.

HINT:

Tape the screwdriver tip before use.

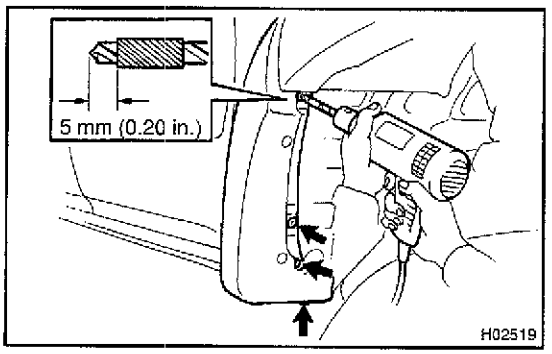

3. **REMOVE No.1 REAR WHEEL OPENING EXTENSION**

(a) Using a drill of less than ø 5 mm (0.20 in.), drill out the rivet heads as shown in the illustration.

CAUTION:


The cut rivet and rivet cutter will be hot, avoid touching them.

NOTICE:

- **Do not jiggle the rivet cutter while cutting.**
- **You may enlarge the rivet hole or damage the rivet cutter.**


HINT:

Do not drill the body.

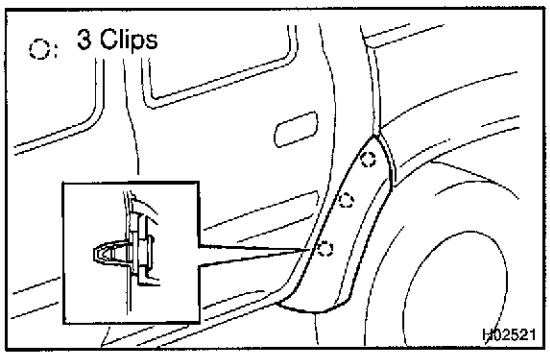

(b) Insert a screwdriver between the No.1 rear wheel opening extension and body panel to remove the No.1 rear wheel opening extension.

HINT:
Tape the screwdriver tip before use.

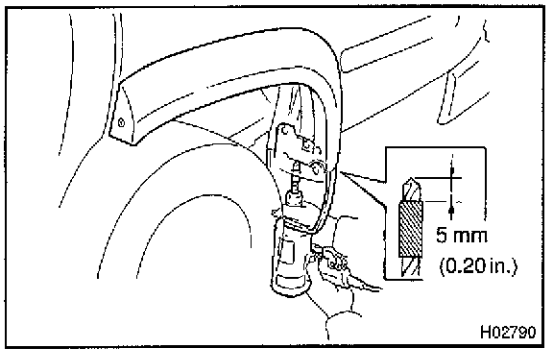

4. REMOVE No.2 REAR WHEEL OPENING EXTENSION


(a) Using a drill of less than ø 5 mm (0.20 in.), drill out the rivet heads as shown in the illustration.

CAUTION:
The cut rivet and rivet cutter will be hot, avoid touching them.

NOTICE:
- **Do not jiggle the rivet cutter while cutting.**
- **You may enlarge the rivet hole or damage the rivet cutter.**

HINT:
Do not drill the body.

(b) Remove the 4 screws and rear mudguard.

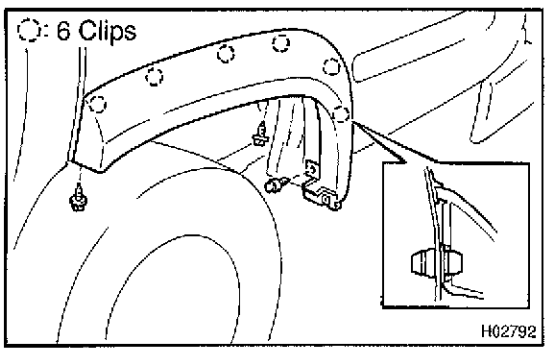


(c) Remove the 3 screws.

(d) Insert a screwdriver between the No.2 rear wheel opening extension and body panel to remove the No.2 rear wheel opening extension.

HINT:
Tape the screwdriver tip before use.

B00IK-01

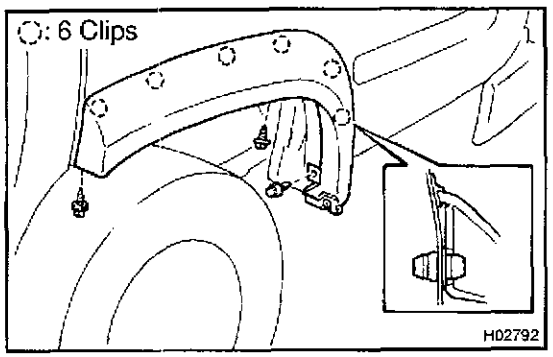


INSTALLATION


1. INSTALL No.2 REAR WHEEL OPENING EXTENSION

(a) Install the No.2 rear wheel opening extension with the 3 screws to the body panel.


(b) Install the rear mudguard with the 4 screws.

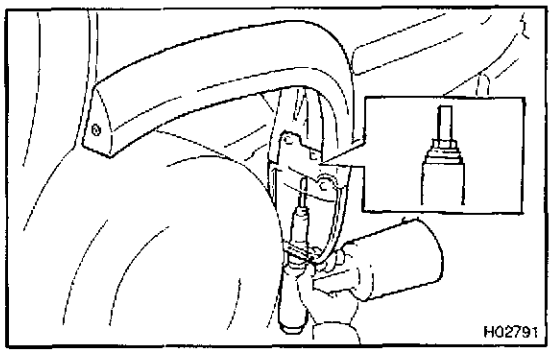

(c) Using an air riveter with nose piece, strike rivets into the body panel to install the No.2 rear wheel opening extension to the body panel as shown in the illustration.

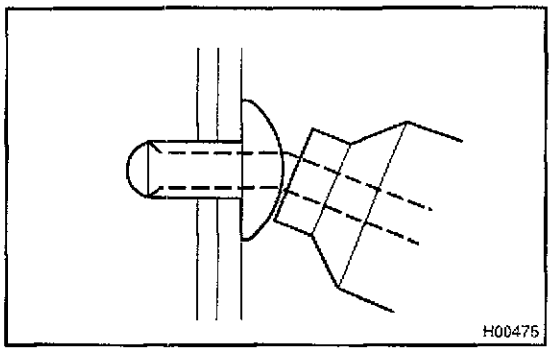


NOTICE:
If the rivet is not positioned perpendicularly it will bend the mandrel. When the trigger is then pulled, it may damage SST.

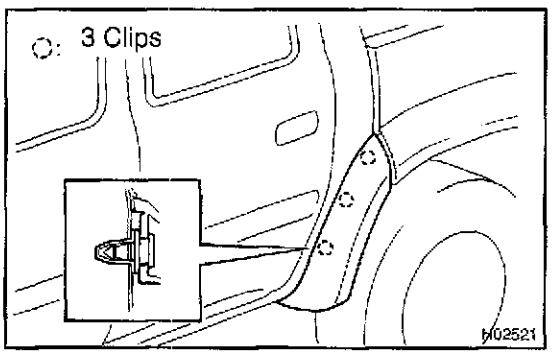


2. INSTALL No.1 REAR WHEEL OPENING EXTENSION


(a) Install the No.1 rear wheel opening extension to the body panel.

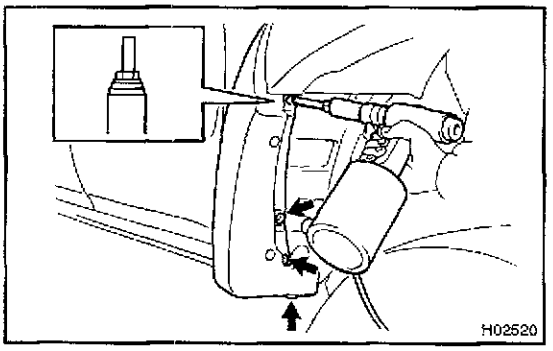

(b) Using an air riveter with nose piece, strike rivets into the body panel to install the No.1 rear wheel opening extension to the body panel as shown in the illustration.

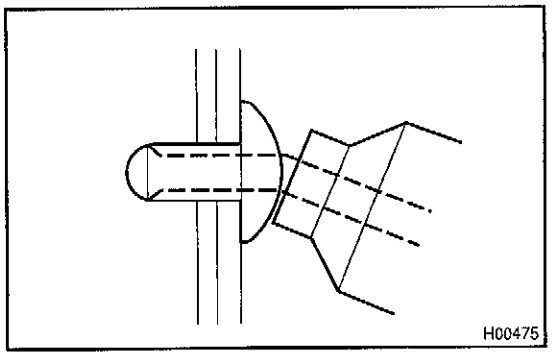


NOTICE:
If the rivet is not positioned perpendicularly it will bend the mandrel. When the trigger is then pulled, it may damage SST.

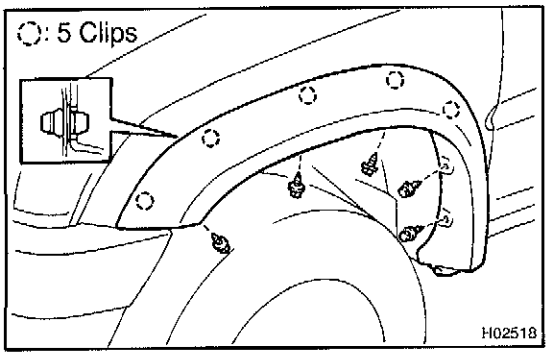

3. INSTALL FRONT WHEEL OPENING EXTENSION

(a) Install the front wheel opening extension with the 5 screws to the body panel.

(b) w/ Front Mudguard:
Install the front Mudguard with the 3 screws and clip.

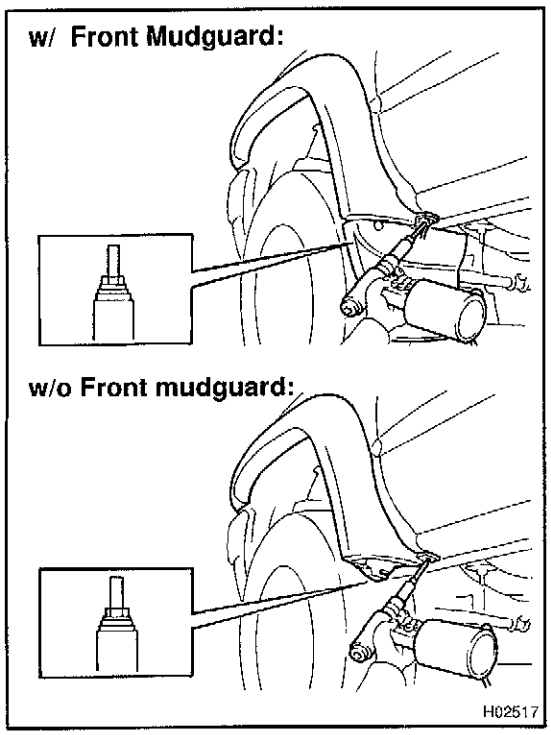

(c) Using an air riveter with nose piece, strike rivets into the body panel to install the front wheel opening extension to the body panel as shown in the illustration.

4. w/ Side Step:
INSTALL SIDE STEP
(See page BO–94)