
QUARTER WINDOW GLASS

COMPONENTS

BO0IR–01

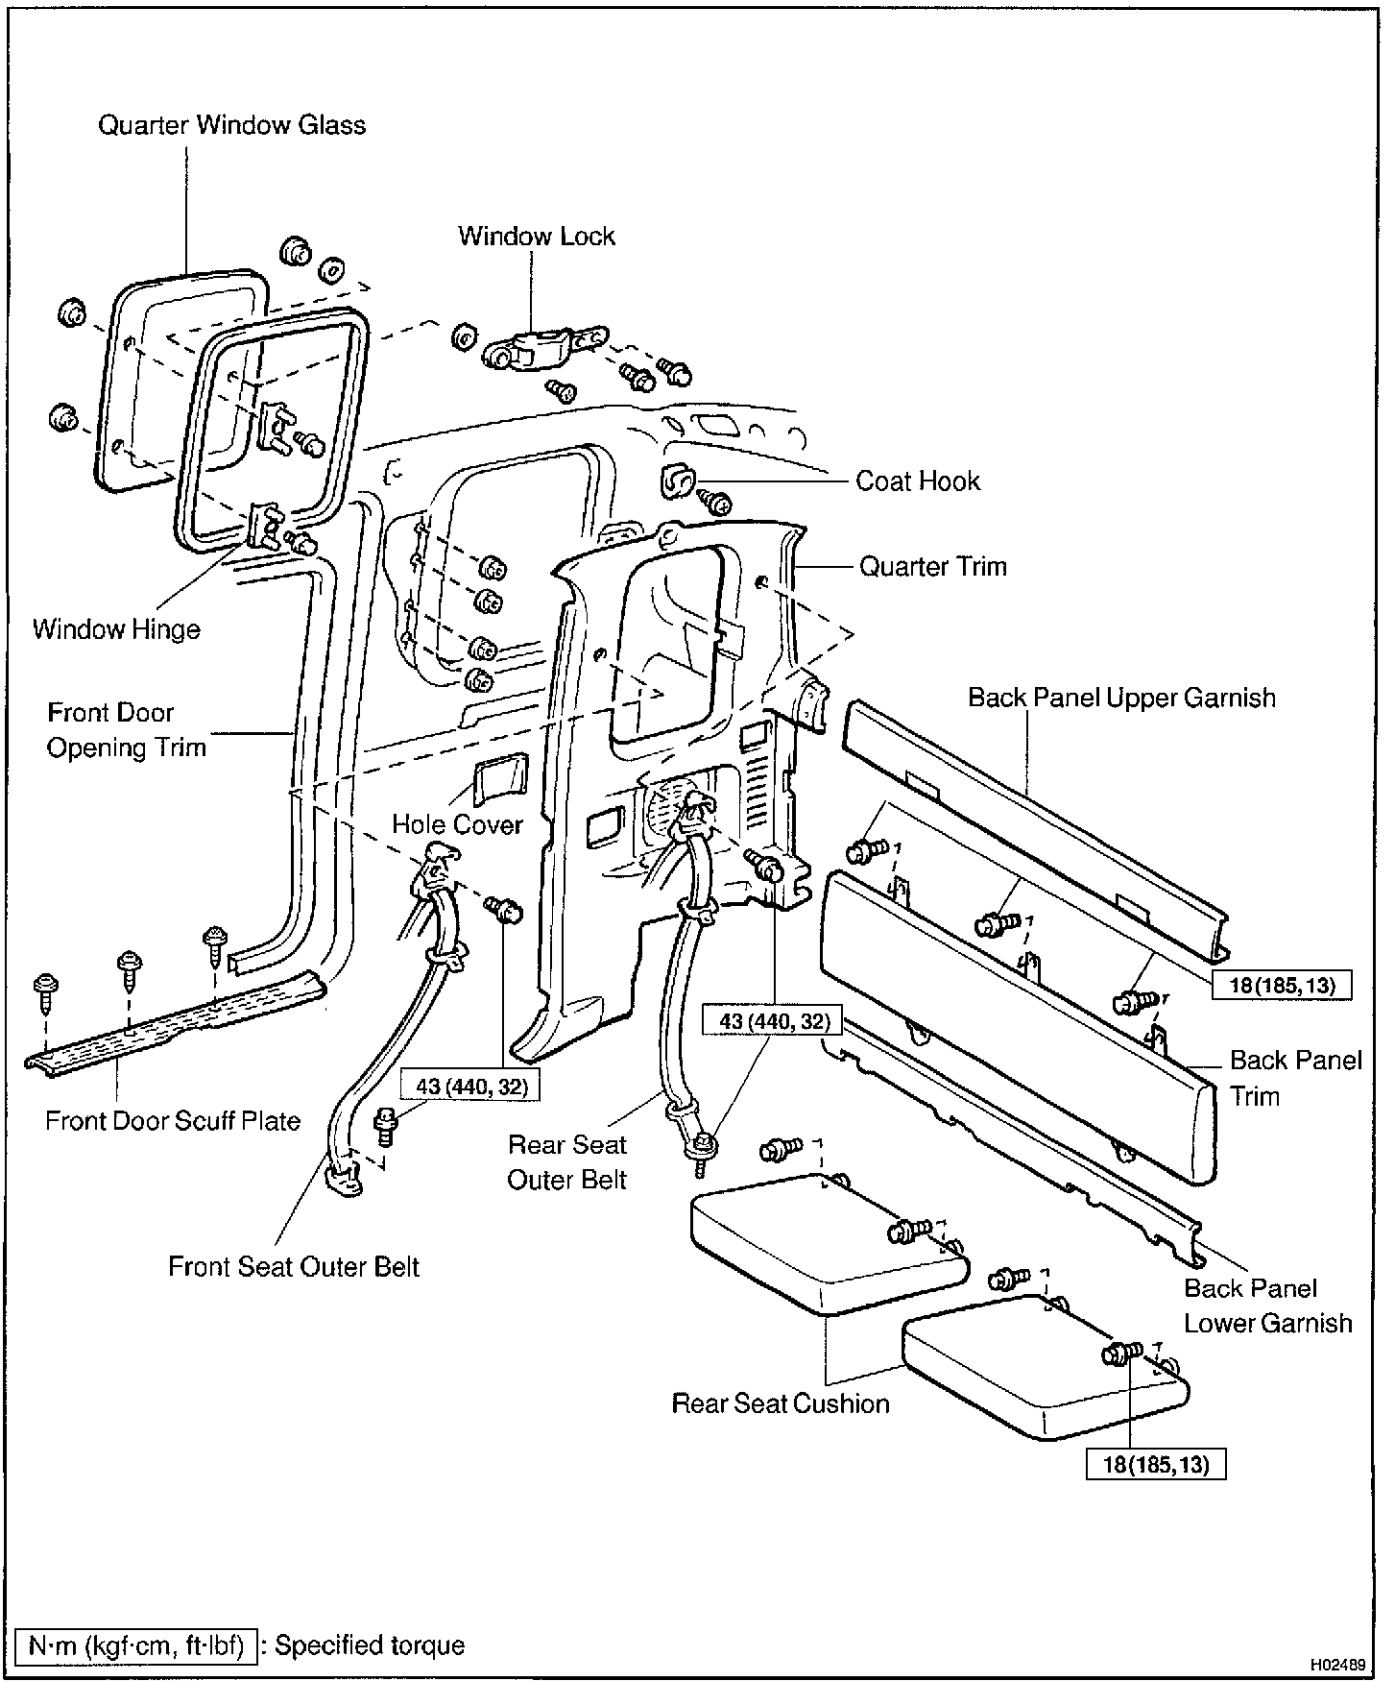


N·m (kgf·cm, ft·lbf) : Specified torque

H02489


BO01B-01

REMOVAL

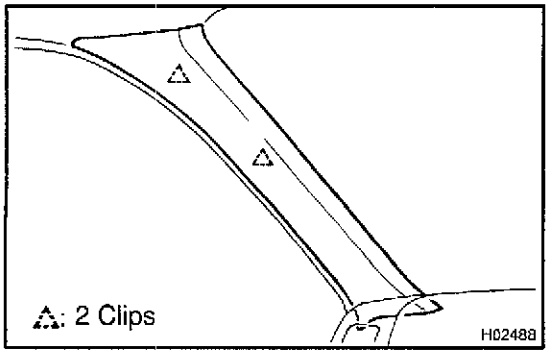

1. REMOVE THESE PARTS:

(a) Front pillar garnish
(b) Front door scuff plate
(c) Front door opening trim
(d) Coat hook

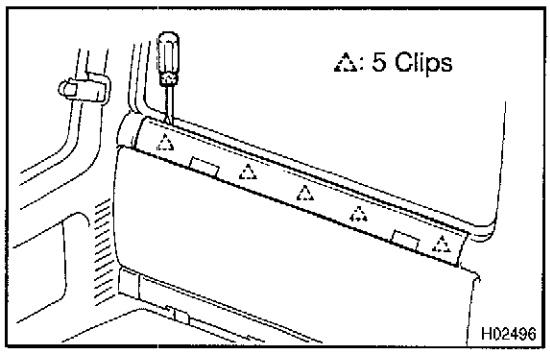


2. REMOVE BACK PANEL UPPER GARNISH

Insert a screwdriver between the back panel upper garnish and body panel to pry the back panel upper garnish.

HINT:

Tape the screwdriver tip before use.

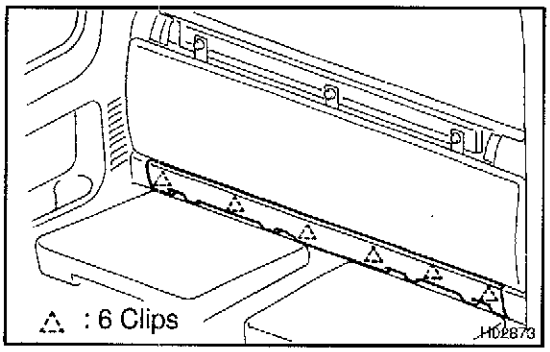


3. REMOVE BACK PANEL LOWER GARNISH

Insert a screwdriver between the back panel lower garnish.

HINT:

Tape the screwdriver tip before use.

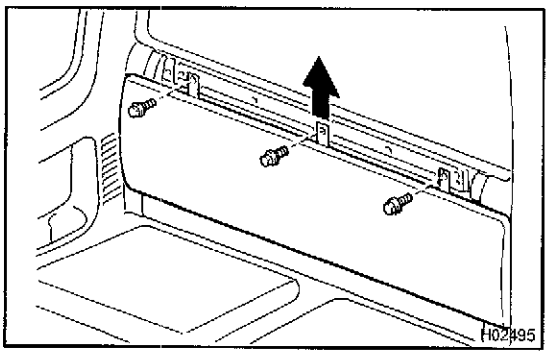

4. REMOVE BACK PANEL TRIM


Remove the 3 bolts and back panel trim.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

5. REMOVE REAR SEAT CUSHION

Remove the 4 bolts and rear seat cushions.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

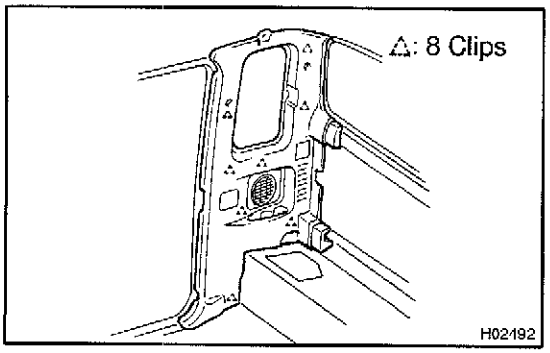

6. REMOVE QUARTER TRIM

(a) Remove the front and rear seat outer belt shoulder anchor bolts.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)


(b) Remove the front and rear seat outer belt floor anchor bolts.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

(c) Insert a screwdriver, between the quarter trim and body panel to pry the quarter trim.

HINT:

Tape the screwdriver tip before use.

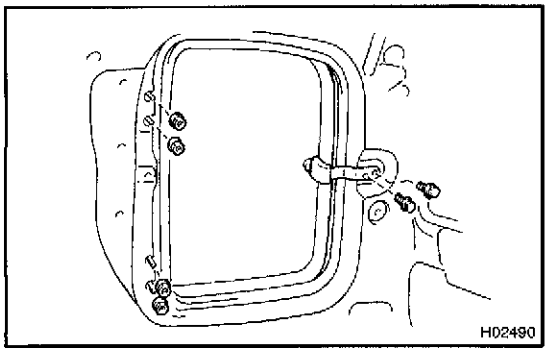

7. REMOVE QUARTER WINDOW GLASS


(a) Remove the 2 window lock set bolts.

(b) Remove the 4 window hinge set nuts.

(c) Remove the glass with window lock and window hinges.

HINT:

Be careful not to drop the glass.

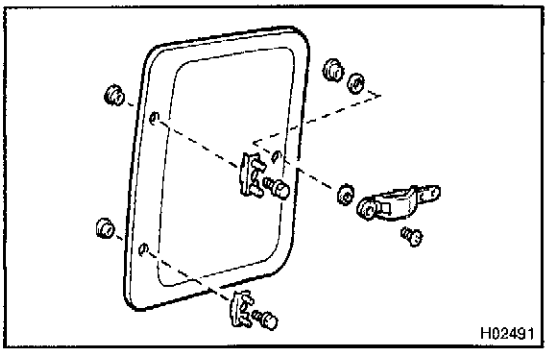

(d) Remove the screw and window lock from window glass.

(e) Remove the 2 screws and window hinges from window glass.

8. REMOVE WEATHERSTRIP

BO01T–01

INSTALLATION

Installation is in the reverse order of removal (See page BO–53).