
BACK WINDOW GLASS


COMPONENTS

BO0IU-01

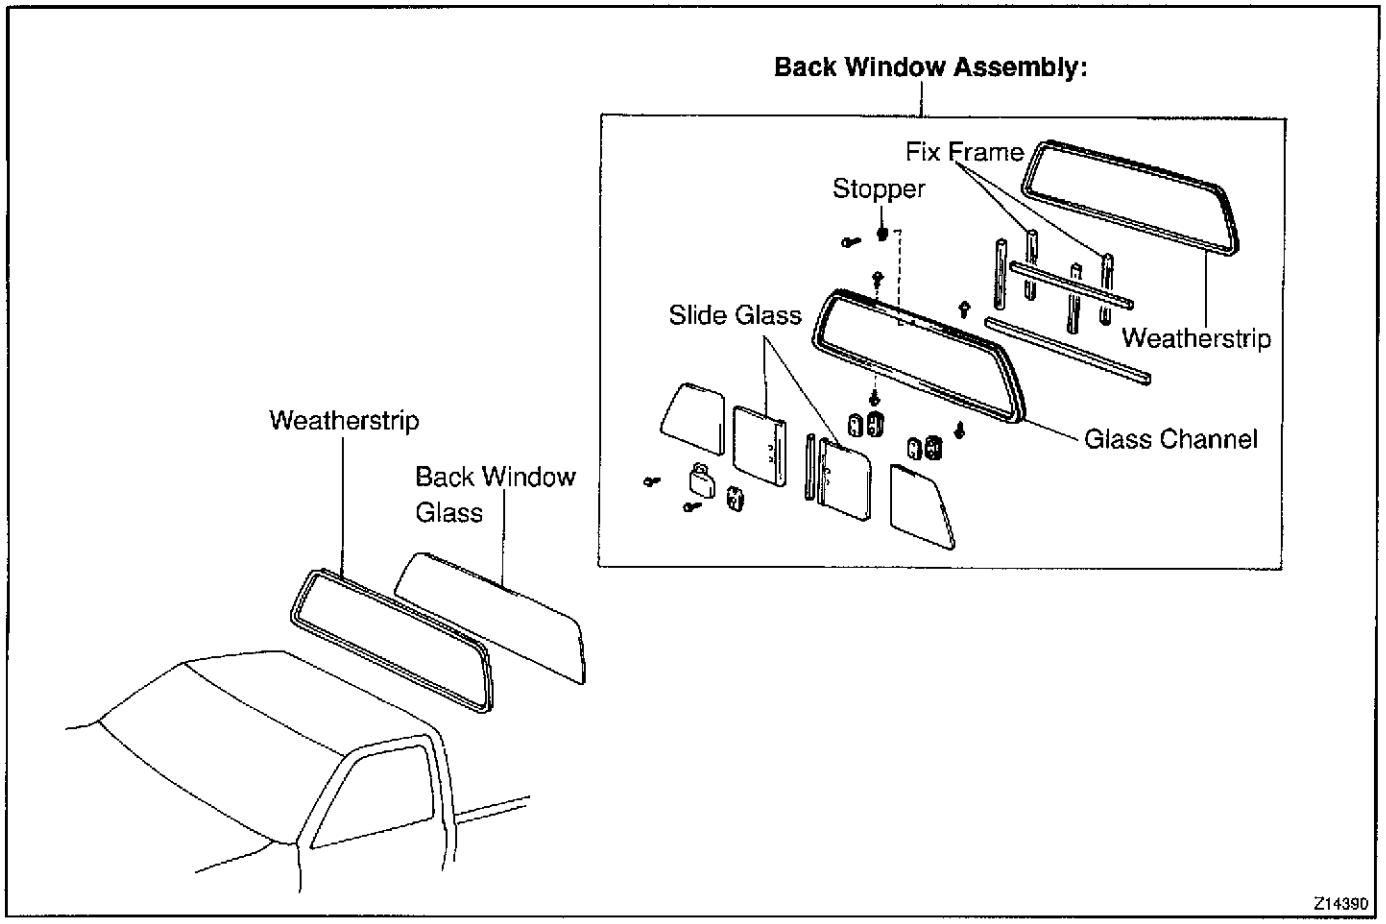

BO0N-01

REMOVAL

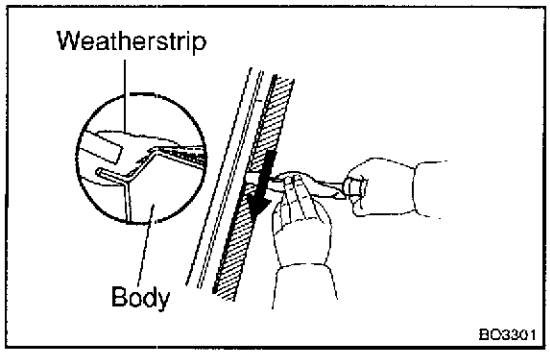

REMOVE BACK WINDOW GLASS WITH WINDOW FRAME


(a) Using a screwdriver, loosen the weatherstrip from the body.

NOTICE:

Be careful not to damage the body paint.

HINT:


Tape the screwdriver tip before use.

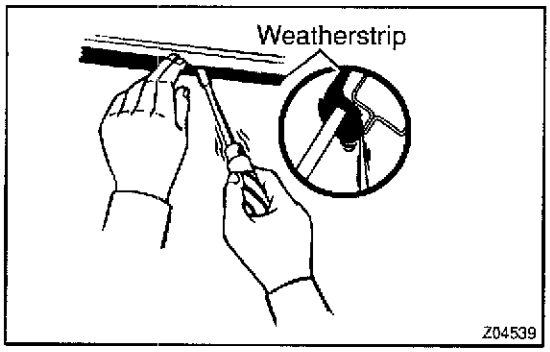

(b) Pry the lip of the weatherstrip outward from the interior part of the body flange.

(c) Pull the glass outwards, and remove it with the weatherstrip.

BO0IW–01

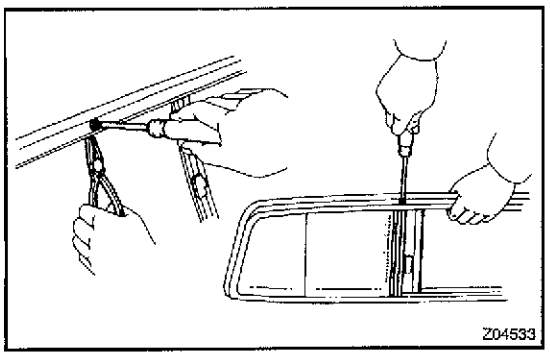


DISASSEMBLY

SLIDE GLASS TYPE:

1. REMOVE THESE PARTS:


(a) Stopper

(b) Fix frames

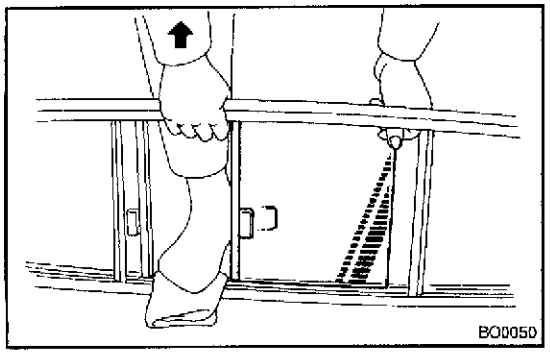


2. REMOVE SLIDE GLASS

Pull apart the channels and remove the 2 slide glasses at the center area of the glass channel.

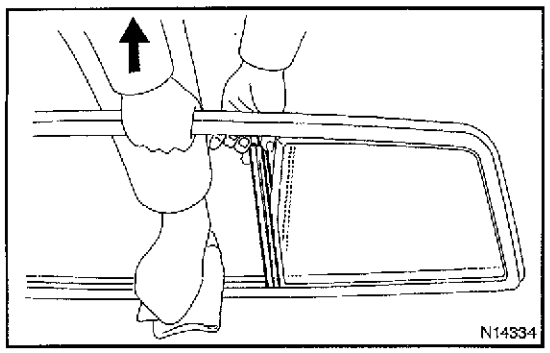

3. REMOVE NON–SLIDE GLASS

(a) Pull apart the channels and remove the 2 fix frames, as shown.

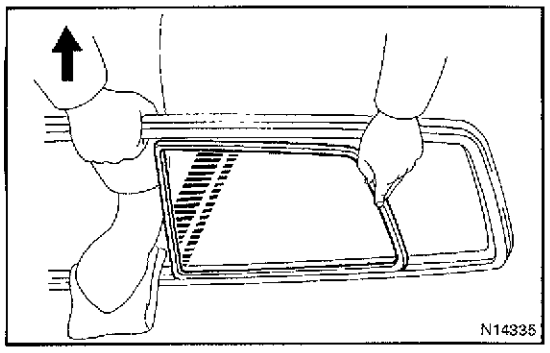

(b) Pull apart the channels and remove the 2 non–slide glasses, as shown.

HINT:

At the time of reassembly, please refer to the following item.


Apply soapy water to the contact surface of the weatherstrip and glass channel flange.

REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BO–58).


BO0IY-01

INSTALLATION

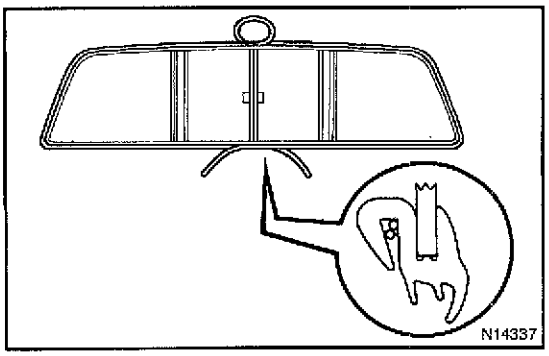


1. INSTALL BACK WINDOW GLASS WITH WINDOW FRAME

(a) Install the cord to the frame, as shown.

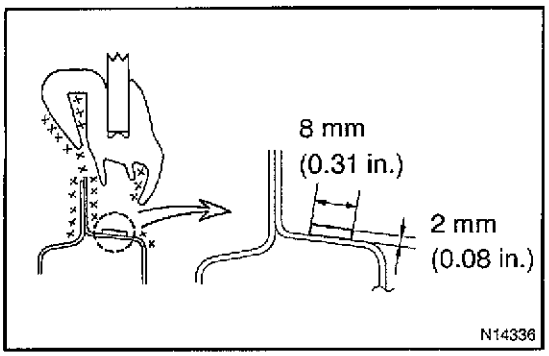


(b) Apply soapy water to the contact surface of the body and the weatherstrip lip.

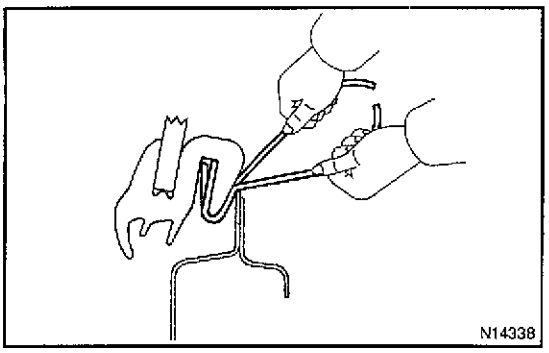

(c) Hold the glass in position on the body.

(d) Install the glass by pulling the cord from the room side, while pushing on the outside of the weatherstrip with your open hand.

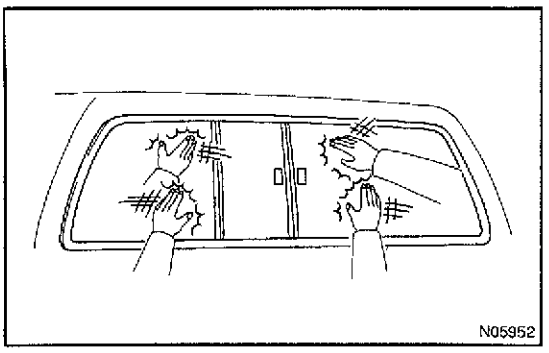

(e) To make the glass fit in place, tap from the out side with your open hand.

2. INSPECT FOR LEAKAGE AND REPAIR

(a) Do a leakage test after the hardening time has elapsed.

(b) Seal any leakage with sealant.

Part No. 08833–00030 or equivalent