
INSTRUMENT PANEL


COMPONENTS

BO0J2-01

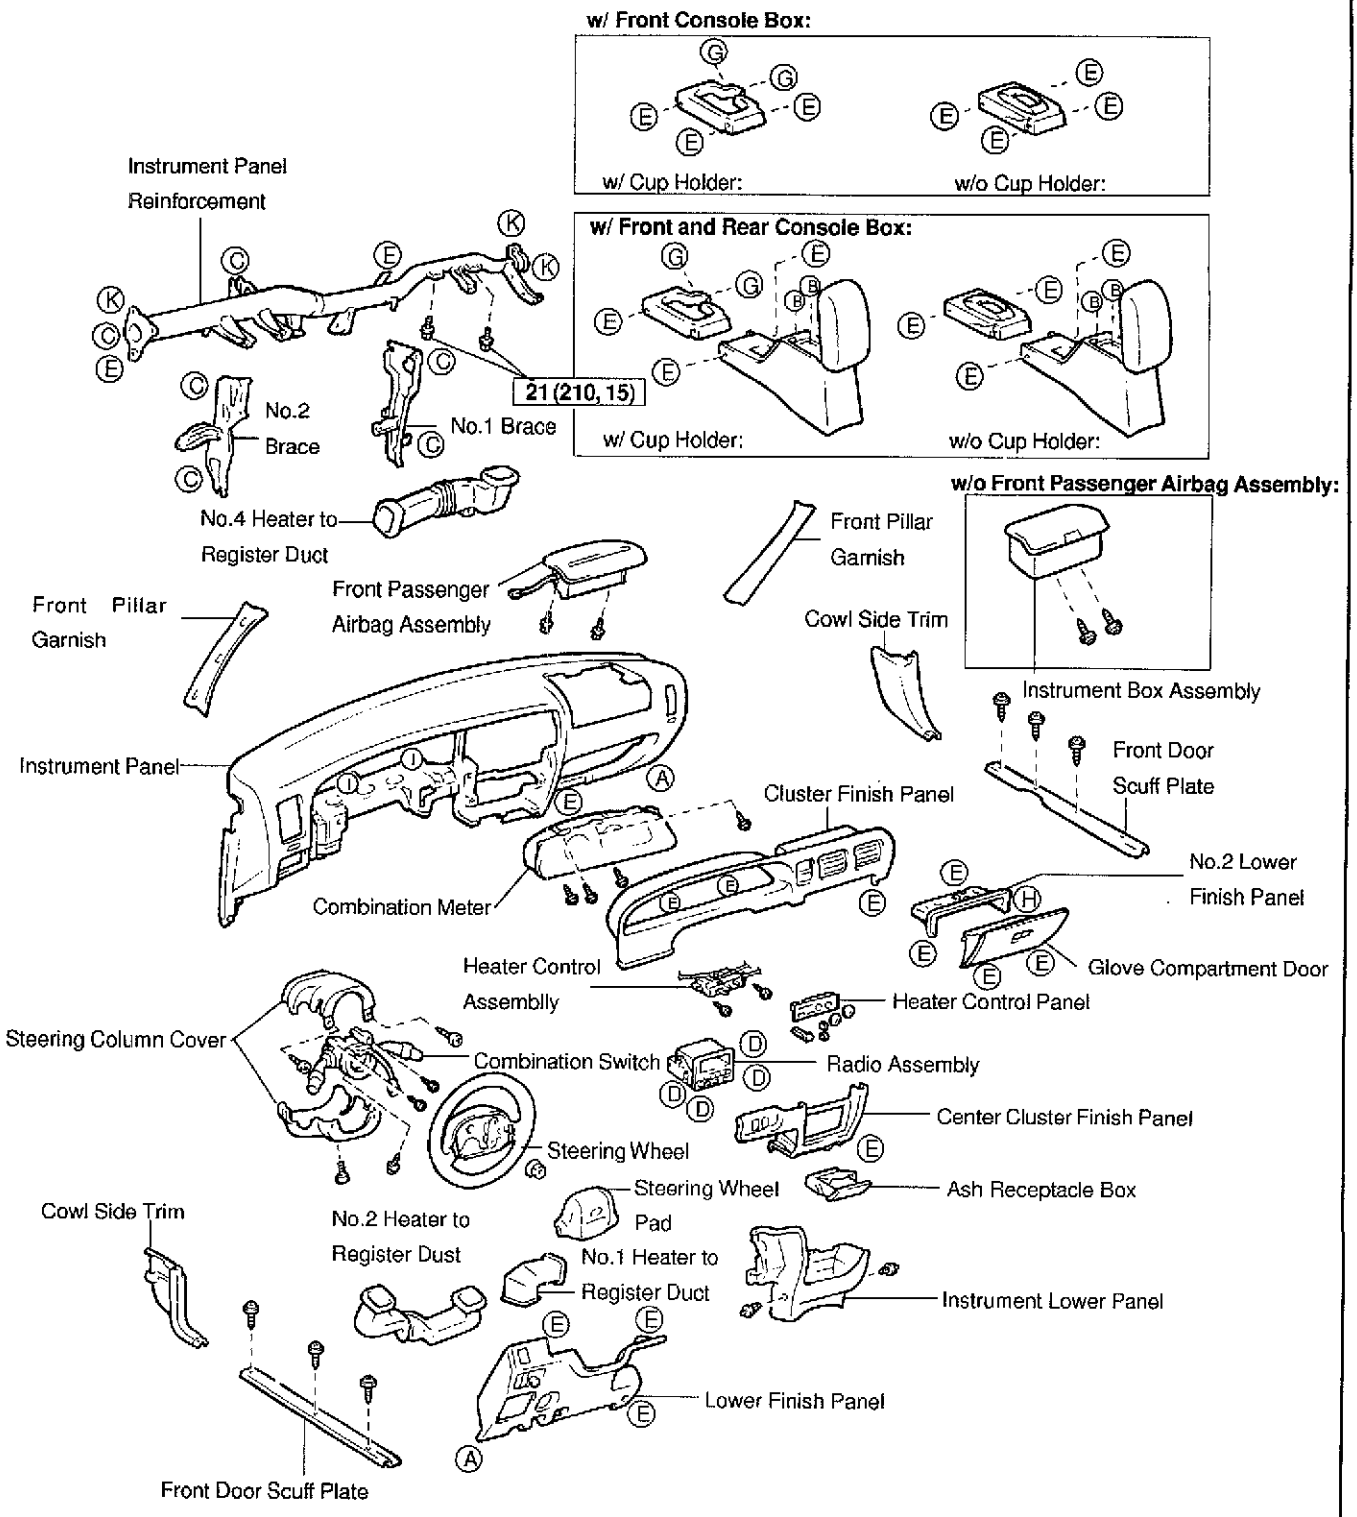







N·m (kgf·cm, ft·lbf): Specified torque

H02494

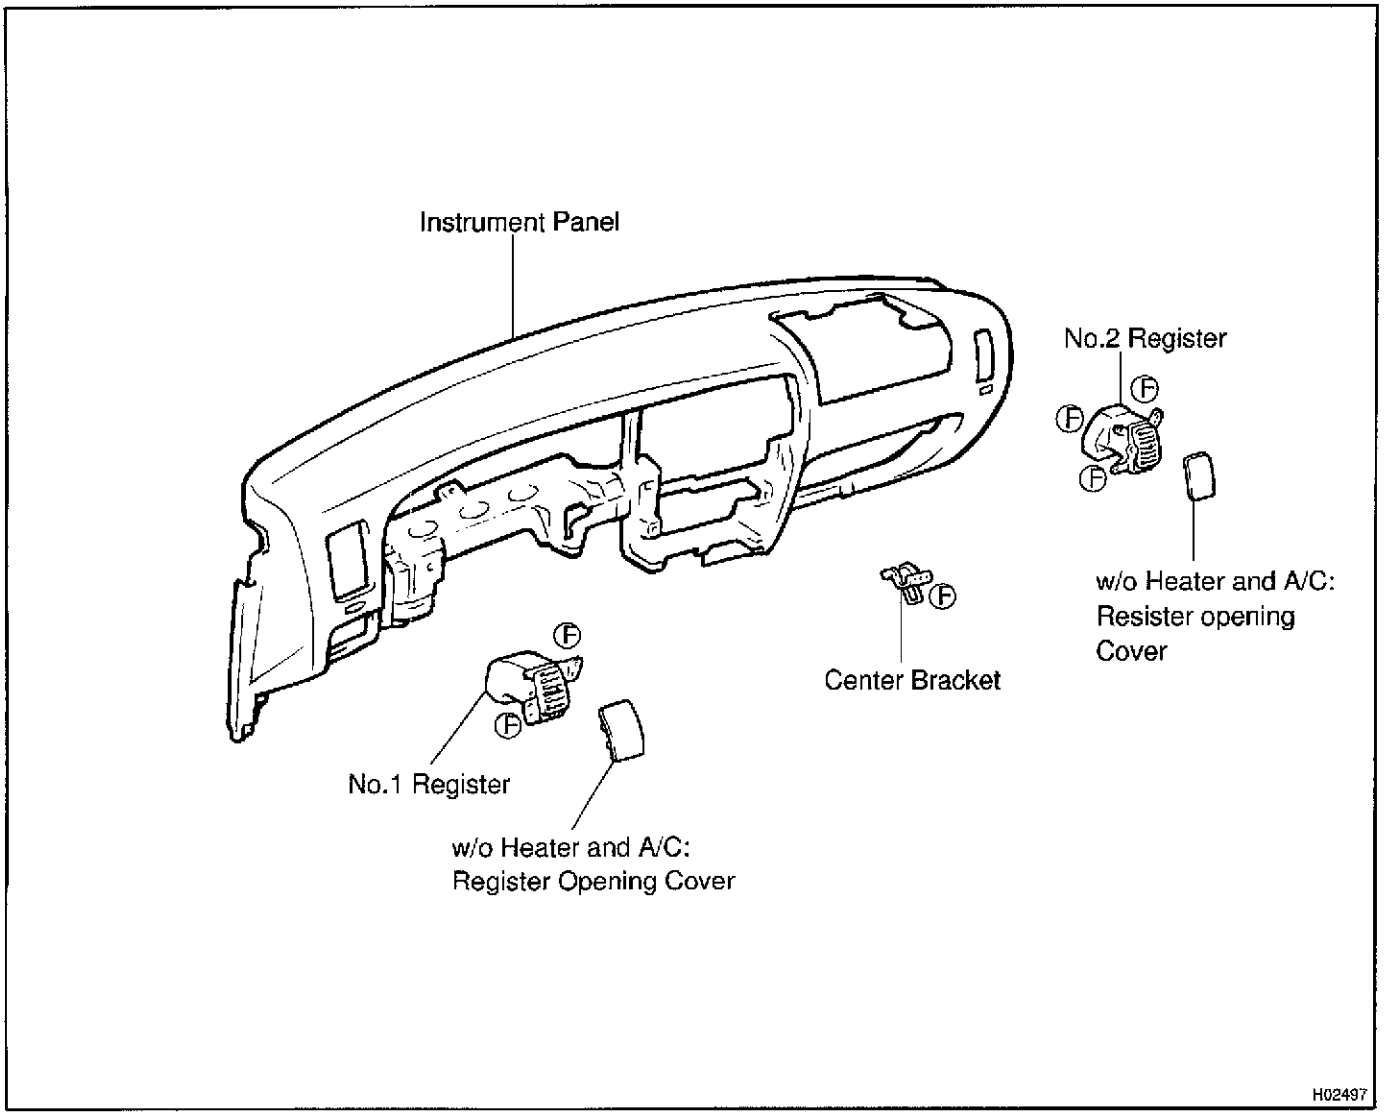
Instrument Panel
No.2 Register
w/o Heater and A/C:
Resister opening
Cover
Center Bracket
No.1 Register
w/o Heater and A/C:
Register Opening Cover
H02497

HINT:
Screw shapes and sizes are indicated in the table below. The codes (A–K) correspond to those indicated on the previous pages.


mm (in.)

	Shape	Size		Shape	Size		Shape	Size
Ⓐ		ø = 6 (0.24) L = 22 (0.87)	Ⓑ		ø = 6 (0.24) L = 18 (0.71)	Ⓒ		ø = 8 (0.31) L = 18 (0.71)
Ⓓ		ø = 5 (0.20) L = 18 (0.70)	Ⓔ		ø = 5.22 (0.2055) L = 16 (0.63)	Ⓕ		ø = 5 (0.20) L = 14 (0.55)
Ⓖ		ø = 6 (0.24) L = 16 (0.63)	Ⓗ		ø = 6 (0.24) L = 20 (0.79)	Ⓘ		ø = 6 (0.24)
Ⓙ		ø = 6 (0.24)	Ⓚ		ø = 8 (0.31)			


H02804

BO0J9-01


REMOVAL

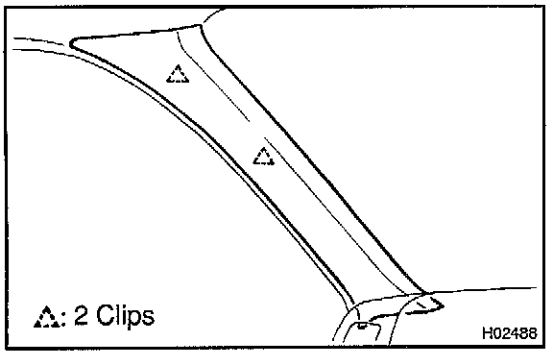

1. **REMOVE THESE PARTS:**
(a) Front pillar garnishes
(b) Front door scuff plates
(c) Cowl side trims
2. **REMOVE STEERING WHEEL (See page SR–17)**
3. **REMOVE THESE PARTS:**
(a) Steering column covers (See page SR–17)
(b) Combination switch

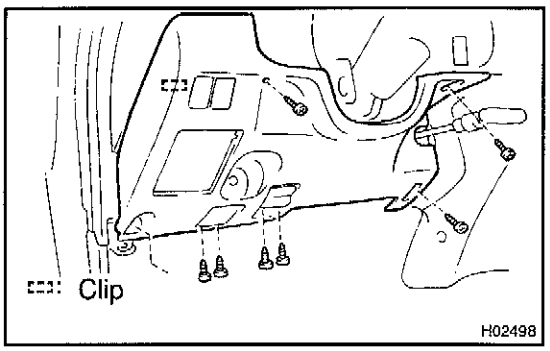


4. **REMOVE LOWER FINISH PANEL**
(a) w/ Choke:
Remove the choke knob.
(b) Remove the 2 screws and hood lock release lever.
(c) Remove the 2 screws and fuel lid opener.
(d) Remove the bolt and 3 screws and lower finish panel then disconnect the connectors.
5. **REMOVE No.2 HEATER TO REGISTER DUCT**
6. **REMOVE No.1 HEATER TO REGISTER DUCT**
7. **REMOVE STEERING COLUMN (See page SR–17)**

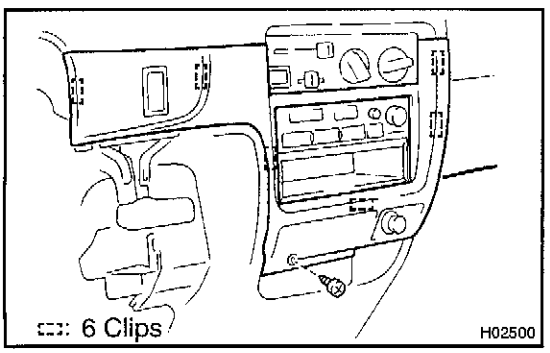

8. **REMOVE CENTER CLUSTER FINISH PANEL**
(a) Remove the ash receptacle box.
(b) Remove a screw.
(c) Using a screwdriver, remove the center cluster finish panel, then disconnect the connectors.

HINT:
Tape the screwdriver tip before use.

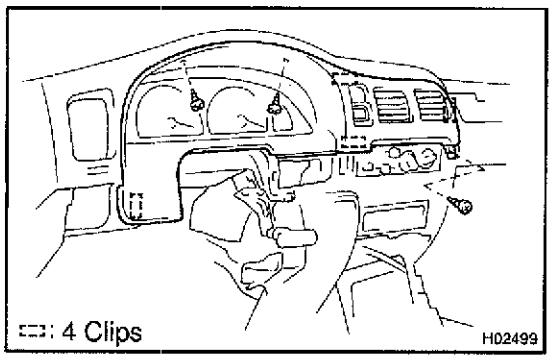

9. REMOVE CLUSTER FINISH PANEL

(a) Remove the 3 screws.


(b) Using a screwdriver, remove the cluster finish panel, then disconnect the connectors.

HINT:

Tape the screwdriver tip before use.


10. REMOVE GLOVE COMPARTMENT DOOR

Remove the 2 screws and glove compartment door.

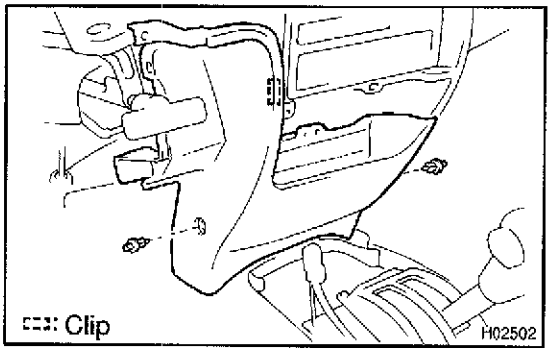

11. REMOVE LOWER INSTRUMENT COVER

Remove the 2 clips and lower instrument cover.

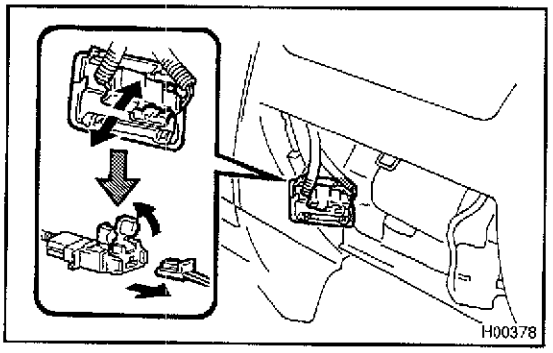

12. w/ Front Passenger Airbag Assembly: DISCONNECT FRONT PASSENGER AIRBAG ASSEMBLY CONNECTOR

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

(a) Using a screwdriver, remove the No.1 under cover.

HINT:

Tape the screwdriver tip before use.


(b) Pull up and disconnect the front passenger airbag assembly connector.

13. REMOVE No.2 LOWER FINISH PANEL

Remove the 3 screws and No.2 lower finish panel, then disconnect the connector.

14. REMOVE No.4 HEATER TO REGISTER DUCT

Remove the screw and No.4 heater to register duct.

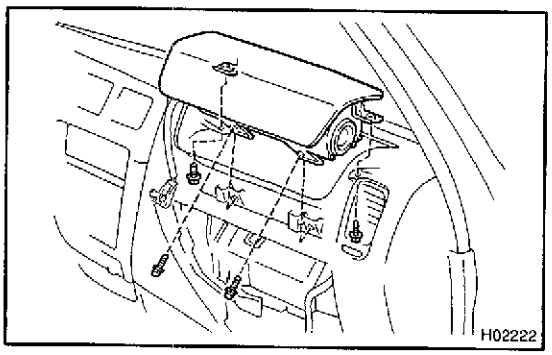

15. w/ Front Passenger Airbag Assembly: REMOVE PASSENGER AIRBAG ASSEMBLY

Remove the 4 bolts and front passenger airbag assembly.

Torque:


M8 bolt: 21 N·m (210 kgf-cm, 15 ft·lbf)

CAUTION:


- **Do not store the front passenger airbag assembly with the airbag deployment side facing down.**
- **Never disassemble the front passenger airbag assembly.**

16. w/o Front Passenger Airbag Assembly:
REMOVE INSTRUMENT PANEL BOX ASSEMBLY
Remove the 2 bolts and instrument panel box assembly.

17. REMOVE THESE PARTS:
(a) w/ Heater or A/C:
Heater control assembly
(See page AC–103)
(b) w/ Radio:
Radio assembly
(c) Combination meter
(d) w/ Rear Console Box:
Rear console box
(e) w/ Front Console Box:
Front console box

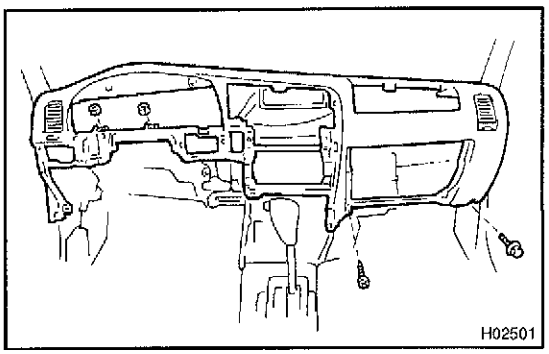

18. REMOVE INSTRUMENT PANEL
(a) Remove the bolt, 2 nuts and screw.
(b) Disconnect the connectors and remove the instrument panel.

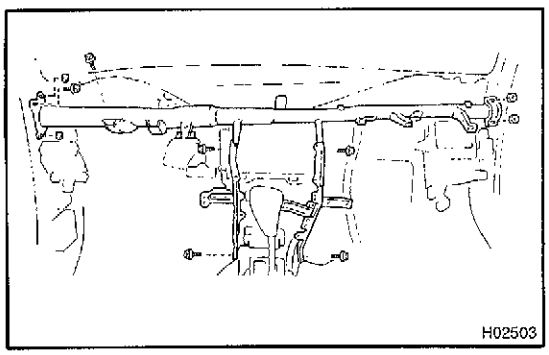

19. REMOVE INSTRUMENT PANEL REINFORCEMENT
(a) Disconnect the connectors.
(b) Remove the 2 bolts and No.1 brace.
(c) Remove the 2 bolts and No.2 brace.
(d) Remove the 2 bolts, 4 nuts and instrument panel reinforcement.

BO0JA-01

DISASSEMBLY

1. **w/ Heater or A/C:**
   REMOVE No.1 REGISTER

Remove the 2 screws and No.1 register.

2. **w/ Heater or A/C:**
   REMOVE No.2 REGISTER

Remove the 3 screws and No.2 register.

3. **w/o Heater and A/C:**
   REGISTER OPENING COVERS
4. **REMOVE CENTER BRACKET**

Remove the screw and center bracket.

REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BO–73).

BO0J6–01

INSTALLATION

Installation is in the reverse order of removal (See page BO–70).