
TAIL GATE

COMPONENTS

BO0J7–01

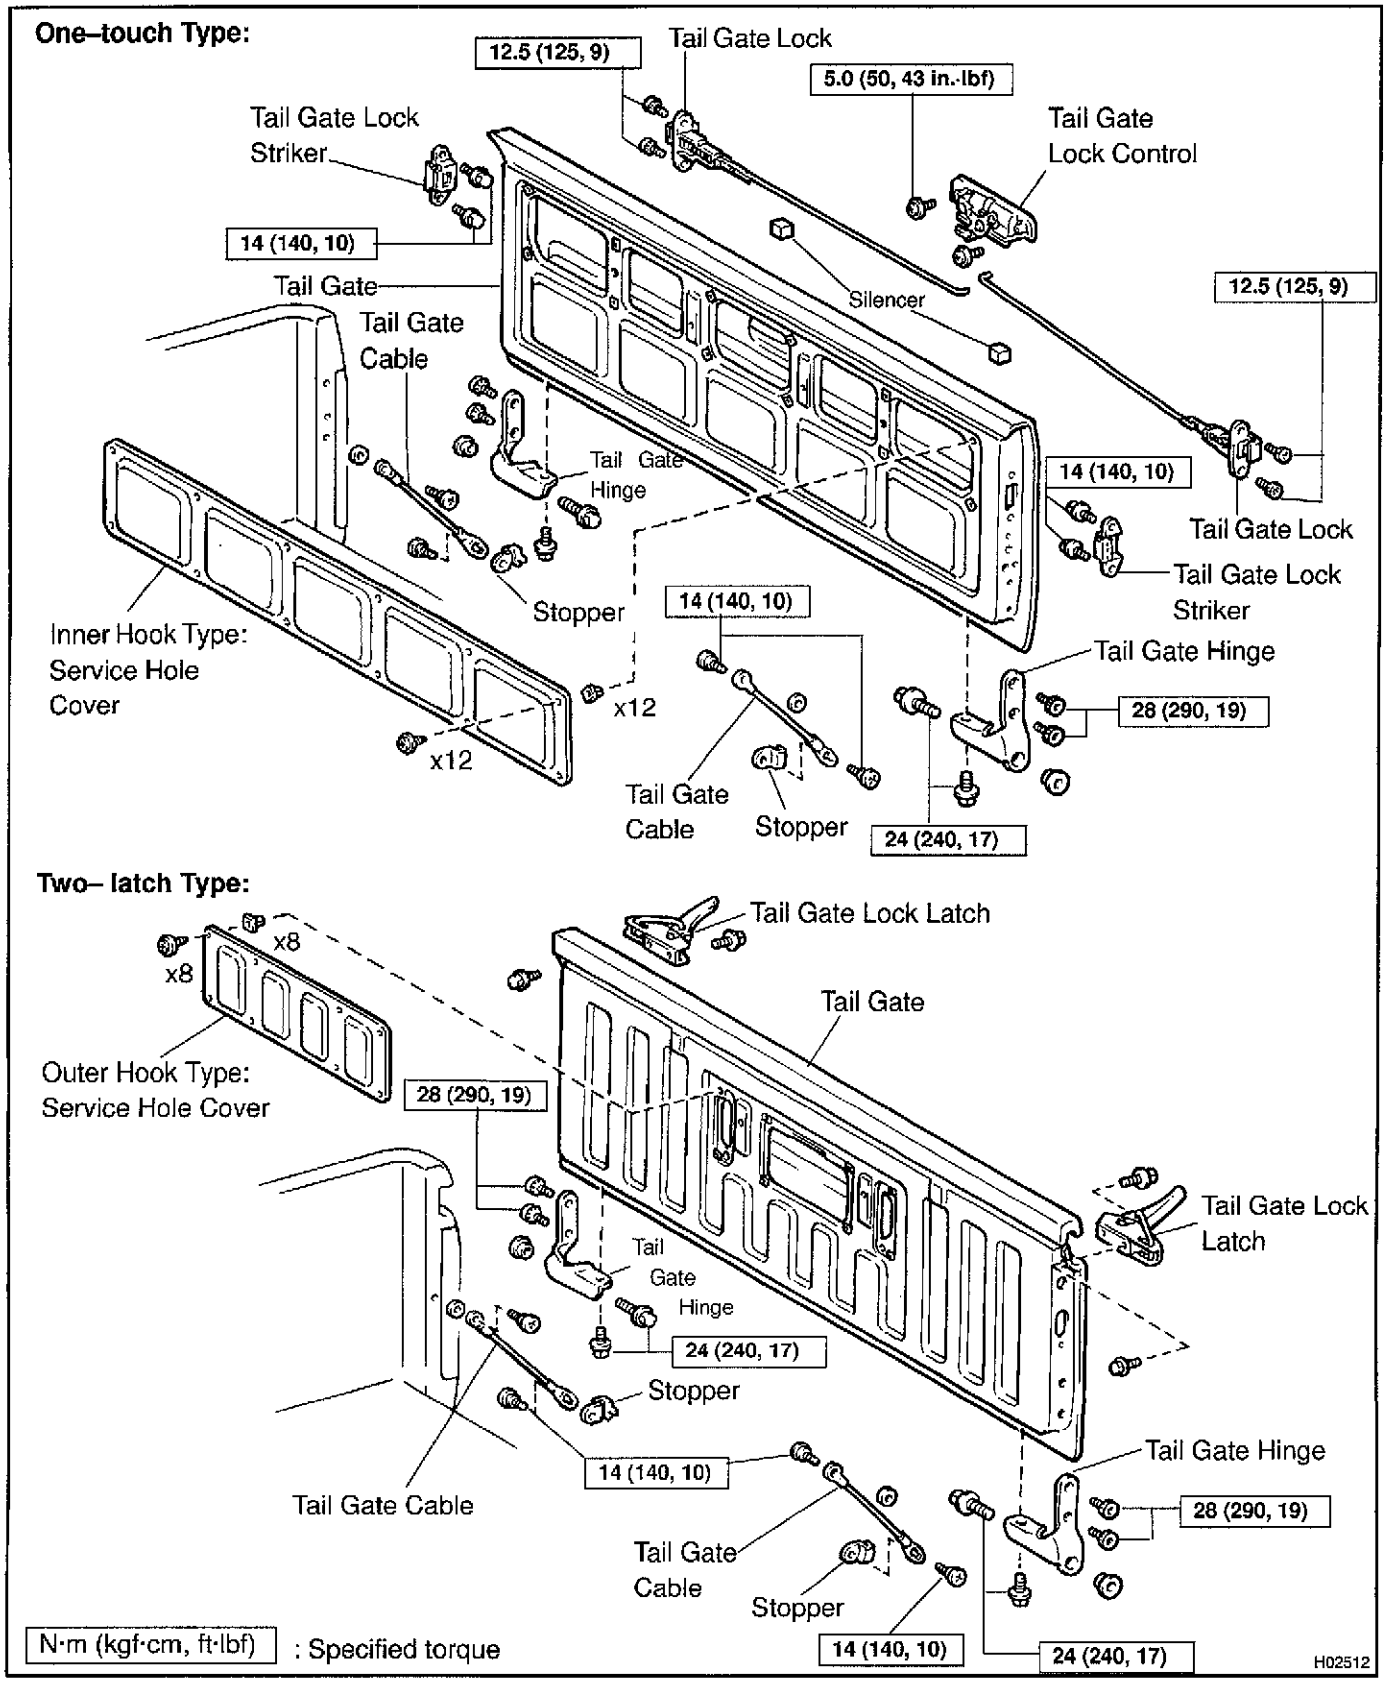


BO0J5–01

REMOVAL

1. REMOVE SERVICE HOLE COVER

(a) Outer Hook Type:
Remove the 8 screws and service hole cover.


(b) Inner Hook Type:
Remove the 12 screws and service hole cover.

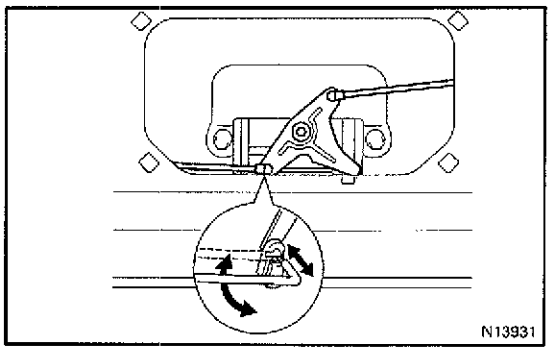

2. One–touch Type:
REMOVE TAIL GATE LOCK


(a) Disconnect the tail gate lock links from the tail gate lock control.

(b) Remove the 4 screws and 2 tail gate locks.

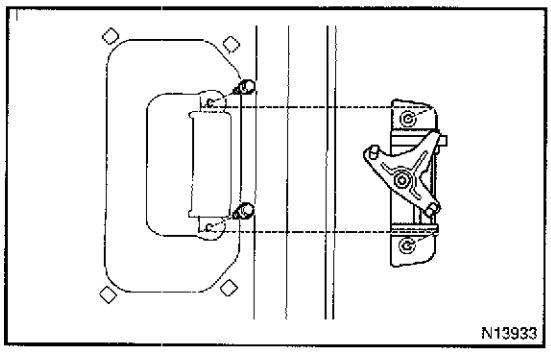

3. One–touch Type:
REMOVE TAIL GATE LOCK CONTROL

Remove the 2 screws and tail gate lock control.

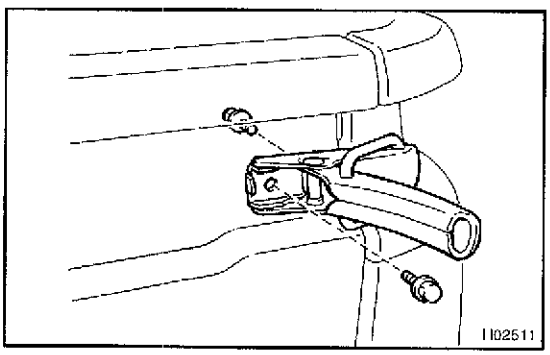

4. Two–latch Type:
REMOVE TAIL GATE LOCK LATCH

Remove the 2 bolts and tail gate lock latches.

HINT:


Do the same for LH and RH.

5. One–touch Type:
REMOVE TAIL GATE LOCK STRIKER

Remove the 2 bolts and tail gate lock striker.

HINT:

Do the same for LH and RH.

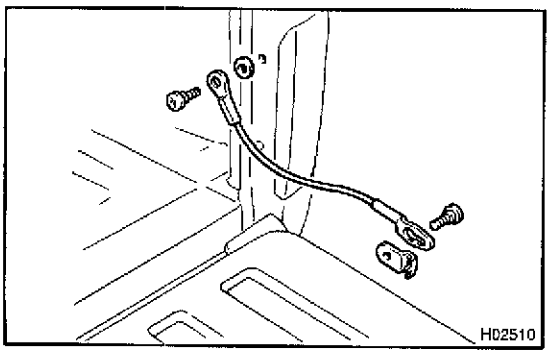

6. REMOVE TAIL GATE CABLE

(a) Remove the deck side shaft, tail gate cable and washer.

HINT:

Do the same for LH and RH.


(b) Remove the gate side shaft, tail gate cable and stopper.

HINT:

Do the same for LH and RH.

7. REMOVE TAIL GATE

(a) Remove the 2 bolts and tail gate.

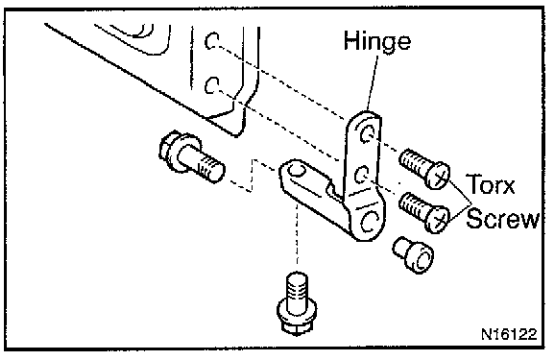


NOTICE:

Be careful not to drop the tail gate.

(b) Remove the 4 torx screws, 2 bolts and 2 tail gate hinges from the tail gate.

BO0J9-01

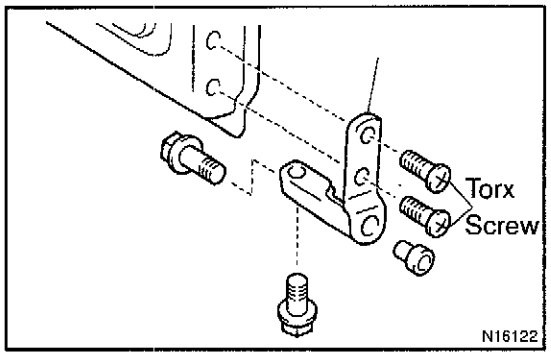

INSTALLATION

1. INSTALL TAIL GATE


(a) Install the tail gate hinges with the 4 torx screws and 2 bolts to the tail gate.

Torque:
torx screw: 28 N·m (290 kgf·cm, 19 ft·lbf)
bolt: 24 N·m (240 kgf·cm, 17 ft·lbf)

(b) Install the tail gate with the 4 bolts to the body.

Torque: 31 N·m (310 kgf·cm, 22 ft·lbf)

NOTICE:
Be careful not to drop the tail gate.

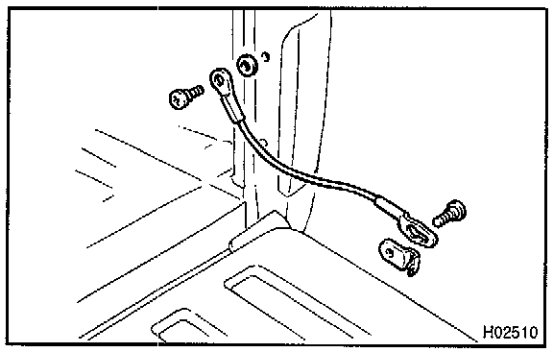

2. INSTALL TAIL GATE CABLE

(a) Install the stopper, tail gate cable and gate side shaft to the tail gate.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)

HINT:
Do the same for LH and RH.

(b) Install the washer, tail gate cable and deck side shaft to the body.

Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)

HINT:
Do the same for LH and RH.

3. One–touch Type:
INSTALL TAIL GATE LOCK STRIKER

Install the tail gate lock striker with the 2 bolts.


Torque: 14 N·m (140 kgf·cm, 10 ft·lbf)

HINT:
Do the same for LH and RH.

4. Two–latch Type:
INSTALL TAIL GATE LOCK LATCH


Install the tail gate lock latch with the 2 bolts.

HINT:
Do the same for LH and RH.

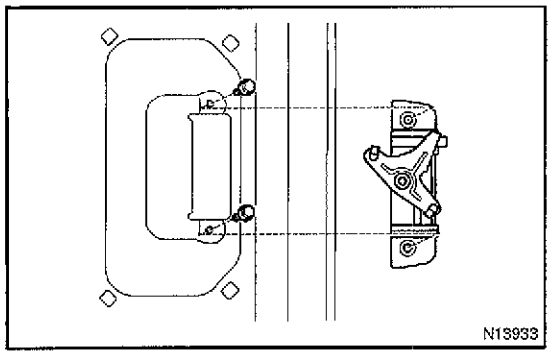

5. One–touch Type:
INSTALL TAIL GATE LOCK CONTROL

Install the tail gate lock control with the 2 screws
Torque: 5.0 N·m (50 kgf·cm, 43 in.·lbf)

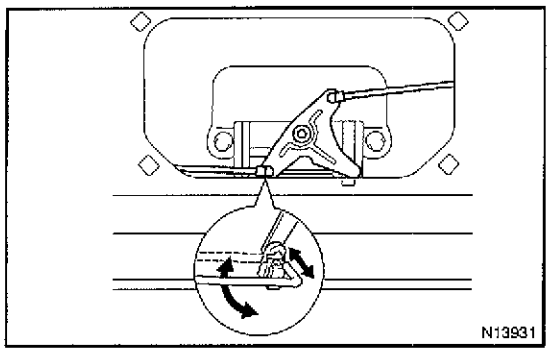

6. One–touch Type:
INSTALL TAIL GATE LOCK

(a) Install the 2 tail gate locks with the 4 screws.
Torque: 12.5 N·m (125 kgf·cm, 9 ft·lbf)

(b) Connect the tail gate lock links to the tail gate lock control.

7. INSTALL SERVICE HOLE COVER

(a) Outer Hook Type:
Install the service hole cover with the 8 screws.

(b) Inner Hook Type:
Install the service hole cover with the 12 screws.