
ROOF HEADLINING (Regular Cab)

COMPONENTS


BO0JD–01

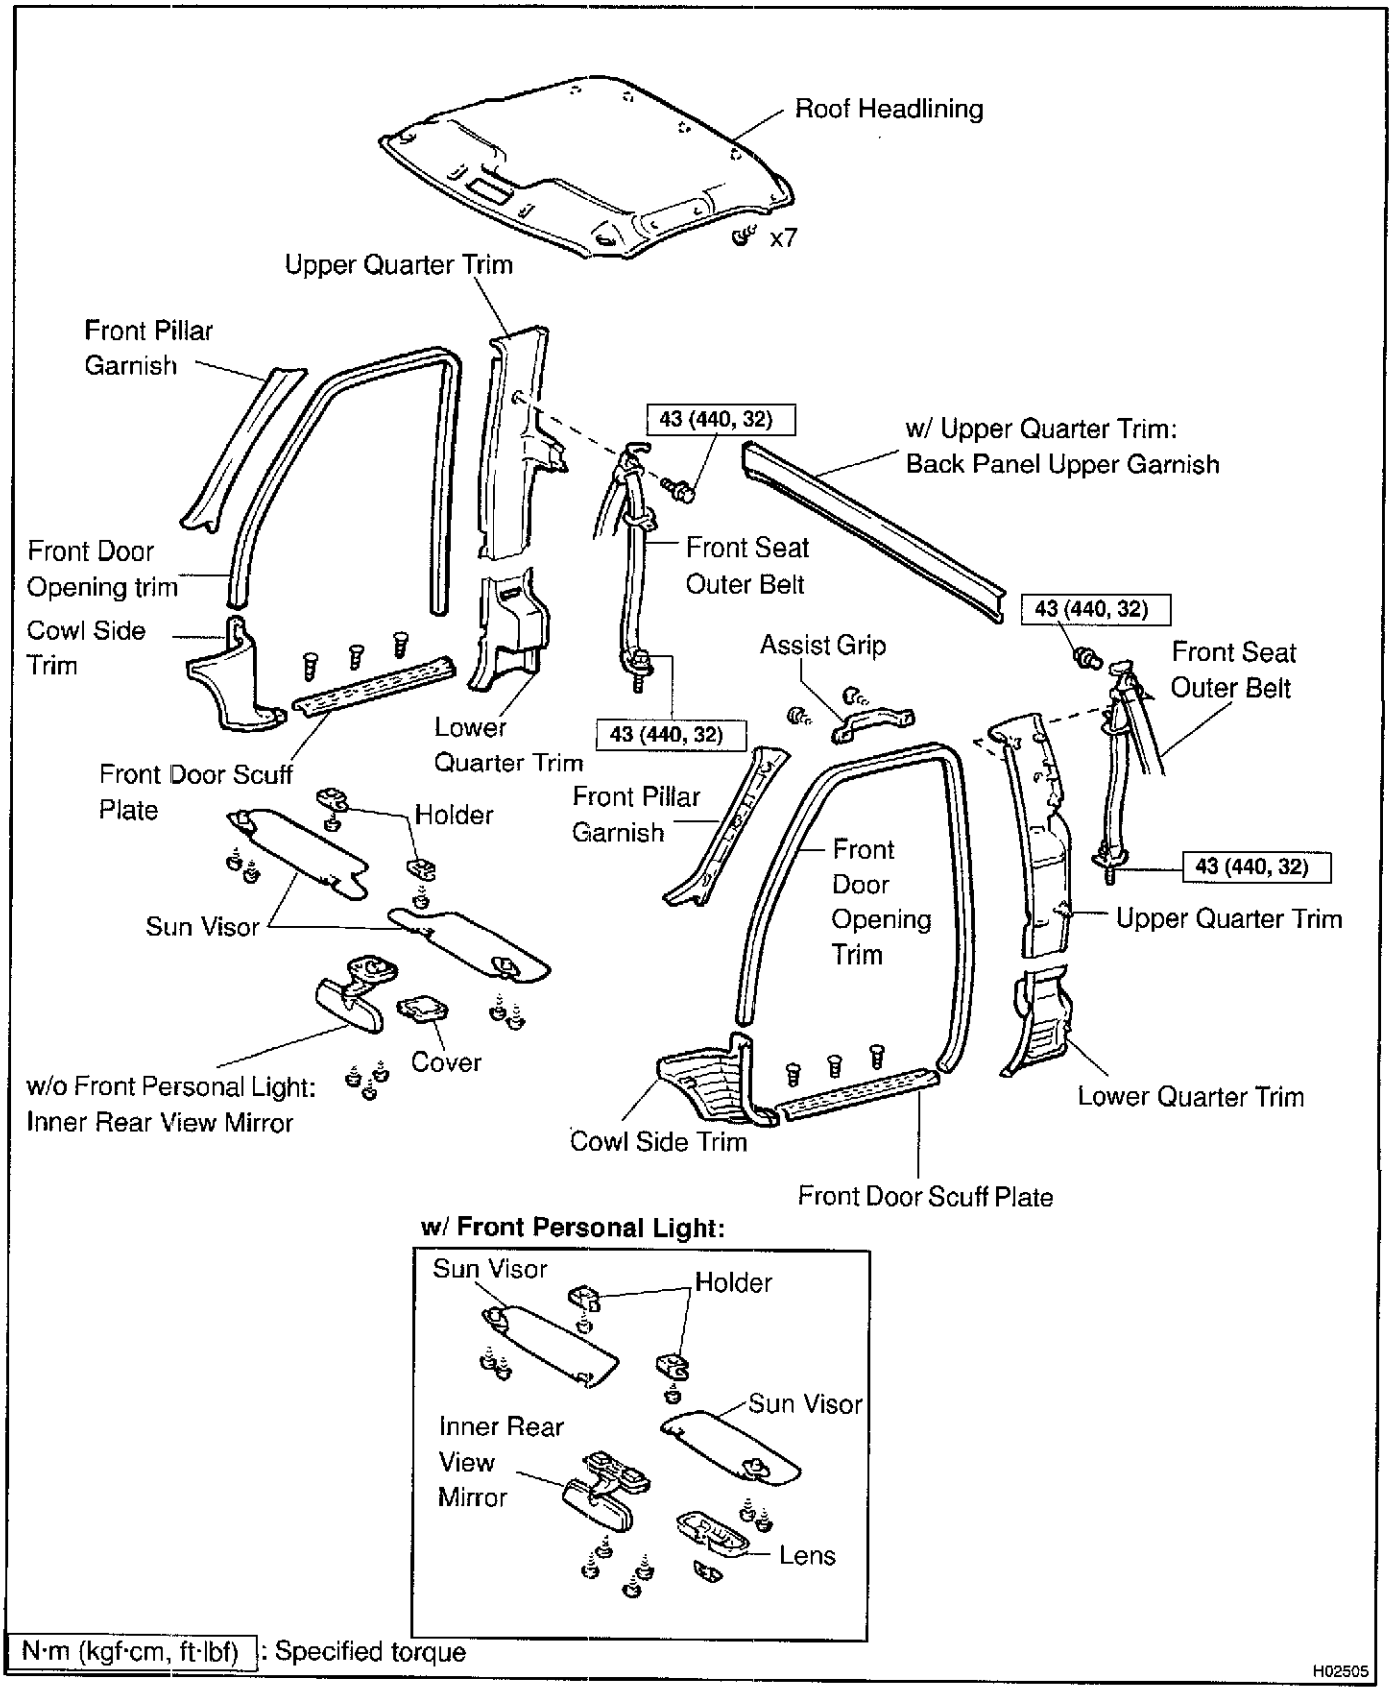

N·m (kgf·cm, ft·lbf) : Specified torque

H02505

BO0JE-01

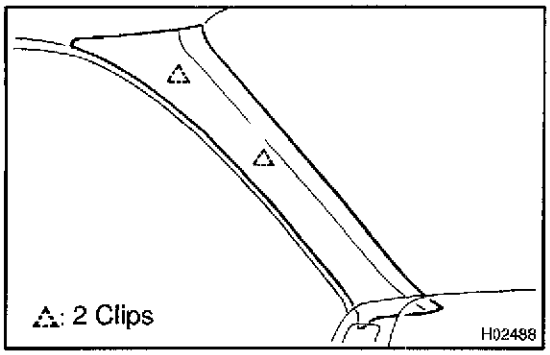


REMOVAL

1. REMOVE THESE PARTS:

(a) Assist grip
(b) Front pillar garnishes
(c) Front door scuff plates
(d) Front door opening trims
(e) Sun visors and holders
(f) w/ Front Personal Light:
Front personal light lens
(g) Inner rear view mirror and cove
(h) w/ Upper Quarter Trim:
Front seat outer belt anchor bolts
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

2. w/ Upper Quarter Trim:
REMOVE BACK PANEL UPPER GARNISH

Insert a screwdriver between the back panel upper garnish and body panel to remove the back panel upper garnish.
HINT:
Tape the screwdriver tip before use.

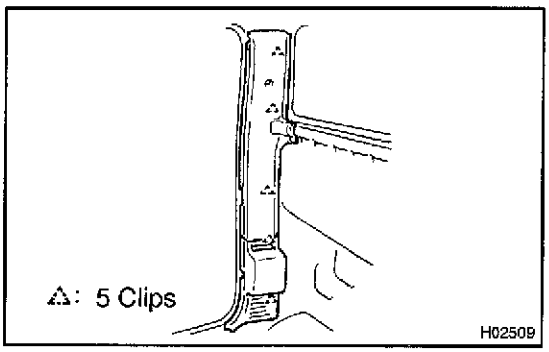

3. w/ Upper Quarter Trim:
REMOVE QUARTER TRIM LH AND RH

(a) Insert a screwdriver between the lower quarter trim and body panel to remove the lower quarter trim.
HINT:
Tape the screwdriver tip before use.
(b) Insert a screwdriver between the upper quarter trim and body panel to remove the upper quarter trim.

4. REMOVE ROOF HEADLINING

Remove the 7 clips and roof headlining.

INSTALLATION

Installation is in the reverse order of removal (See page BO–82).