
ROOF HEADLINING (Extra Cab)


COMPONENTS

BO0JG-01

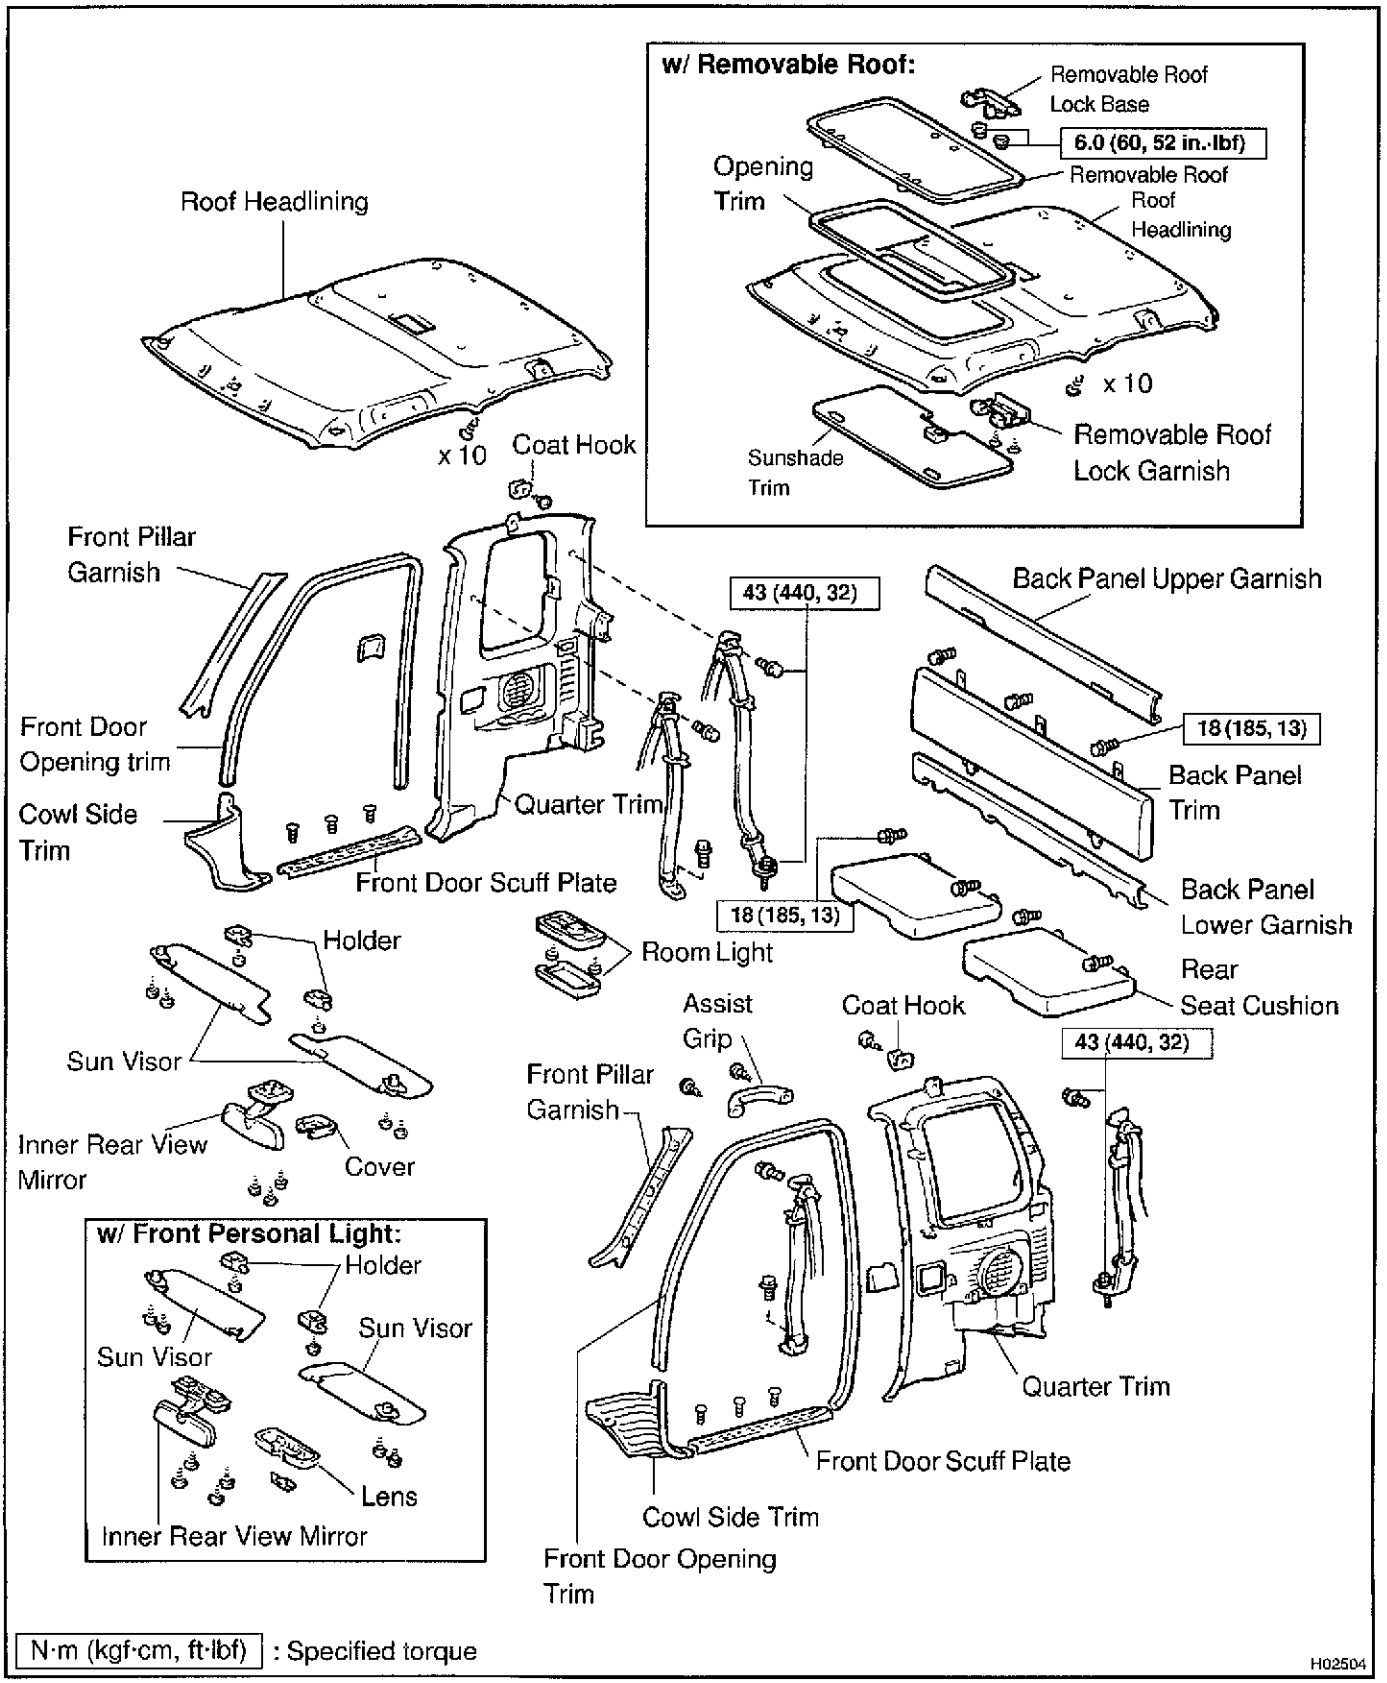

N·m (kgf·cm, ft·lbf) : Specified torque


H02504

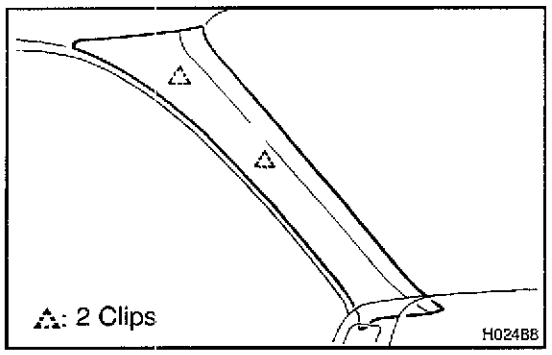

REMOVAL


1. REMOVE THESE PARTS:

(a) Assist grips
(b) Front pillar garnishes
(c) Front door scuff plates
(d) Front door opening trims
(e) Coat hooks
(f) Front seat outer belt anchor bolts
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
(g) Rear seat outer belt anchor bolts
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

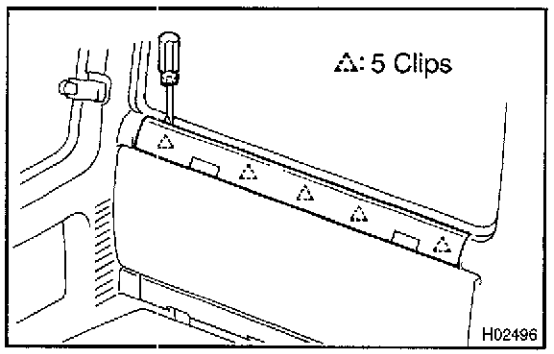


2. REMOVE BACK PANEL UPPER GARNISH

Insert a screwdriver between the back panel upper garnish and body panel to remove the back panel upper garnish.
HINT:
Tape the screwdriver tip before use.

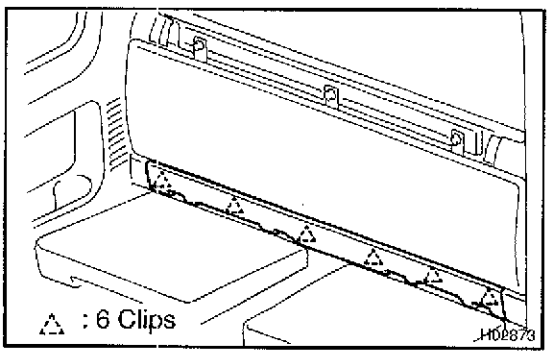

3. REMOVE BACK PANEL LOWER GARNISH

Insert a screwdriver between the back panel lower garnish and body panel to remove the back panel lower garnish.
HINT:
Tape the screwdriver tip before use.

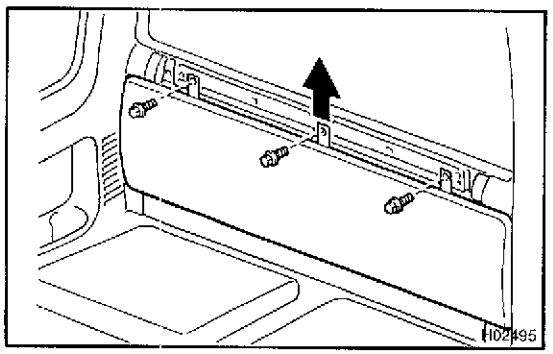


4. REMOVE BACK PANEL TRIM

Remove the 3 bolts and back panel trim.
Torque: 18 N·m(185 kgf·cm, 13 ft·lbf)

5. REMOVE REAR SEAT CUSHION

Remove the 4 bolts and rear seat cusions.
Torque: 18 N·m(185 kgf·cm, 13 ft·lbf)

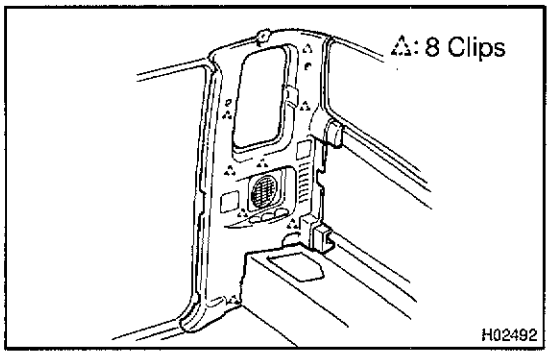


6. REMOVE QUARTER TRIM LH AND RH

Insert a screwdriver between the quarter trim and body panel to remove the quarter trim.

HINT:


Tape the screwdriver tip before use.

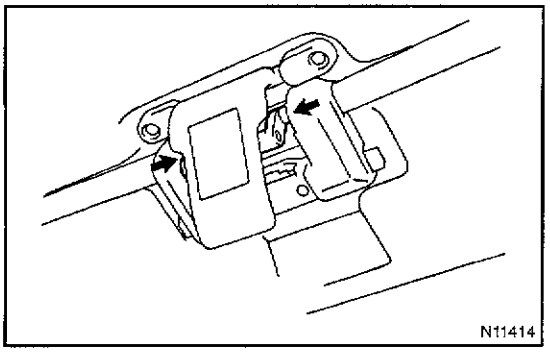

7. w/ Removable Roof:
REMOVE REMOVABLE ROOF

(a) Disconnect the lock handle from the lock base.

(b) Pull the removable roof rearward to remove it.

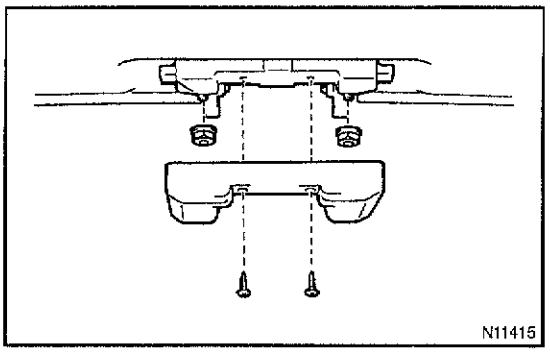

8. w/ Removable Roof:
REMOVE REMOVABLE ROOF LOCK GARNISH

Remove the 2 screws and lock garnish.

9. w/ Removable Roof
REMOVE REMOVABLE ROOF LOCK BASE

Remove the 2 nuts and removable roof lock base.

Torque: 6.0 N·m (60 kgf·cm, 52 in.·lbf)

10. w/ Removable Roof:
REMOVE REMOVABLE ROOF OPENING TRIM

11. REMOVE THESE PARTS:

(a) Inner rear view mirror and cover

(b) Interior light

(c) Sun visors and holders

12. REMOVE ROOF HEADLINING

Remove the 10 clips and roof headlining.

B06JE-01

INSTALLATION

Installation is in the reverse order of removal (See page BO–85).