
ROOF HEADLINING (Double Cab)


COMPONENTS

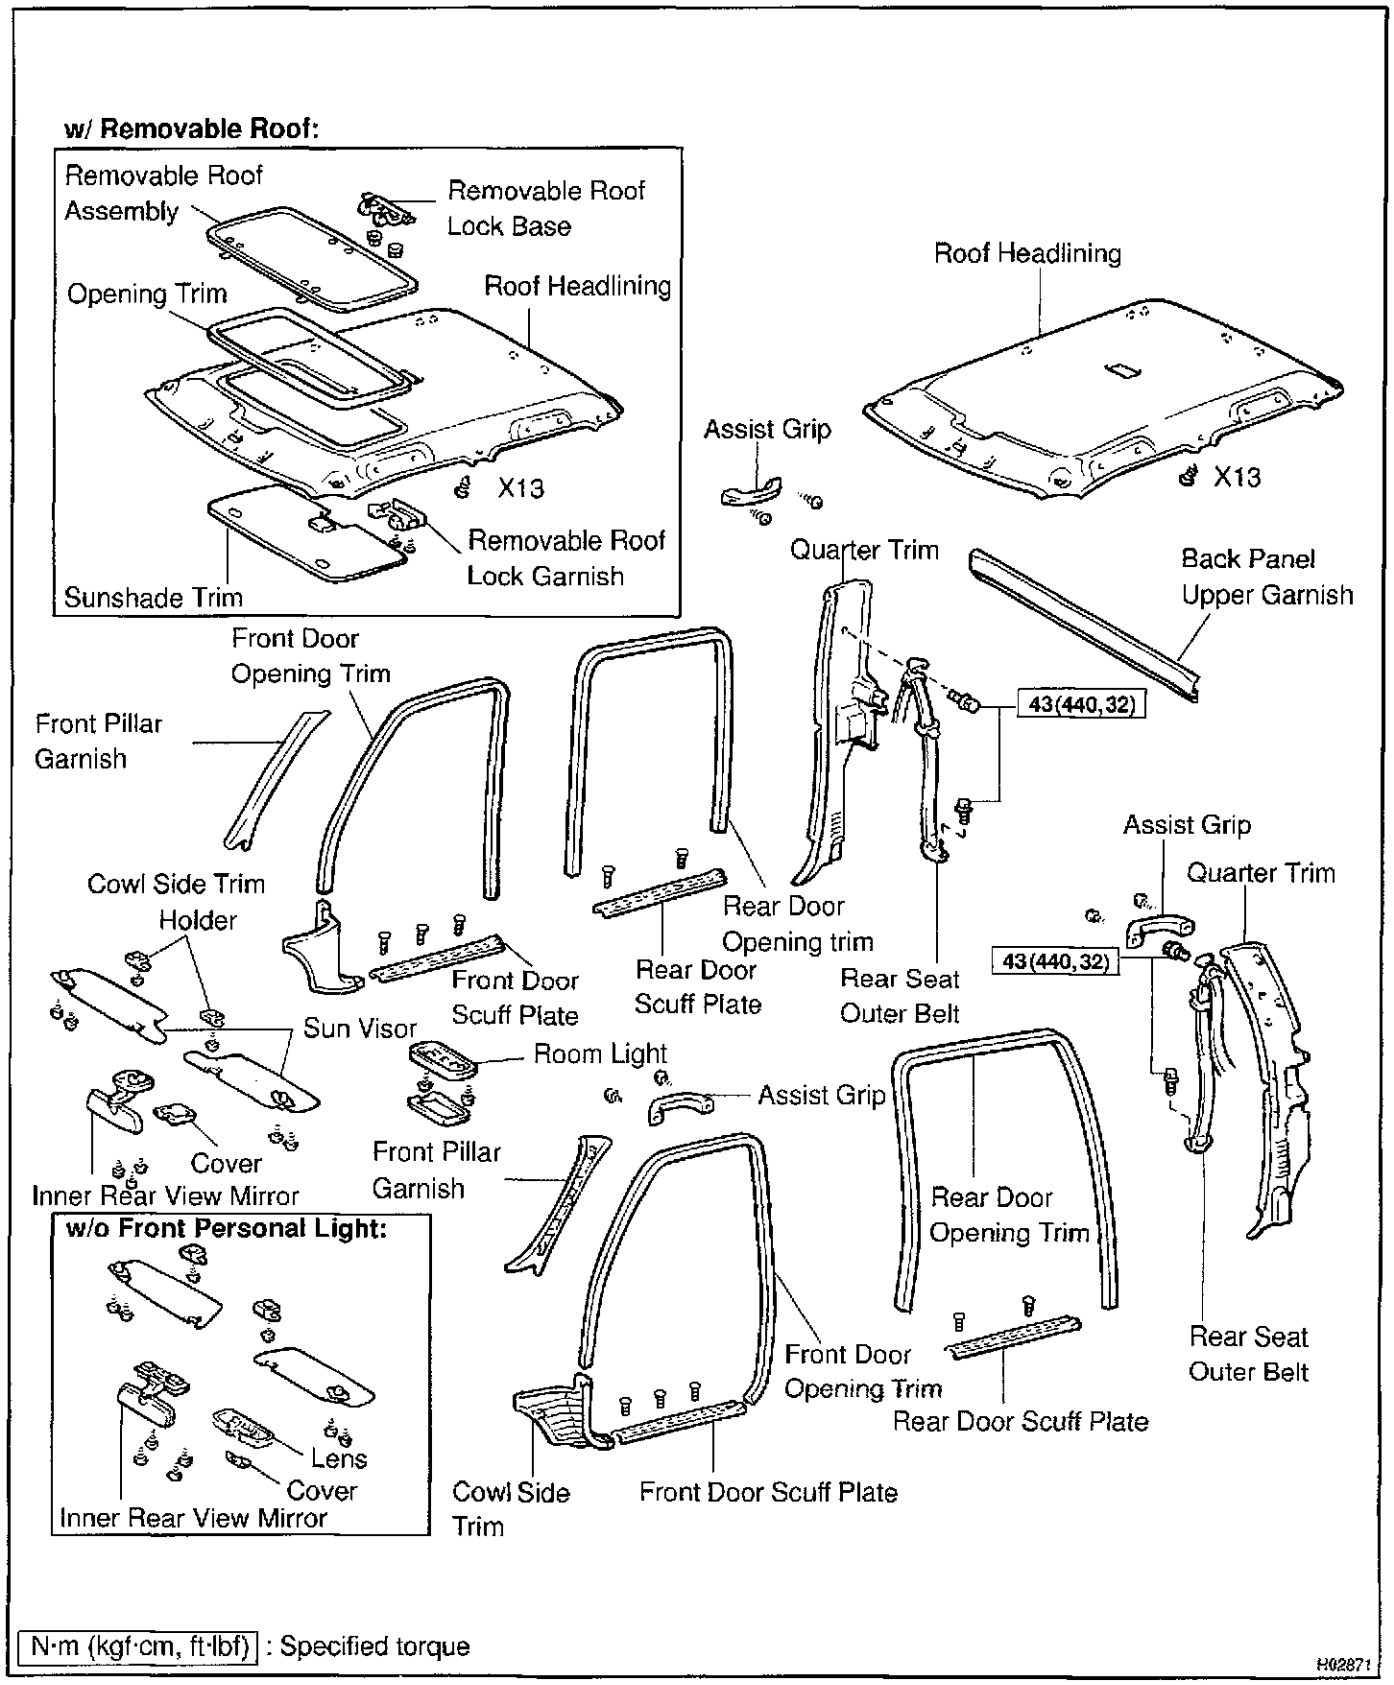

N·m (kgf·cm, ft·lbf) : Specified torque


BO0JK-01

REMOVAL

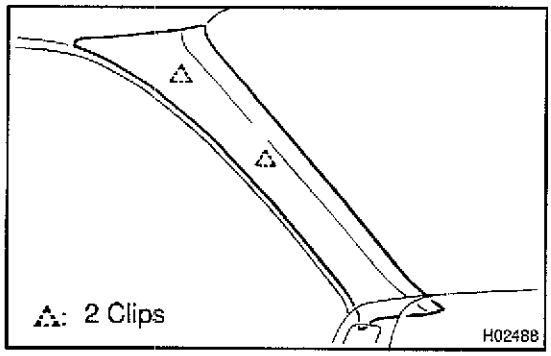


1. **REMOVE THESE PARTS:**
(a) Assist grips
(b) Front pillar garnishes
(c) Front door scuff plates
(d) Front door opening trims
(e) Rear door scuff plates
(f) Rear door opening trims
(g) w/ Front Personal Light:
Front personal light lens
(h) Inner rear view mirror and cover
(i) Room light
2. **w/ Quarter Trim:**
REMOVE REAR SEAT
(See page BO–120)
3. **w/ Quarter Trim:**
REMOVE BACK PANEL UPPER GARNISH

Insert a screwdriver between the back panel upper garnish and body panel to remove the back panel upper garnish.
HINT:
Tape the screwdriver tip before use.

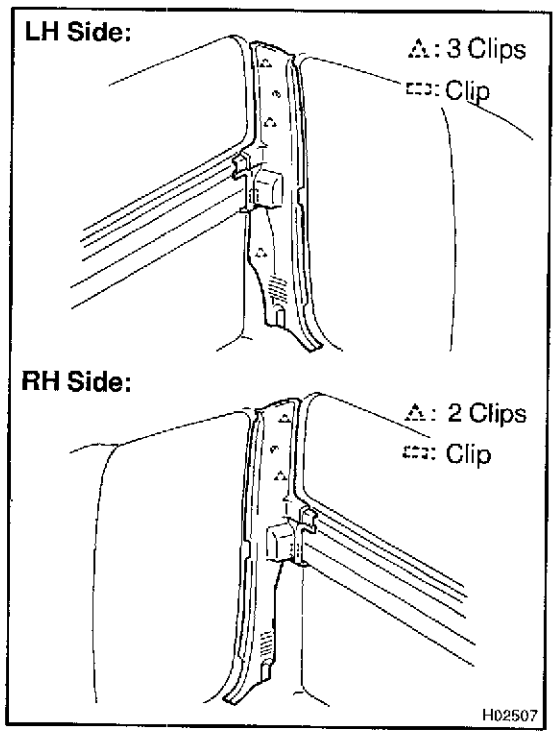


4. **w/ Quarter Trim:**
REMOVE QUARTER TRIM LH AND RH
(a) Remove the rear seat outer belt anchor bolts.
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
(b) Remove the clip.
(c) Insert a screwdriver between the quarter trim and body panel to remove the quarter trim.

HINT:
Tape the screwdriver tip before use.

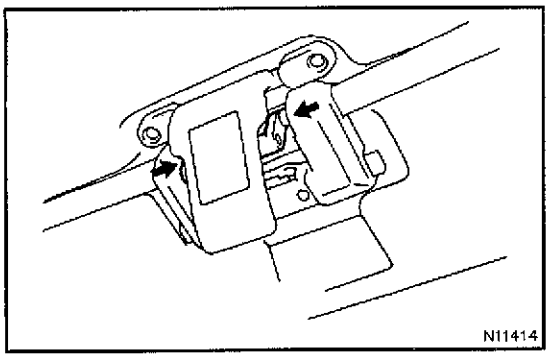

5. w/ Removable Roof:
REMOVE REMOVABLE ROOF

(a) Disconnect the lock handle from the lock base.
(b) Pull the removable roof rearward to remove it.

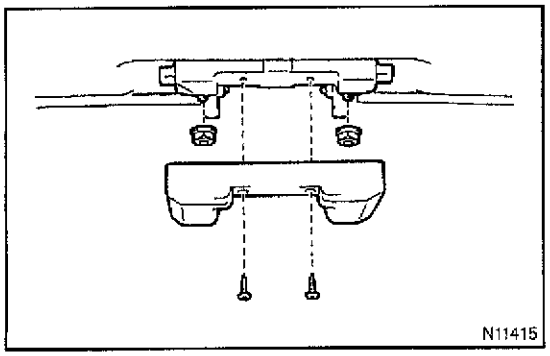

6. w/ Removable Roof:
REMOVE REMOVABLE ROOF LOCK GARNISH

Remove the 2 screws and lock garnish.

7. w/ Removable Roof:
REMOVE REMOVABLE ROOF LOCK BASE

Remove the 2 nuts and removable roof lock base.

Torque: 6.0 N·m (60 kgf·cm, 52 in.·lbf)

8. w/ Removable Roof:
REMOVE REMOVABLE ROOF OPENING TRIM

9. REMOVE ROOF HEADLINING

Remove the 13 clips and roof headlining.

INSTALLATION

Installation is in the reverse order of removal (See page BO–89).