
SIDE STEP


COMPONENTS

BC0JA-01

Regular Cab:

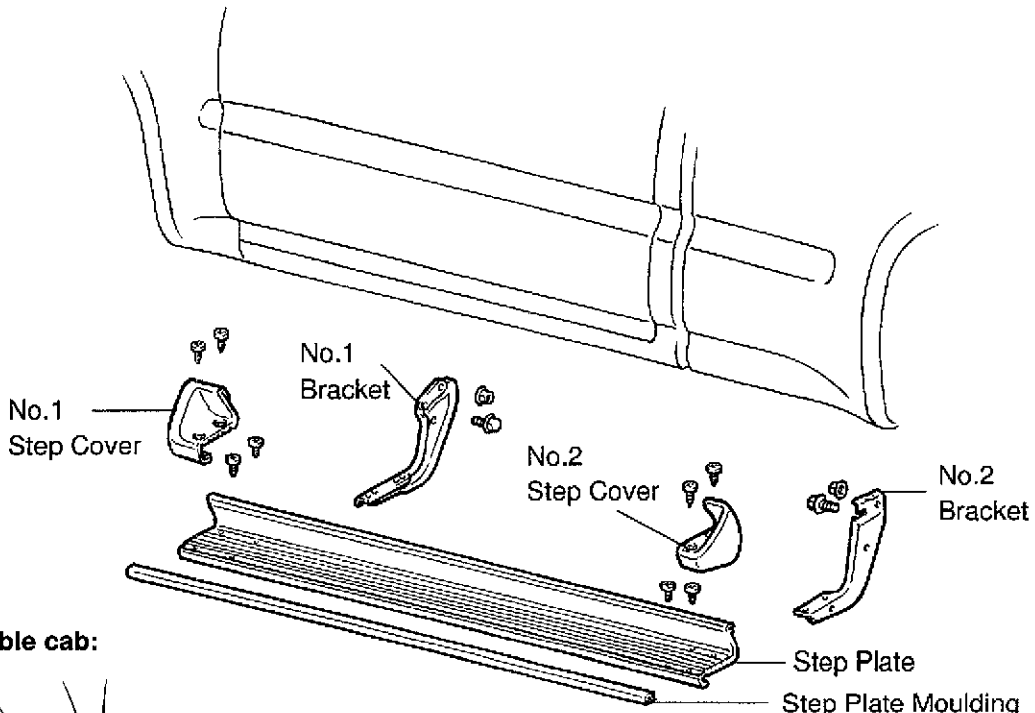

Extra and Double cab:

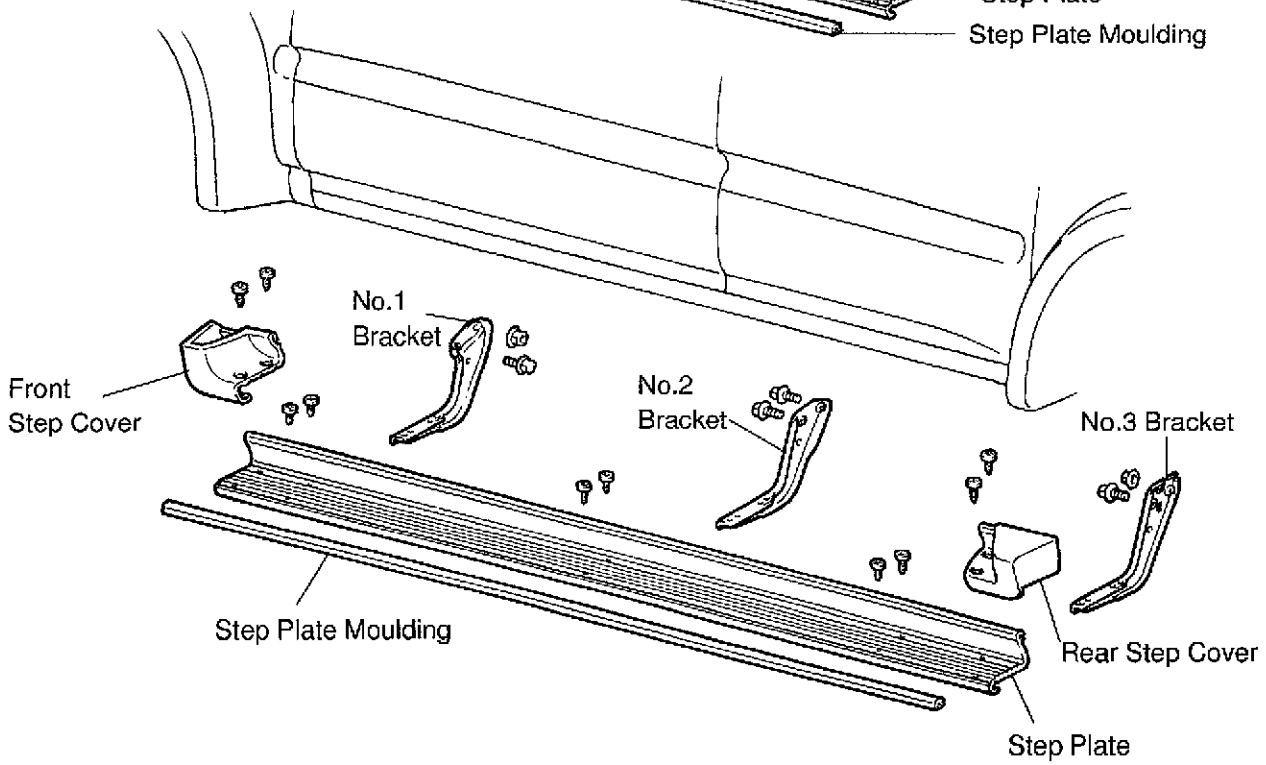

H02523

BO0JB-01

REMOVAL

1. REMOVE SIDE STEP ASSEMBLY

(a) Regular Cab:
Remove the 2 bolts, 2 nuts and side step assembly.

(b) Extra and Double Cab:
Remove the 4 bolts, 2 nuts and side step assembly.

2. REMOVE THESE PARTS:

(a) No.1 bracket

(b) No.2 bracket

(c) Extra and Double Cab:
No.3 bracket

3. Regular Cab:
REMOVE No.1 AND No.2 STEP COVER

(a) Remove the 2 screws and No.1 step cover.

(b) Remove the 2 screws and No.2 step cover.

4. Extra and Double Cab:
REMOVE FRONT AND REAR STEP COVER

(a) Remove the 2 screws and front step cover.

(b) Remove the 2 screws and rear step cover.

5. REMOVE STEP PLATE MOULDING

BO0JC-01

INSTALLATION

Installation is in the reverse order of removal (See page BO–93).