
REAR SEAT (Bench Type)

COMPONENTS

B00KA–01

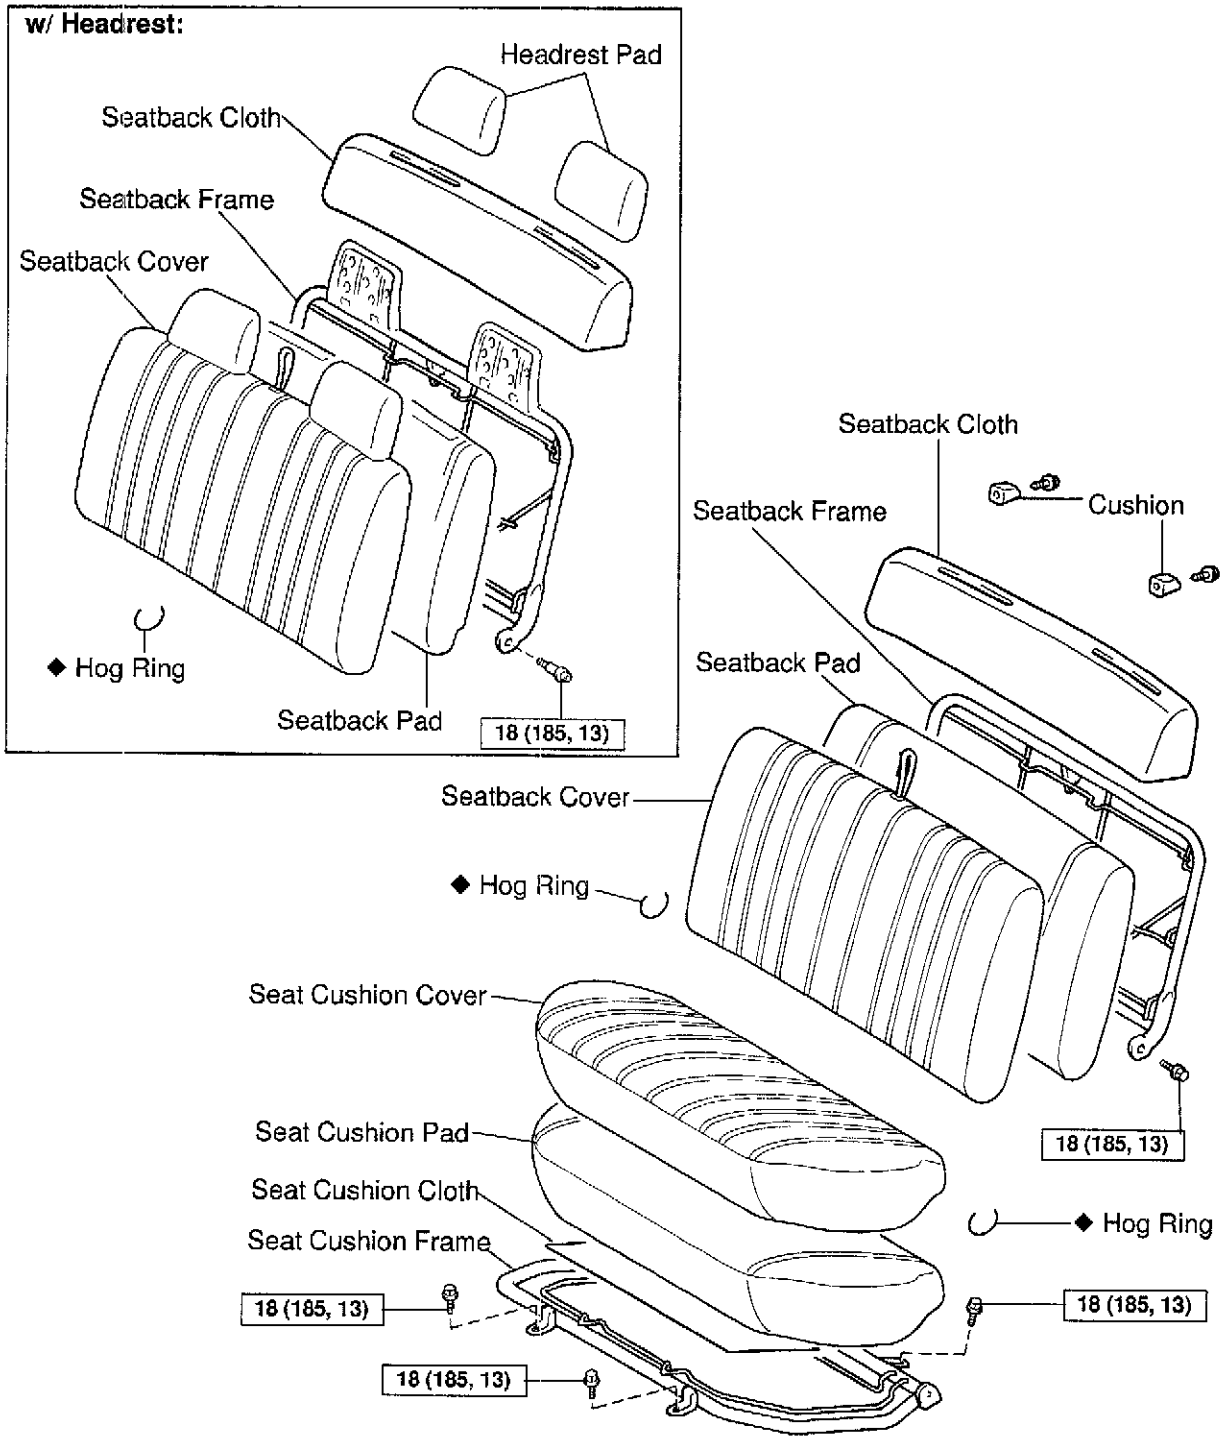

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

H02557

REMOVAL

REMOVE REAR SEAT

(a) Release the seatback lock.
(b) Remove the 4 bolts.
(c) Remove the rear seat.

NOTICE:

Be careful not to damage the body.

BO0KC–01

DISASSEMBLY

1. REMOVE SEATBACK ASSEMBLY

Remove the 2 bolts and seatback assembly.

2. REMOVE SESATBACK COVER

(a) Remove the 2 screws and cushions.

(b) w/ Headrest:
Remove the hog rings, then remove the seatback cover, pad, cloth and headrest pads frim the seatback frame.

(c) w/o Headrest:
Remove the hog rings, then remove the seatback cover, pad and cloth frrom the seatback frame.

3. REMOVE SEAT CUSHION COVER

Remove the hog rings, then remove hte seat cushion cover, pad and cloth from the seat cushion frame.

BO0KD-01

REASSEMBLY

1. INSTALL SEAT CUSHION COVER

Install the seat cushion cloth, pad and cover to the seat cushion frame, then install new hog rings.

2. INSTALL SEATBACK COVER

(a) w/ Headrest:

Install the seatback cloth, pad, cover and headrest pad to the seatback frame.

(b) w/o Headrest:

Install the seatback cloth, pad and cover to the seatback frame, then install new hog rings.

HINT:

When installing the hog rings, take care to prevent wrinkles as least as possible.

3. INSTALL SEATBACK ASSEMBLY

Install the seatback assembly with the 2 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

BO0KE-01

INSTALLATION

INSTALL REAR SEAT

(a) Mount the seat to the vehicle.

(b) Tighten the bolts on the front side temporarily, from the bolt on the left side tighten them completely.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(c) Tighten the bolts on the rear side.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)