
REAR SEAT (Jump Type)


COMPONENTS

BO0KF-01

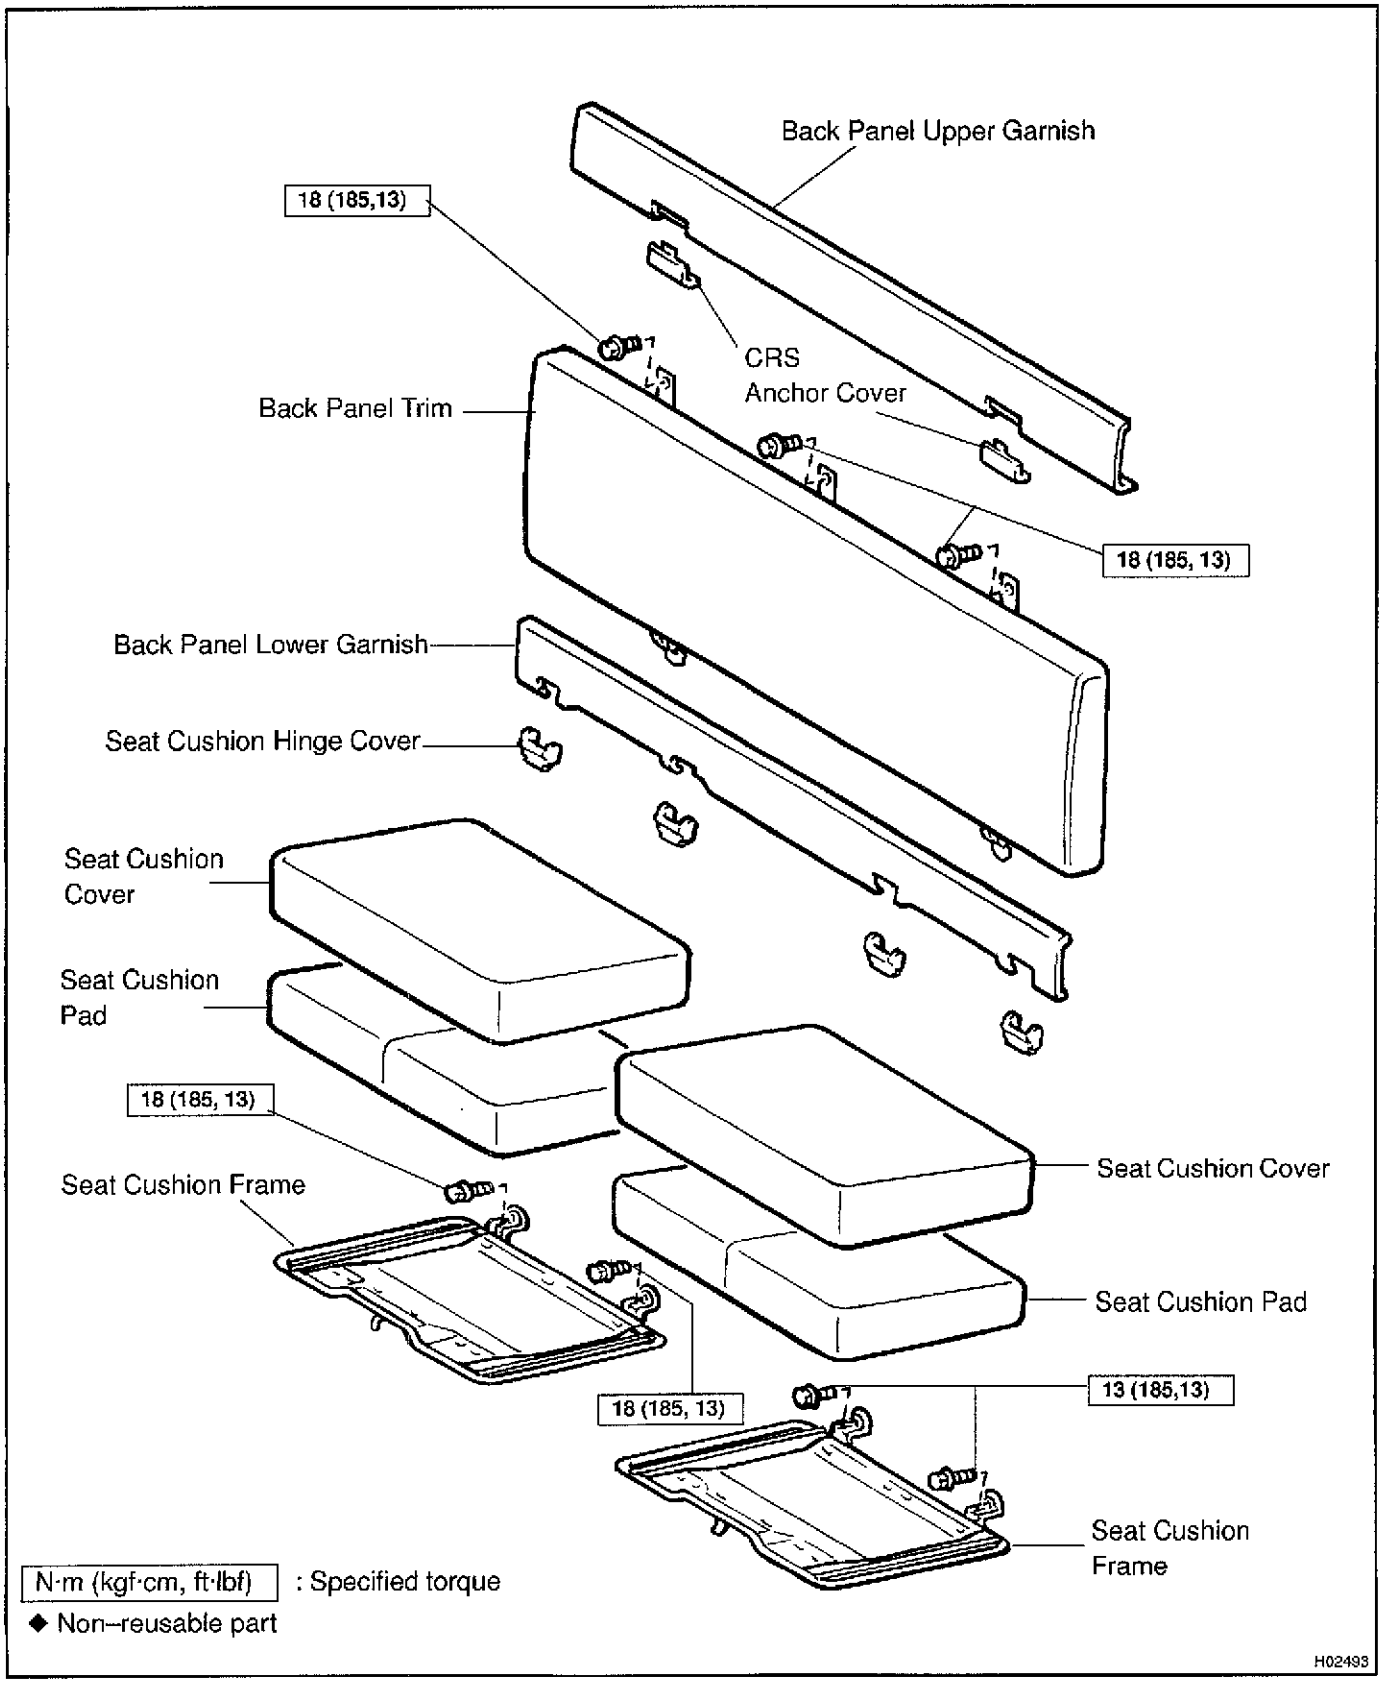

BO0K3-01

REMOVAL

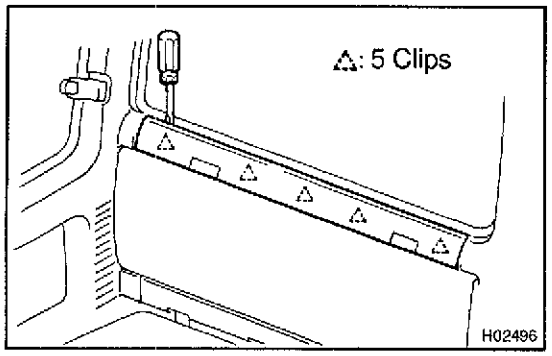


1. REMOVE BACK PANEL UPPER GARNISH

(a) Insert a screwdriver between the back panel upper garnish and body panel to remove the back panel upper garnish.

HINT:

Tape the screwdriver tip before use.

(b) Remove the CRS anchor covers from the back panel upper garnish.

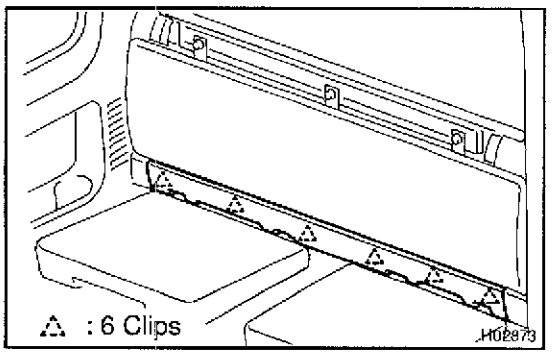


2. REMOVE BACK PANEL LOWER GARNISH

Insert a screwdriver between the back panel lower garnish and body panel to remove the back panel lower garnish.

HINT:

Tape the screwdriver tip before use.

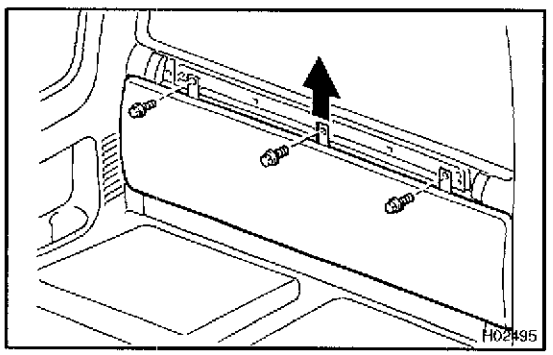

3. REMOVE BACK PANEL TRIM

Remove the 3 bolts and back panel trim.

4. REMOVE REAR SEAT CUSHIONS

Remove the 4 bolts and rear seat cushions.

BO0KH-01

DISASSEMBLY

1. REMOVE SEAT CUSHION HINGE COVERS

2. REMOVE SEAT CUSHION COVER

Release the hooks, then remove the seat cushion cover.

3. REMOVE SEAT CUSHION FRAME

Remove the seat cushion frame from the seat cushion pad.

BO0KI-01

REASSEMBLY

1. INSTALL SEAT CUSHION FRAME

Install the seat cushion frame to the seat cushion pad.

2. INSTALL SEAT CUSHION COVER

Install the seat cushion cover to the seat cushion frame with pad.

3. INSTALL SEAT CUSHION HINGE COVERS


9O0KJ-01

INSTALLATION

1. INSTALL REAR SEAT CUSHIONS

Install the rear seat cushions with the 4 bolts.


Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

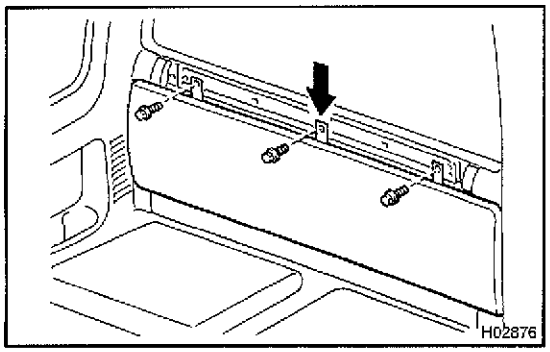

2. INSTALL BACK PANEL TRIM


Install the back panel trim with the 3 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

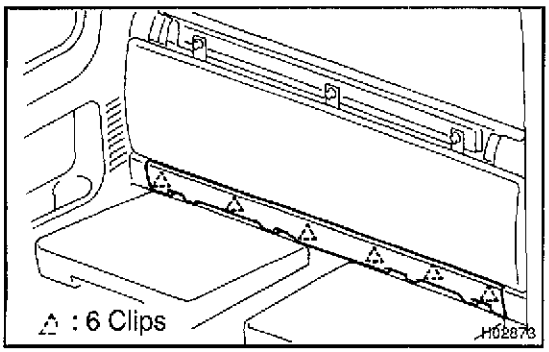

3. INSTALL BACK PANEL LOWER GARNISH

Install the back panel lower garnish to the body panel.

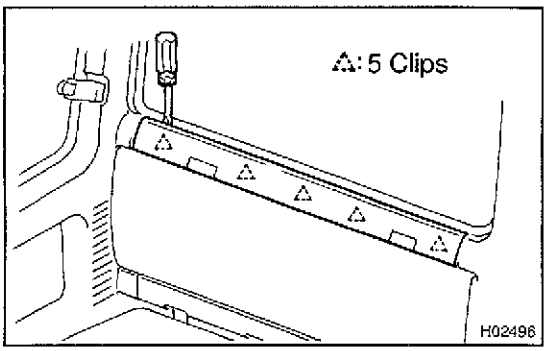

4. INSTALL BACK PANEL UPPER GARNISH

(a) Install the CRS anchor covers to the back panel upper garnish.

(b) Install the back panel upper garnish to the body panel.