
FUEL TANK AND LINE

COMPONENTS

BO0KP-01


Regular Cab (Short Type):

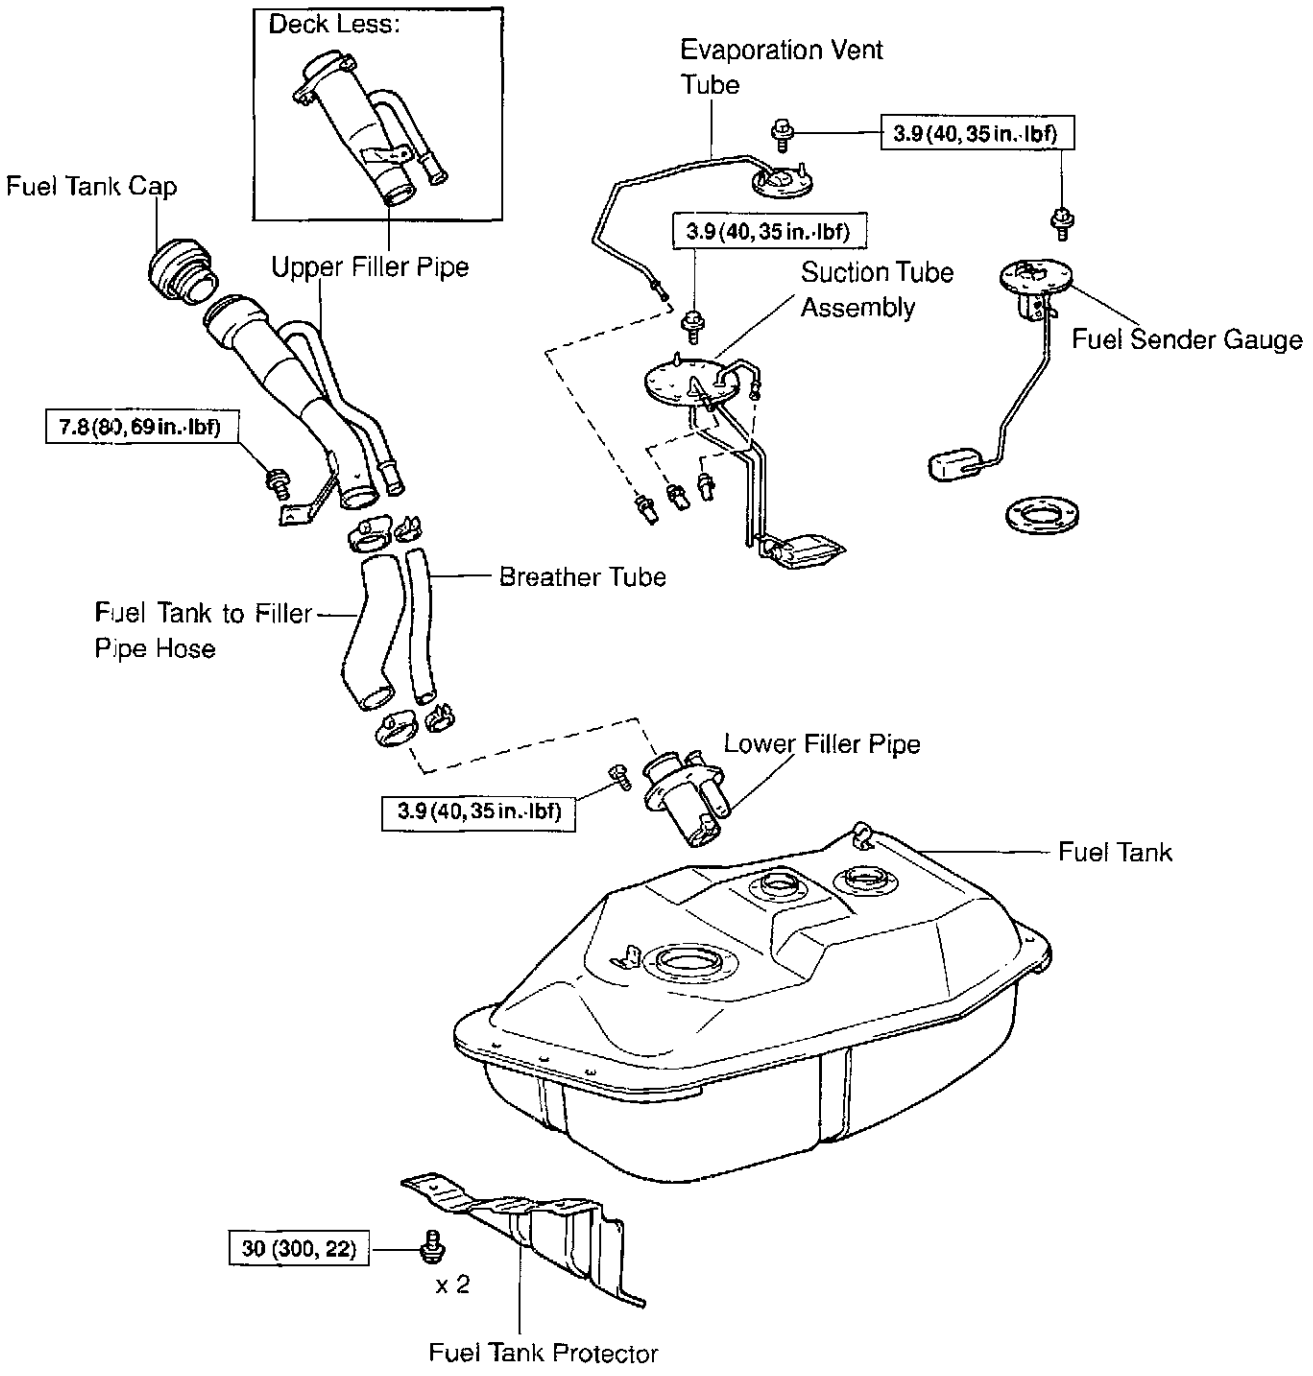

N·m (kgf·cm, ft·lbf) : Specified torque

H02787


Regular and Extra Cab:

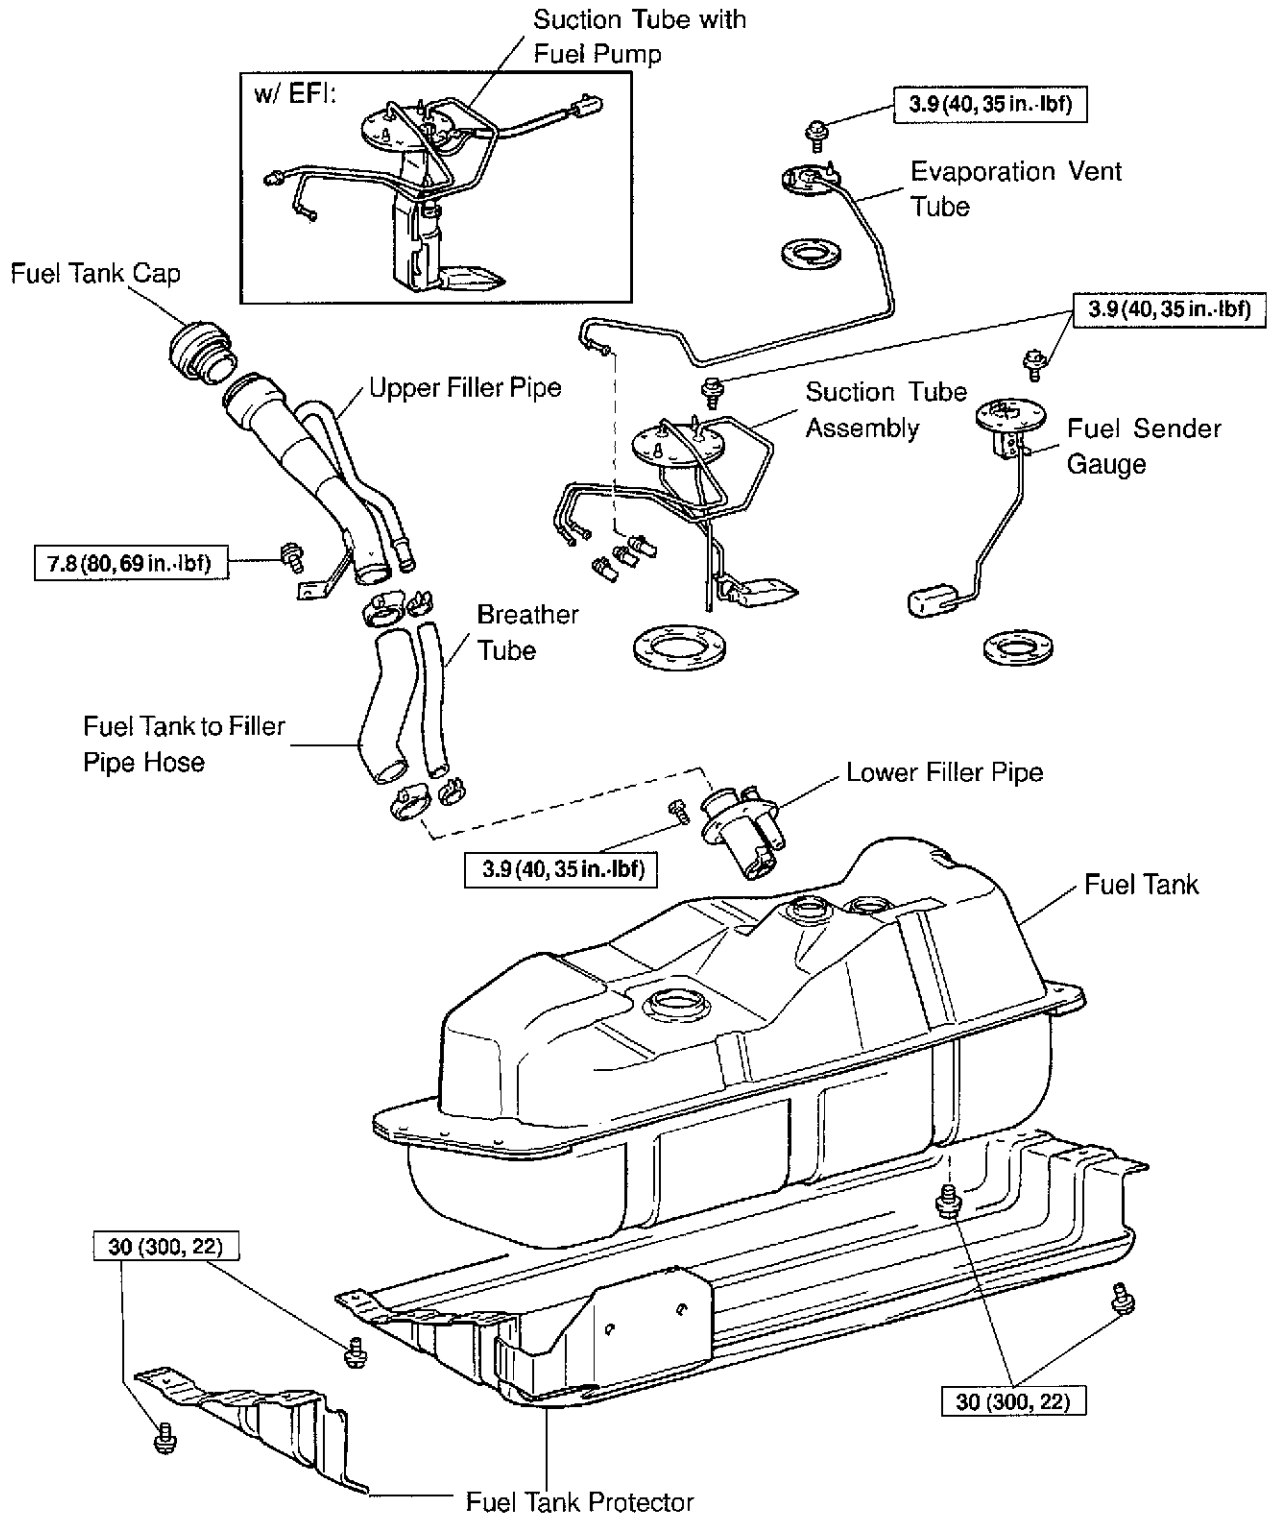

N·m (kgf·cm, ft·lbf) : Specified torque


H02788


Double Cab:

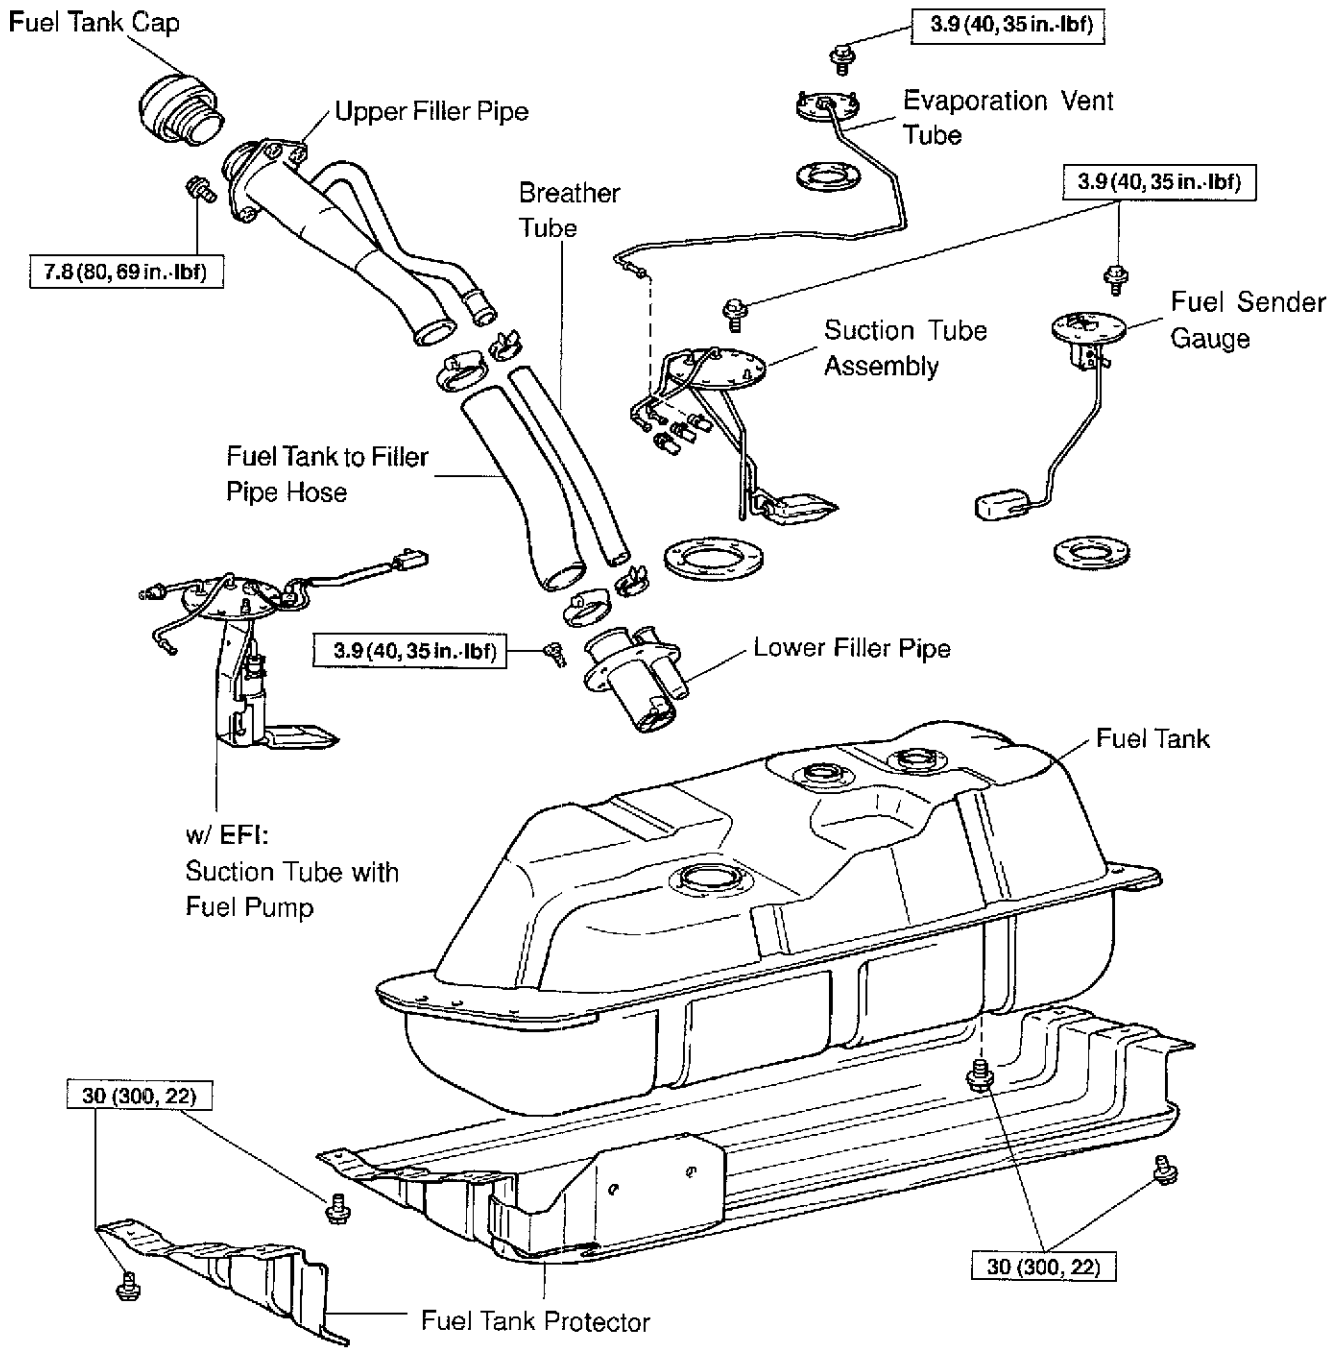



N·m (kgf·cm, ft·lbf) : Specified torque

H02789

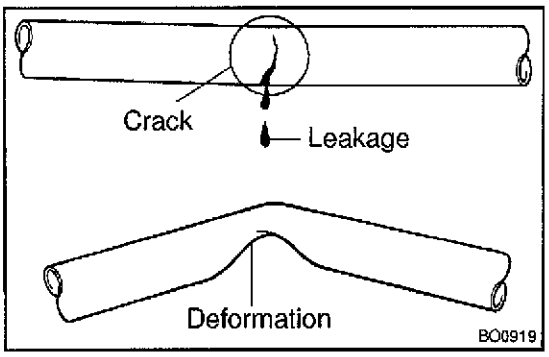

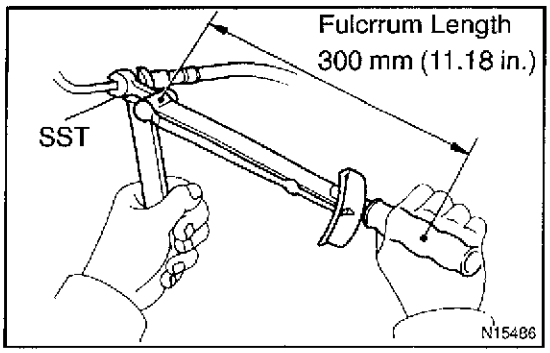

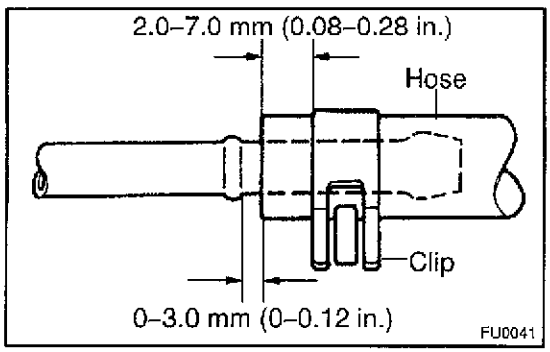

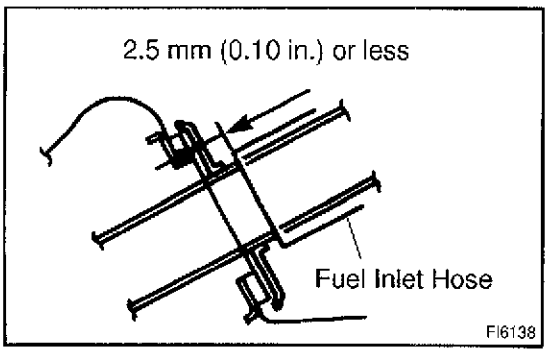

BO0KS-01

INSPECTION

NOTICE:

- **Always use new gaskets when replacing the fuel tank or components parts.**
- **Apply the proper torque to all parts to be tightened.**

INSPECT FUEL LINES AND CONNECTIONS

(a) Check the fuel lines for cracks or leakage, and all connections for deformation.

(b) Check the fuel tank vapor vent system hoses and connections for looseness, sharp bends or damage.

(c) Check the fuel tank for deformation, cracks, fuel leakage or tank band looseness.

(d) Check the inlet pipe for damage or fuel leakage.

(e) Hose and tube connections are as shown in the illustration.

(f) Make sure that the hose clamps do not interfere with the tank, tubes, hoses and other parts.

If a problem is found, repair or replace the parts as necessary.